







User and Maintenance Manual RW3

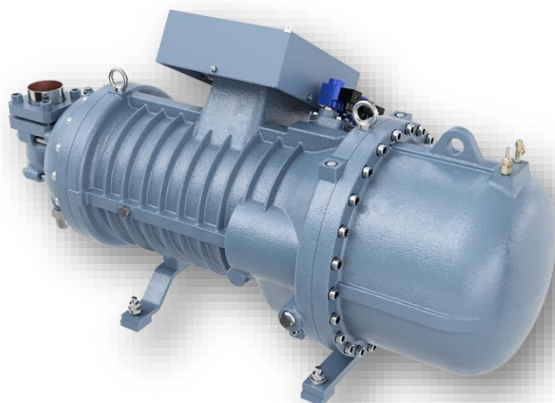

MUM005 rev. 00
EN (translation from IT)

Sommarario

1	 Safety instructions	6
1.1	 Importance of the manual.....	6
1.2	Responsibility limitations	6
1.3	 Symbols on the manual.....	7
1.4	 Safety signals.....	8
1.5	Machine switched-off status.....	8
1.6	Responsibilities of the operator	9
1.7	Misuse	9
1.8	Copyright	10
1.9	 Declaration of Incorporation	10
2	General	11
2.1	Identification.....	11
2.2	Intended Use	11
2.3	Directives and Standards Reference	12
2.4	Residual risks	13
2.5	Identification of dangerous areas.....	13
2.6	Introduction	13
2.7	The compression process	15
2.8	The rotors.....	16
2.9	The built-in volumetric ratio	17
3	Lubrication	19
3.1	Oil circuit.....	19
3.2	Oil flow-rate	22
3.3	Lubricants.....	23
3.3.1	Standard lubricants: operating conditions range	24
3.4	Oil separator	24
3.5	Oil filter	25
3.6	Oil heater	26
3.7	Oil level	27
3.8	Lubrication monitoring.....	27
3.8.1	Oil temperature monitoring.....	27
3.8.2	Static pressure control	27

3.8.3	Flow control	30
4	Capacity control.....	31
4.1	Operating principle and oil control circuit	31
4.1.1	Layout and identification of solenoid valves	32
4.2	STEP capacity control	32
4.2.1	Minimum capacity step (compressor step for startup and stop).....	33
4.2.2	50% CAPACITY	34
4.2.3	75% CAPACITY	34
4.2.4	100% CAPACITY.....	35
4.2.5	Control sequence: step configuration.....	35
4.3	Infinity capacity control: STEPLESS.....	37
4.3.1	Control sequence: stepless configuration.....	38
4.4	Variable speed control	39
4.5	Procedure for starting and stopping the compressor.....	41
4.6	Operating limits at part load	42
5	Components	44
5.1	Suction filter (standard).....	44
5.2	Safety valve (standard).....	45
5.3	Check valve (standard).....	45
5.4	Rubber vibration damper (standard).....	46
5.5	Oil line components.....	48
6	Electrical motor.....	51
6.1	General.....	51
6.2	Protection devices	54
6.2.1	Motor thermistors (standard).....	54
6.2.2	INT 69 B2.....	54
6.2.3	INT 69 SNY (optional).....	56
6.2.4	Lubricant/Discharge temperature probe (optional).....	60
6.3	Power supply	61
6.4	Selection of electrical components	61
7	Data.....	62
7.1	Electrical data	62
7.2	Technical data	64
8	Dimensional drawings and packaging	65
8.1	Compressors	65
8.2	Oil separators	70

8.3	Oil separators "ECO" version	71
9	Transport, Handling and Storage	72
9.1	Receiving and unpacking	72
9.2	Package dimensions:	72
9.3	Transport & Handling	73
9.4	Compressor lifting	74
10	Performance data for the RW3 series compressors.....	75
11	Application range	76
11.1	General.....	76
12	Additional cooling	77
12.1	Admissible compressor discharge temperature.....	77
12.2	Evaluating the additional cooling capacity	77
12.3	Oil cooler.....	78
12.3.1	Examples of oil cooler application.....	78
12.4	Injection of liquid by thermostatic expansion valve	79
13	General design recommendation	82
13.1	Installation	82
13.2	General design recommendations about pipe lay out	82
13.3	Pipe layouts and construction.....	83
13.4	Heat pumps	84
13.5	Parallel Compounding	84
13.5.1	EXAMPLES OF PARALLEL COMPOUNDING LAY-OUT	85
14	Operative instruction	88
14.1	Ambient operating and storage temperature.....	88
14.2	Suction superheat.....	88
14.3	Pressure specifications	88
14.4	Balanced pressure when starting.....	88
14.5	Maximum ambient temperature	89
14.6	Number of start-ups	89
14.7	Starting, stopping and minimum running time.....	89
14.8	Testing.....	90
14.8.1	Leak testing/evacuation/oil charge.....	90
14.8.2	Refrigerant charge	90
14.9	Starting	91
14.10	Protection devices intervention and trouble shooting	92
15	Maintenance.....	93
15.1	Lubricants.....	93

15.2	Bearings.....	93
15.3	Rotors rotation direction.....	93
15.4	Maintenance plan	93
16	Capacity control conversion.....	94
16.1	RW3-H040÷080, H140÷240, L030÷070, L115÷220.....	94
16.1.1	Conversion from STEP (L4) to INFINITE (LZ) capacity control	94
16.1.2	Conversion from INFINITE (LZ) to STEP (L4) capacity control	97
16.2	RW3-H105/115/125, L080/095/105.....	101
17	Extent of delivery	103

1 Safety instructions

1.1 Importance of the manual

This manual contains the description of the operation and the necessary instructions to properly execute the main operations of use, ordinary and periodic maintenance of the compressor.



A prerequisite to ensure safe working conditions is compliance with all safety warnings and all instructions contained herein.

It must also ensure compliance with the local safety regulations currently in force in the installation location of the compressor as well as the general safety regulations. The information contained herein is intended for professional users who must have specific knowledge of how to use the compressor, must be authorized, trained and properly instructed.



We recommend the use of original parts and accessories.

The non-original parts will invalidate the warranty and may also be dangerous, reducing the life and performance of the compressor.



This manual, in case of transfer or sale, must always be delivered with the compressor. If it becomes lost or damaged, you have to ask for a copy to the manufacturer of the compressor or to the previous owner.

The manual is considered an integral part of the system.

1.2 Responsibility limitations

All indications and warnings given in this manual have been prepared taking into account the rules and regulations in force, the current state of the art of the technology and the skills and knowledge acquired.

The manufacturer assumes no responsibility for any damage caused by:

- failure to follow instructions contained in this user manual;
- usage outside of the intended purposes;
- use of non-specialized personnel;
- unauthorized modifications;
- technical changes;
- use of non-original spare parts and wearing parts.

If special versions has been requested, additional options have been ordered or technical updates have been applied, it is possible that the components actually supplied are changed with respect to the descriptions and illustrations in this manual. The obligations agreed in the supply contract, the general terms and conditions and the conditions of supply of the manufacturer and the legal provisions in force at the time of signing the contract are intended as valid.

1.3 Symbols on the manual

The following **symbols** are used in this manual to get your attention how they should behave in all operating situations:



RECOMMENDATIONS: contains advice and recommendations as well as useful information for safe and trouble-free operations.



CAUTION!: indicates a potentially hazardous situation which, if neglected, can lead to material damages.
Carefully follow the instructions and work carefully to avoid accidents, injuries and material damages.



The warnings are accompanied by signal words that identify the severity of the danger.

ADVICE!: indicates a potentially hazardous situation which, if neglected, may cause minor or moderate injury.

WARNING!: indicates a potentially hazardous situation which, if left untreated, can cause death or serious injury.

RISK!: indicates a situation of imminent danger that, if left untreated, can cause serious injury or death. Carefully follow the instructions and work carefully to avoid accidents, injuries and material damages.



MECHANICAL OPERATOR: the indicated steps must be carried out by specialized mechanical operator that operates respecting the rules of national security and any specific rules of the workplace.




ELECTRICAL OPERATOR: the indicated steps must be performed by a specialized electrical operator that operates in compliance with the safety regulations concerning energized equipment.



MAINTENANCE OPERATOR: the indicated steps must be carried out exclusively by the operator in charge of the maintenance of the machinery. As such he has to:

- integrally read and understood the contents of this manual;
- operate respecting the rules of national security and any specific rules of the workplace.

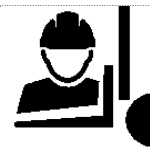

HANDLING OPERATOR: the indicated steps must be carried out exclusively by the operator enabled to handle loads that operates respecting the rules of national security and any specific rules of the workplace.



COMPANY SAFETY MANAGER: the company responsible for safety must be informed of any residual risks present in the machine and has to take care of any application to local safety regulations or specific of workplace and environment.

1.4 Safety signals

On the compressor are affixed pictograms that identify any dangerous areas



It is mandatory of the operator to keep in perfect status and replace them when they are no longer legible.



DANGER - VOLTAGE: indicates hazardous situations due to electrical voltage. In case of failure to follow safety instructions, there is a risk of serious injury or death.



DANGER - HIGH TEMPERATURE: indicates hazardous situations due to compressor parts at high temperature. In case of failure to follow safety instructions, there is a risk of minor injuries and burns.



DANGER - RISK OF EXPLOSION: indicates hazardous situations due to objects in pressure and the possible intervention of the safety valves. In case of failure to follow safety instructions, there is a risk of serious injury or death.



DANGER - CRUSHING: indicates hazardous situations due to parts of the compressor under rotation. In case of failure to follow safety instructions, there is a risk of serious injury.



DANGER - MOVING PARTS: indicates hazardous situations due to parts of the compressor under rotation. In case of failure to follow safety instructions, there is a risk of serious injury.



DANGER - EXPLOSIVE AREA: indicates hazardous situations due to possibility of flammable or explosive area. In case of failure to follow safety instructions, there is a risk of serious injury and death.

The area has to be protected from effective source of ignition.

Table 1 Pictograms

1.5 Machine switched-off status

Defines the condition of safety of the machine, to be applied before any maintenance and/or adjustment operations.

It provides for the compulsory execution of the following steps:



gas recovery.

1. Turning off the machine using the stop button.
2. Rotation of the main switch of the compressor to position 0 and padlocked.
3. Main switch turned to position OFF or 0.
4. When performing maintenance work indoors, switch on the room ventilation.
5. Close the valves of the compressor.
6. Use a 2 stage vacuum pump with gas ballast (1.5mbar standing vacuum) for

1.6 Responsibilities of the operator

The operator of the machine where the compressors is installed is therefore subject to the legal obligations concerning safety in the workplace.

In particular, the operator must:



- identify, through a risk assessment, the possible dangers arising from particular working conditions existing at the place of use of the compressor and of the machine.
- The user commits to comply with the applicable safety standards and regulations as well as with the guidelines given by this technical information.
- Designers, installers and service personnel must have a certified qualification for dealing with flammable refrigerants.
- The user must provide the operating personnel with all the necessary information on the applicable safety regulations.
- Ensure that all employees who use the machine have read and understood the user manual. Also instruct regularly the personnel on how to use the machine and inform them of the possible dangers;
- implement, through operating instructions, the behavioral requirements necessary for the operation of the compressor at the place of use;
- establish clear responsibilities for installation, operation, maintenance and cleaning of the compressor;
- check regularly, for all duration of use of the compressor, if the operating instructions correspond to the current version of the regulations;
- adjust, if necessary, the operating instructions to the new rules, regulations and conditions of use.

1.7 Misuse

Below are listed the actions required in order to prevent improper use of the compressor:

- Use the compressor only if it is in perfect technical condition. Promptly repair faults that can compromise security.
- It is not permitted to make changes to the compressor that may compromise its security of the same.
- Disconnect the power supply before performing regular maintenance, cleaning and repair work and ensure that it is an impossible compressor against restarting (disconnect the controls).
- Do not by-pass the safety devices or put them out of order.
- All operations on the compressor and/or on electrical equipment must be carried out by specialized personnel.
- Repairs and maintenance operations must be carried out only when the compressor is off. Make sure that it is impossible an accidental restarting of the machine!
- When performing operations on the compressor, the compressor must not be under pressure. Close the compressor or system valves and recover the gas into the compressor and pipings. Observe the indication of the pressure gauge!
- The protective devices of the starter must be removed only when the machine is turned off and must be reassembled correctly at the end of the operations. Remove the touch guard only when the machine and the pressure line have cooled down.

- The provisions relating to environmental protection require that all fluids handled during the maintenance operations (eg. Oil) are collected and disposed in accordance with current regulations.

1.8 Copyright

The content, texts, drawings, pictures and any other representation are protected by copyright and trade mark rights. Any violation is punishable. It is forbidden the reproduction, even partial and by any means, and the use and/or disclosure of the content without prior written declaration by the manufacturer.


1.9 Declaration of Incorporation

The following is an example of the conformity declaration and the information contained in it.



As the compressor are dedicated to be installed in a refrigeration system, the CE assessment and certificate have to be produced by the designer and manufacturer of the system.

The original document is delivered in soft copy upon requirement.



Dichiarazione di incorporazione	Declaration of Incorporation	Déclaration de l'incorporation																																																																																																																				
<p>Al sensi dell'allegato II, parte 1, sezione B della Direttiva Macchine 2006/42/CE.</p> <p>Il fabbricante: SRM Italy Srl E. Majorana 10/12 - 36045 Lonigo - Vicenza - ITALY</p> <p>Con la presente dichiara che le seguenti Quasi-Macchine:</p> <p>Moto-compressori semiermettici a vite per condizionamento e refrigerazione :</p>	<p>As per EC Machines Directive 2006/42/EC, attachment II, part 1, section B.</p> <p>The manufacturer: SRM Italy Srl E. Majorana 10/12 - 36045 Lonigo - Vicenza - ITALY</p> <p>Hereby declare that the following new partly-completed machines:</p> <p>Semi-hermetic screw compressors for refrigeration and air-conditioning applications:</p>	<p>En vertu de l'annexe II, part 1, section B de la Directive Machines 2006/42/CE.</p> <p>Le fabricant: SRM Italy Srl E. Majorana 10/12 - 36045 Lonigo - Vicenza - ITALY</p> <p>Par la présente déclare que les suivantes Quasi-Machines suivent:</p> <p>Moteurs-compresseurs semi-hermétiques à vis pour la réfrigération et le conditionnement d'air :</p>																																																																																																																				
<table border="0"> <tr><td>R53-H040</td><td>R53-L030</td><td>RW3-H040</td><td>RW5-L020</td></tr> <tr><td>R53-H050</td><td>R53-L080</td><td>RW3-H050</td><td>RW5-L025</td></tr> <tr><td>R53-H060</td><td>R53-L090</td><td>RW3-H060</td><td>RW5-L030</td></tr> <tr><td>R53-H070</td><td>R53-L100</td><td>RW3-H075</td><td>RW5-L040</td></tr> <tr><td>R53-H080</td><td>R53-L110</td><td>RW3-H090</td><td>RW5-L050</td></tr> <tr><td>R53-H100</td><td>R53-L120</td><td>RW3-H105</td><td>RW5-L060</td></tr> <tr><td>R53-H110</td><td>R53-L140</td><td>RW3-H115</td><td>RW5-L070</td></tr> <tr><td>R53-H120</td><td>R53-L160</td><td>RW3-H125</td><td>RW5-L075</td></tr> <tr><td>R53-H140</td><td>R53-L180</td><td>RW3-H140</td><td>RW5-L090</td></tr> <tr><td>R53-H160</td><td>R53-L210</td><td>RW3-H160</td><td>RW5-L100</td></tr> <tr><td>R53-H180</td><td>R53-L220</td><td>RW3-H190</td><td>RW5-L110</td></tr> <tr><td>R53-H200</td><td>R53-L180</td><td>RW3-H210</td><td>RW5-L125</td></tr> <tr><td>R53-H220</td><td>R53-L200</td><td>RW3-H240</td><td>RW5-L140</td></tr> <tr><td>R53-H240</td><td>R53-L220</td><td>RW3-H250</td><td>RW5-L150</td></tr> <tr><td>R53-H280</td><td>R53-L240</td><td></td><td></td></tr> <tr><td>R53-H350</td><td>R53-L270</td><td>RW3-L030</td><td></td></tr> <tr><td></td><td>R53-L300</td><td>RW3-L040</td><td></td></tr> <tr><td>R53-H390</td><td>R53-L350</td><td>RW3-L050</td><td></td></tr> <tr><td></td><td></td><td>RW3-L060</td><td></td></tr> <tr><td></td><td></td><td>RW3-L070</td><td></td></tr> <tr><td></td><td></td><td>RW3-L080</td><td></td></tr> <tr><td></td><td></td><td>RW3-L095</td><td></td></tr> <tr><td></td><td></td><td>RW3-L105</td><td></td></tr> <tr><td></td><td></td><td>RW3-L115</td><td></td></tr> <tr><td></td><td></td><td>RW3-L130</td><td></td></tr> <tr><td></td><td></td><td>RW3-L160</td><td></td></tr> <tr><td></td><td></td><td>RW3-L180</td><td></td></tr> <tr><td></td><td></td><td>RW3-L200</td><td></td></tr> <tr><td></td><td></td><td>RW3-L220</td><td></td></tr> </table>	R53-H040	R53-L030	RW3-H040	RW5-L020	R53-H050	R53-L080	RW3-H050	RW5-L025	R53-H060	R53-L090	RW3-H060	RW5-L030	R53-H070	R53-L100	RW3-H075	RW5-L040	R53-H080	R53-L110	RW3-H090	RW5-L050	R53-H100	R53-L120	RW3-H105	RW5-L060	R53-H110	R53-L140	RW3-H115	RW5-L070	R53-H120	R53-L160	RW3-H125	RW5-L075	R53-H140	R53-L180	RW3-H140	RW5-L090	R53-H160	R53-L210	RW3-H160	RW5-L100	R53-H180	R53-L220	RW3-H190	RW5-L110	R53-H200	R53-L180	RW3-H210	RW5-L125	R53-H220	R53-L200	RW3-H240	RW5-L140	R53-H240	R53-L220	RW3-H250	RW5-L150	R53-H280	R53-L240			R53-H350	R53-L270	RW3-L030			R53-L300	RW3-L040		R53-H390	R53-L350	RW3-L050				RW3-L060				RW3-L070				RW3-L080				RW3-L095				RW3-L105				RW3-L115				RW3-L130				RW3-L160				RW3-L180				RW3-L200				RW3-L220			
R53-H040	R53-L030	RW3-H040	RW5-L020																																																																																																																			
R53-H050	R53-L080	RW3-H050	RW5-L025																																																																																																																			
R53-H060	R53-L090	RW3-H060	RW5-L030																																																																																																																			
R53-H070	R53-L100	RW3-H075	RW5-L040																																																																																																																			
R53-H080	R53-L110	RW3-H090	RW5-L050																																																																																																																			
R53-H100	R53-L120	RW3-H105	RW5-L060																																																																																																																			
R53-H110	R53-L140	RW3-H115	RW5-L070																																																																																																																			
R53-H120	R53-L160	RW3-H125	RW5-L075																																																																																																																			
R53-H140	R53-L180	RW3-H140	RW5-L090																																																																																																																			
R53-H160	R53-L210	RW3-H160	RW5-L100																																																																																																																			
R53-H180	R53-L220	RW3-H190	RW5-L110																																																																																																																			
R53-H200	R53-L180	RW3-H210	RW5-L125																																																																																																																			
R53-H220	R53-L200	RW3-H240	RW5-L140																																																																																																																			
R53-H240	R53-L220	RW3-H250	RW5-L150																																																																																																																			
R53-H280	R53-L240																																																																																																																					
R53-H350	R53-L270	RW3-L030																																																																																																																				
	R53-L300	RW3-L040																																																																																																																				
R53-H390	R53-L350	RW3-L050																																																																																																																				
		RW3-L060																																																																																																																				
		RW3-L070																																																																																																																				
		RW3-L080																																																																																																																				
		RW3-L095																																																																																																																				
		RW3-L105																																																																																																																				
		RW3-L115																																																																																																																				
		RW3-L130																																																																																																																				
		RW3-L160																																																																																																																				
		RW3-L180																																																																																																																				
		RW3-L200																																																																																																																				
		RW3-L220																																																																																																																				
<p>SRM Italy S.r.l. a Socio Unico Società soggetta a direzione e coordinamento di Fujian Snowman Co., Ltd Via E. Majorana, 10/12 - 36045 Lonigo (VI) - tel +39 0444 726726 - info@refcompitaly.com Cap. Soc. Euro 100.000,00 i.v. - C.F. e P.IVA 02842060218 - R.E.A. 210269</p>																																																																																																																						

2 General

2.1 Identification

The SRMTec RW3 series screw compressors are helical twin screw oil-injected compressors (Fig. 2 shows an example with all the main parts and assemblies) specifically designed to operate with hydrocarbon (R290, R1270, R600) gas as refrigerants and to be installed in refrigeration system.

The identification of the compressor model is possible by the following scheme:

	RW3-	L	140-	L	4
RW3- = semi-hermetic Refrigerant screw compressor					
L = Application type L = Low temperatures application H = Medium temperatures application					
140 = Nominal power [Hp]					
L = Accessories voltage L = Electrical accessories 220V AC 50/60Hz; M = Electrical accessories 110V AC 50/60Hz; Y = Electrical accessories 24V AC 50/60Hz; U = Electrical accessories UL approved 220V AC 50/60Hz (only for S series); V = Electrical accessories UL approved 110V AC 50/60Hz (only for S series)					
4 = Partial load control (0/4/Z) 0 = without steps capacity control; 4 = 4 steps capacity control (100-75-50% - minimum step) made with 3 solenoid valves, only for S series; Z = Infinite capacity control (from minimum capacity to 100% or from 50 to 100%), only for S series;					

2.2 Intended Use

The **RW3 semi-hermetic rotary screw compressors** have been designed and manufactured exclusively for the installation into a complete system and for the compression of clean refrigerants.

The use of flammable refrigerants with semi-hermetic compressors in so-called "closed plants" is subjected to the safety regulations on flammable substances according to ATEX 2014/34/EU regulation.



The electrical system is designed for use in explosive and flammable ambient with Category II and Zone identification 2 (rare and short term danger), but with proper instructions to be followed.

Any whatsoever claim for damages resulting from misuse is excluded. The designer and the operator of the machine where compressor is installed are solely responsible for any damage resulting from misuse.



THE COMPRESSOR USAGE FOR SCOPES DIFFERENT AND NOT INCLUDED IN THE INDICATED EXCLUDES THE MANUFACTURER FROM ANY RESPONSIBILITY FOR THE RISKS THAT SHOULD BE CAUSED AND FOR ANY DAMAGES TO THE MACHINE, PEOPLE OR THINGS.



NEVER APPLY THE COMPRESSOR IN ZONE 1 OR 0 AREAS OR APPLICATIONS OR AMBIENT CATEGORY "I".

2.3 Directives and Standards Reference

The compressor in question has been designed and manufactured taking into account the feedback that emerged from a careful analysis of risks and tending to achieve, given the state of the art, the objectives set by the essential requirements of safety and health provided by European Directives.

In the Table 2 are listed the referenced European Directives and Standards (EN):

Directive	Description
2006/42/EC	"Machinery Directive on the approximation of the laws of the Member States relating to machinery".
2014/35/EC	"Low Voltage Directive on the approximation of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits".
2014/30/EU	"Electromagnetic Compatibility Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility".
EN 1012-1	"Compressors and vacuum pumps. Safety requirements. compressors".
EN 12693:2008	"Refrigerating systems and heat pumps - Safety and environmental requirements - Positive displacement refrigerant compressors"
EN 60204-1	"Safety regulations concerning basic electrical equipment of machines".

Table 2 Reference standards and directives

2.4 Residual risks

We inform the authorized operators that, despite the manufacturer has adopted all the measures possible to make the construction of the compressor sure, remain potential residual risks described in Table 3.

Residual risk n° 2	DANGER OF BEING AFFECTED BY GAS PRESSURE
Frequency of exposure	Low and accidental. There may be exposure if the operator decides to perform voluntarily impropriety, prohibited and not reasonably foreseeable.
Extent of the damage	Serious lesions (non reversible).
Solutions adopted	Respect of the correct procedure for maintenance operation. Safety signal.

Table 3 Residual risk n° 1

2.5 Identification of dangerous areas

Dangerous areas of the compressor are identified in the following images.



These areas have to be considered into the risk assessment of the machine were the compressor is installed and appropriate precautions must be taken to reduce residual risks (see chapter 2.4)

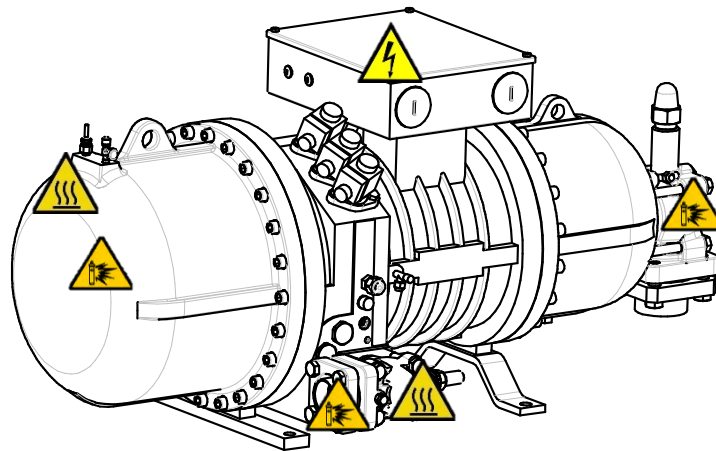


Fig. 1 Dangerous area identification

2.6 Introduction

Including a total amount of 28 screw compressors in semi-hermetic execution without oil separator, the **RW3 series** cover the power range from 30 to 250 Hp and a displacement range from 118 to 700 m³/h at 50 Hz.

The compressors feature a semi-hermetic construction, and are fitted with a three-phase asynchronous two-pole motor (2900 rpm at 50 Hz) directly coupled to the male rotor, which in operation drives the female coupled rotor.

The RW3 compressor series is available with two different versions, identified by different intrinsic volumetric ratios (Vi) and different motor size in order to optimize for low or


medium/high evaporating temperature. The user has therefore the possibility to choose the compressor size and model that better fit to the particular application. As a consequence, the maximum compression efficiency is always performed.

The use of an external oil separator leads to the highest flexibility in the designing of racks with a number of compressors variable from 2 to 6 with one common oil separator (parallel compounding). Beside this, the oil cooling widens the application limits up to the hardest operating conditions.

A complete series of accessories for the oil return line (between the oil separator and the compressor) is provided in the standard delivery. Furthermore, a complete range of oil separators and oil coolers is also available.

The low vibrations level and the absence of discharge gas pulsation make the use of anti-vibrating dampers and flexible pipes not necessary.

The use of the subcooling economizer circuit (ECO) leads to a further increase in the cycle efficiency (COP).

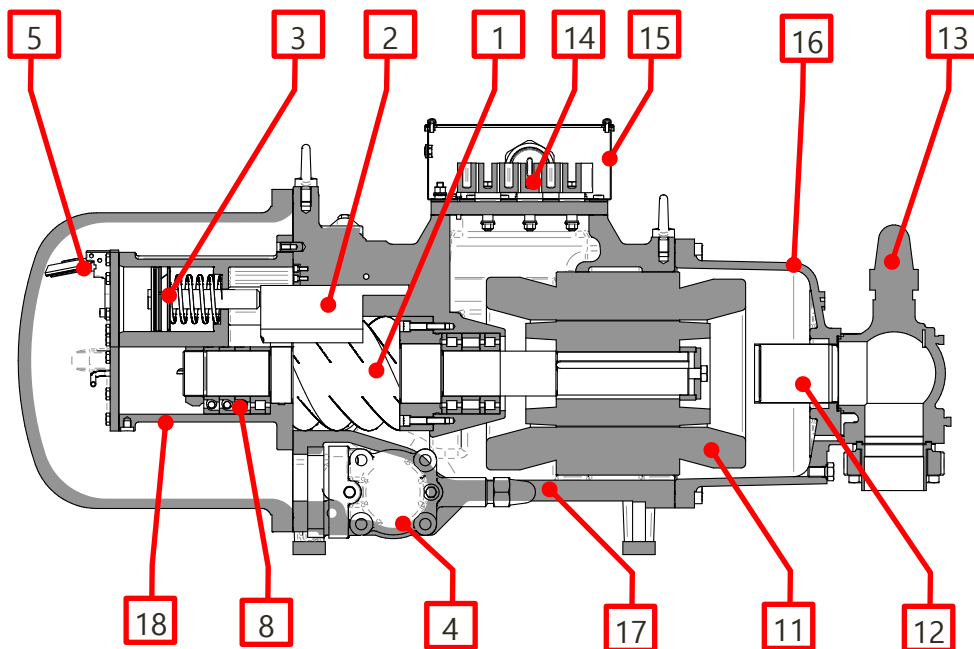

- | | |
|--------------------------------------|--|
| 1. Rotors; | 10. - |
| 2. Slide valve for capacity control; | 11. Electrical motor; |
| 3. Slide valve control piston; | 12. Suction filter; |
| 4. Discharge shut off valve; | 13. Suction shut off valve; |
| 5. Check valve; | 14. Motor protection device; |
| 6. - | 15. Terminal box; |
| 7. - | 16. Suction bell; |
| 8. Rolling bearings; | 17. Rotor housing; |
| 9. - | 18. Bearings housing (discharge side). |

Fig. 2: Schematic drawing of an RW3 series compact screw compressor;

2.7 The compression process

The rotors are housed inside horizontal cylindrical chambers, fitted with a suction port (on the electric motor side) and a discharge port (on the oil separator side). Tightness against leakage through the extremely reduced clearance between the rotors and the chambers is guaranteed by a film of oil that is injected directly onto the screw profile.

The compression process essentially involves the following three phases (for reasons of clarity, the following description is limited to one lobe on the male rotor and one flute on the female rotor):

- a) suction;
- b) compression;
- c) discharge (to the compressor discharge port).

The described compression steps are shown in the following picture.

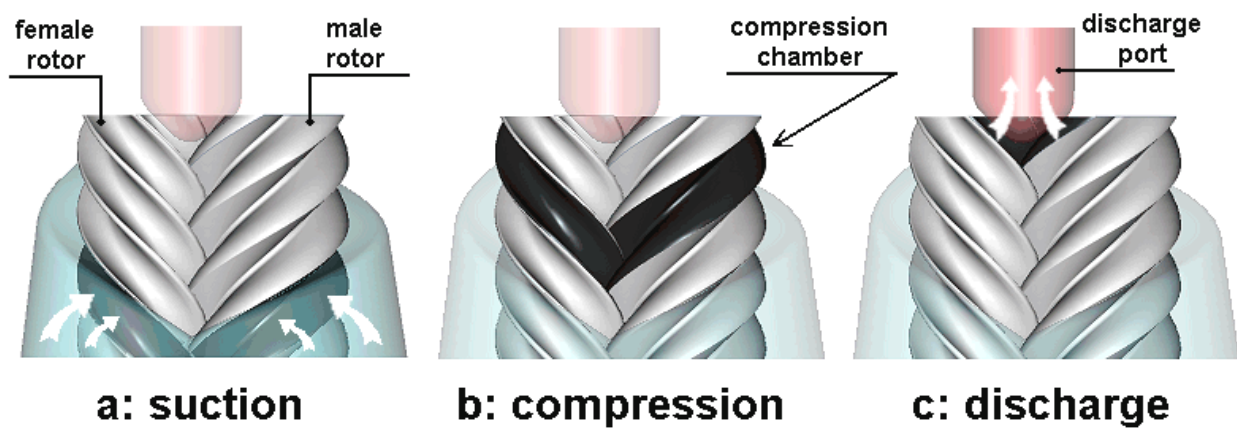


Fig. 3: Compression process step sequence

Suction

With reference to Fig. 3, when the lobe on the male rotor is unmeshed from the flute on the female rotor, the suction port opens into the compression chamber and, due to the rotation of the screws, the suction volume increases, creating negative pressure that draws in the refrigerant fluid. The suction phase ends when, due to rotation, the suction port is closed.

Compression

With reference to Fig. 3, as rotation continues in the compression chamber, both the suction and the discharge ports are closed, the volume inside the chamber progressively decreases and the trapped gas moves in the longitudinal direction of the rotors, towards the discharge port. In other words, the trapped gas is compressed.

Discharge

With reference to Fig. 3, the rotation continues until the discharge port opens and the compressed gas is completely expelled, due to the progressive intermeshing of the lobe and the flute. As the gear ratio is 5/6 (5 lobes on the male rotor and 6 flutes on the female rotor) and the rotation speed is around 3000 rpm at 50Hz (asynchronous motor), each minute there will be $3000 \times 5 = 15000$ discharge cycles, which means an almost complete absence

of pulsation at the discharge. A reciprocating compressor operating at 1500 rpm would require 10 cylinders to achieve the same result.

2.8 The rotors

The rotors, see Fig. 4, have an asymmetrical shape with 5 lobes and 6 flutes, and are made entirely by SRMTec. The perfect intermeshing between the suitably lubricated rotors ensures extremely smooth and silent compressor operation. The picture shows also the correct directions of rotation.

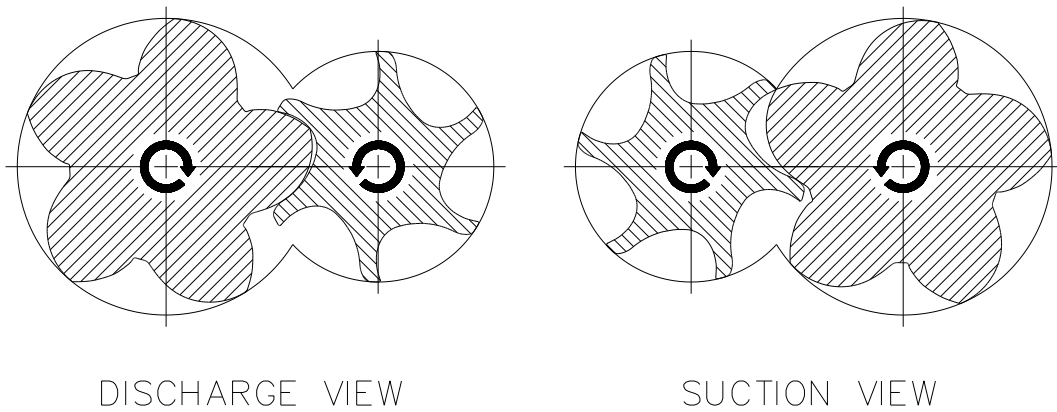


Fig. 4: view of the rotors and correct direction of rotation;

2.9 The built-in volumetric ratio

The size and the shape of the discharge port determine the value of the so-called “ V_i ”: the “built in volumetric ratio”, defined as the ratio between the volume of the gas at the start and the end of the compression process. This ratio does not depend on the operating conditions, but rather corresponds, according to the type of refrigerant gas, to a precise compression ratio between the compressor discharge pressure and suction pressure. When this compression ratio coincides with the ratio between the condensing pressure and the evaporation pressure, the compression process is running at maximum efficiency. Indeed, the gas discharged from the compression chamber is at the same pressure of the compressor outlet (condensing pressure) and the work required to compress the gas is minimum. When, on the other hand, the pressure at the outlet differs from the discharge pressure of the gas from the rotors, there is over compression or under compression (instantaneous when the discharge port opens), which means a waste of energy, see Fig. 5. Therefore, the choice of the most appropriate “ V_i ” ratio to suit the application ensures that energy wastage can be avoided or at least minimized.

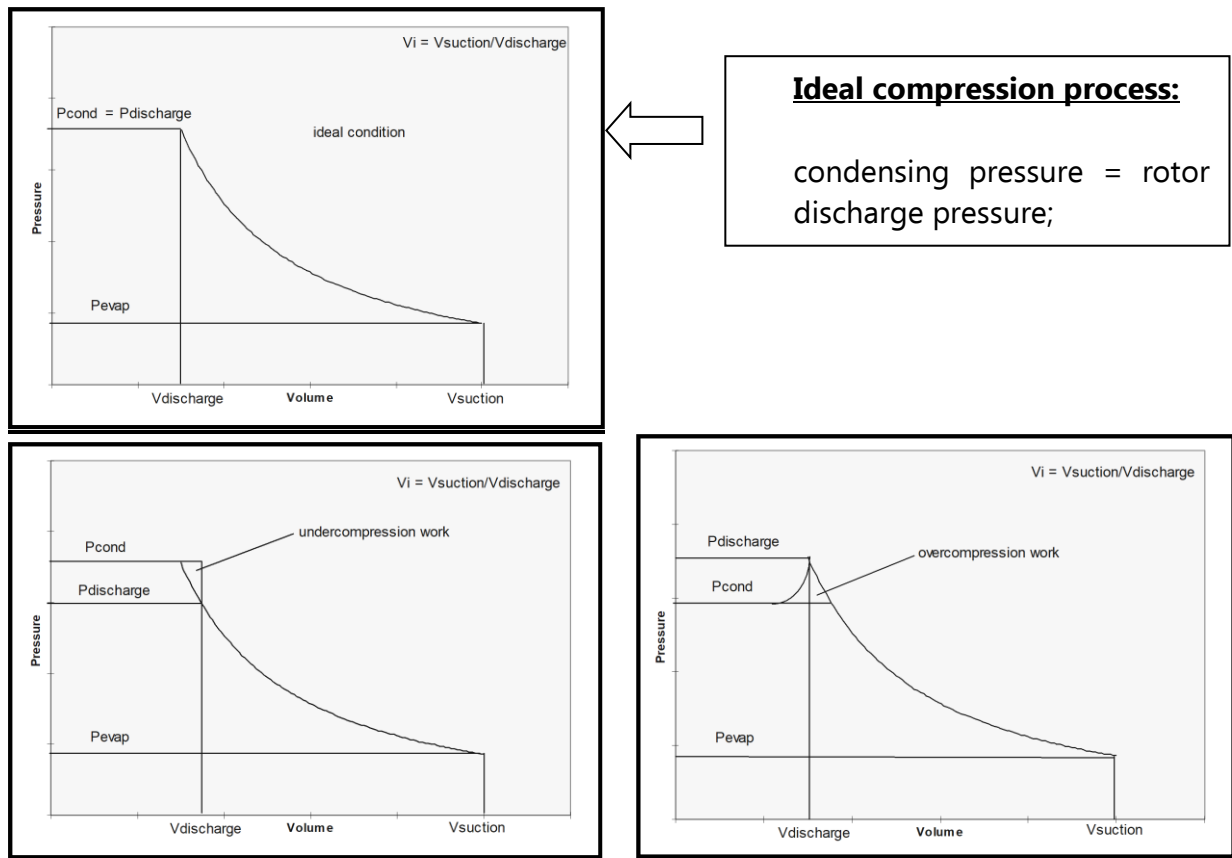


Fig. 5: the compression process on the p-V diagram;

The RW3 series compressors are available in two different V_i ratios that are optimized for medium/high and low temperature applications.

The RW3 series compressors thus have the following built-in volumetric ratio:

- ✓ $V_i = 4.4$: “L” version models;
- ✓ $V_i = 2.6$: “H” version models;

The following diagrams show the recommended fields of application for the two built-in volumetric ratios (V_i) of the RW3 series. These fields are expressed according to the condensing and evaporating temperatures of the specific used refrigerant:

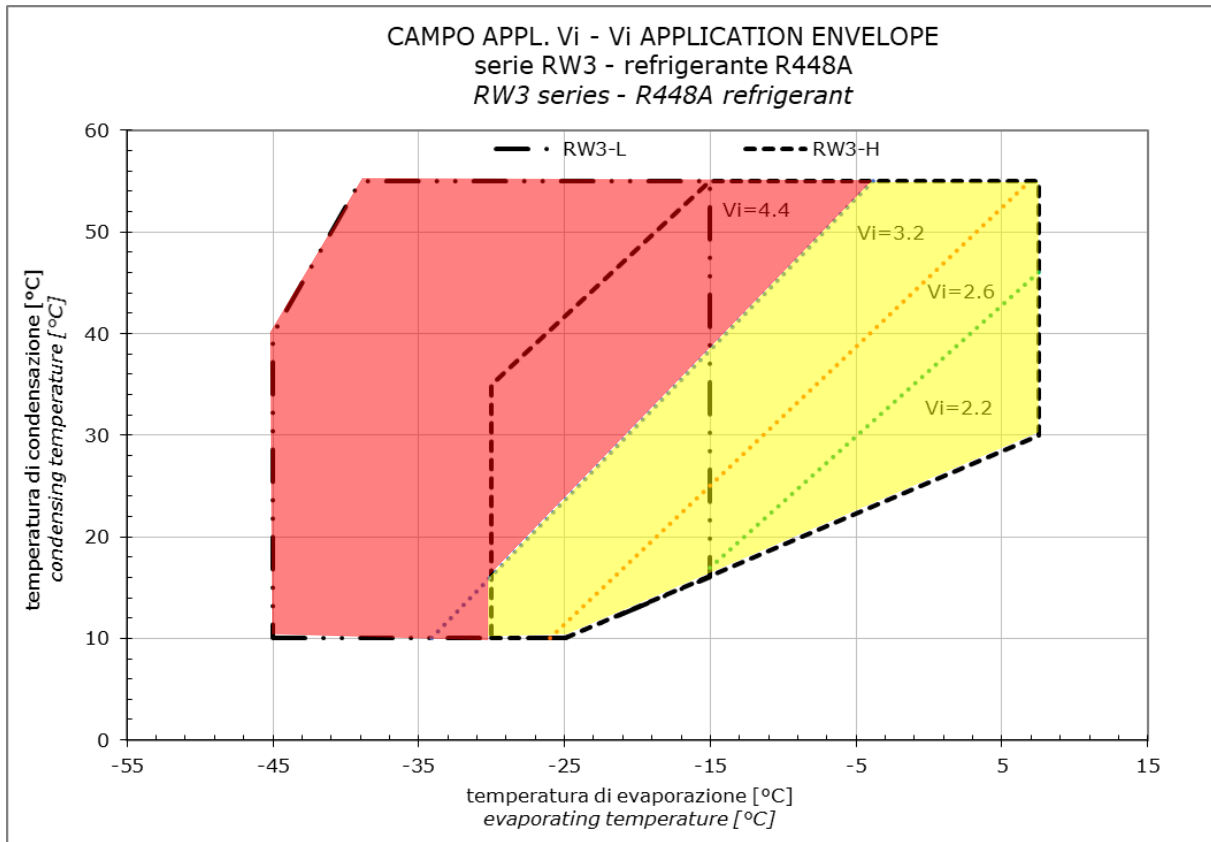


Fig. 6: V_i values recommended with R448A and areas of application convenience

3 Lubrication

3.1 Oil circuit

The oil carries out the following functions:

- ✓ Dynamic seal between the rotors and the cylindrical chambers;
- ✓ Lubrication of the bearings and the rotors;
- ✓ Control of the slide valve for capacity control (only for the RW3 series);
- ✓ Cooling.

The following Fig. 7 shows the oil circuit and involved components:

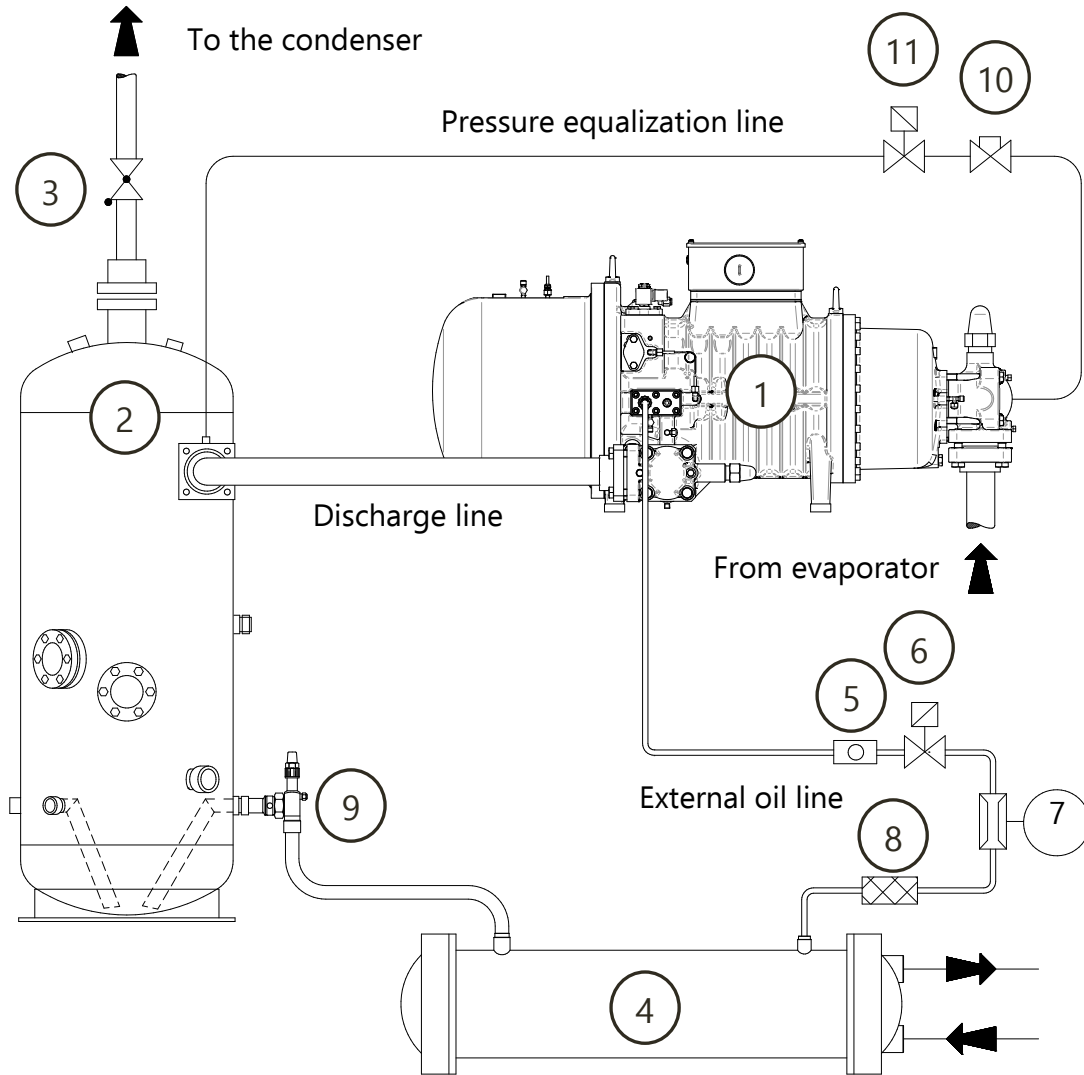


Fig. 7: diagram of the external oil circuit and components

- | | |
|-----------------------|--------------------|
| 1) Compressor | 2) Oil Separator |
| 3) Check valve | 4) Oil cooler |
| 5) Sight glass | 6) Solenoid valve |
| 7) Oil flow switch | 8) Oil filter |
| 9) Oil shut-off valve | 10) Shut-off valve |
| 11) Solenoid valve | |

Referring to Fig. 7, the lubricant is stored in an external oil separator (2) that permits the compressor oil supply to the compressor after the separation between oil and gas mixture. The oil circulation results from the pressure difference between the oil separator, at discharge pressure, and the injection points where the pressure is slightly higher than the suction pressure.

From the reservoir the oil flows in the oil cooler (4), in case of cooling is required, then through a filter (8) to the suction bearings, the injection point on the rotor profiles and the discharge-bearing chamber. The oil feeding back line is monitored by means of a flow switch (7), a solenoid valve (6) and a sight glass (5).

The oil and gas are separated in the upper part of this vessel (2). The oil proportion flows downwards to the reservoir space from where it again flows to the compressor (1).

According to the application conditions the circulating oil has to be cooled by an oil cooler. Under certain conditions direct refrigerant injection can also be used as an alternative (consult SRMTec).

Fig. 7 illustrates also the equalization pressure line which permit to reduce the pressure value inside the oil separator during the stop time, so it's possible:

- to start the compressor at minimum capacity;
- to reduce the dilution of refrigerant in the lubricant.

For this reason, it's necessary to use a check valve between the oil separator and the condenser, and to use a solenoid valve (11) to control the equalization pressure line from the oil separator to the compressor.

This equalization line can be opened only when the plant is stopped or, in case of compounding system, when all the compressors are switched off.

Illustrative examples of the RW3 series internal oil circuits are those shown in the cross sections of the following picture.

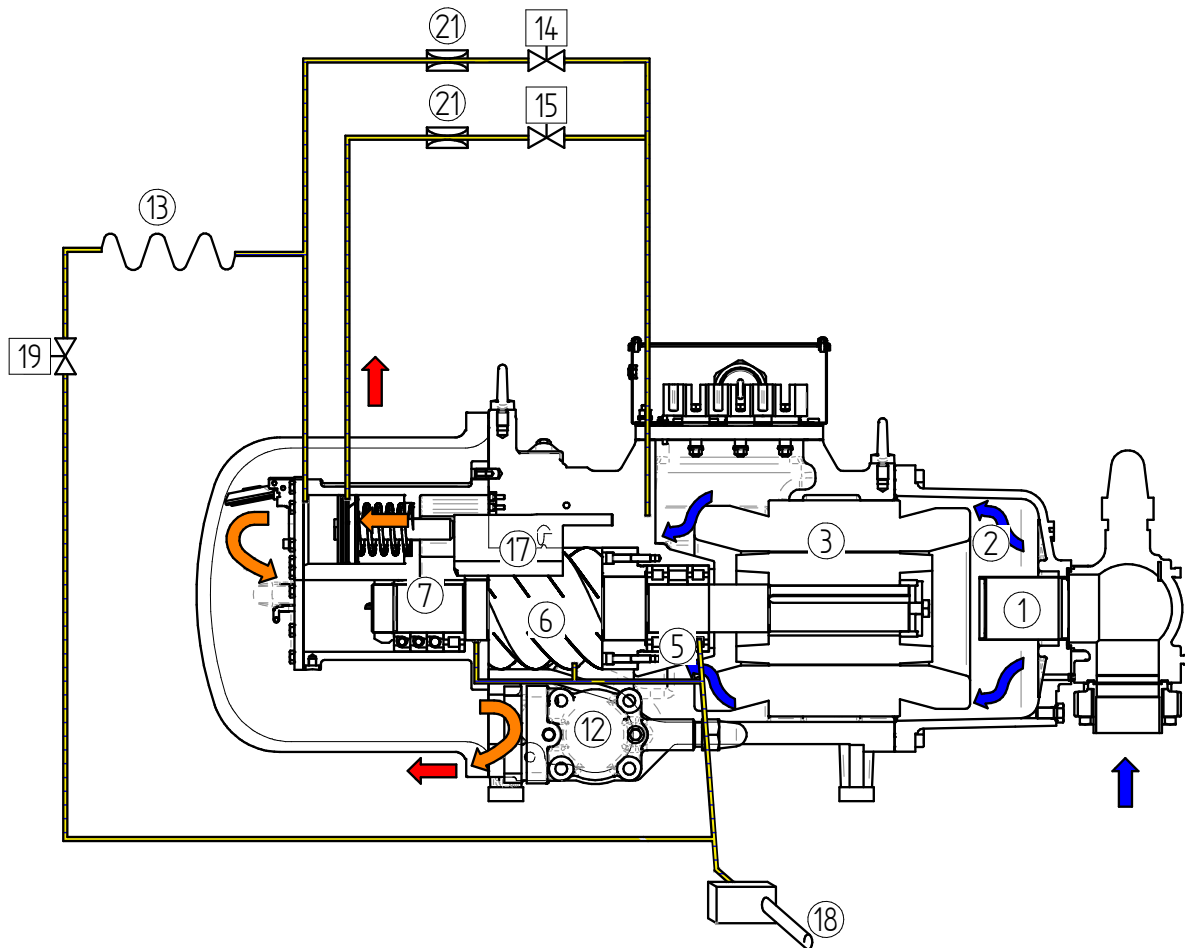


Fig. 8: diagram of the internal oil circuit for lubrication and operation of the slide valve;

5, 7	rolling bearings	14, 15,	solenoid valves for capacity control
		16	
6	rotors	17	slide valve and actuator piston for capacity control
13	capillary pipe	18	oil inlet-outlet connection for the external cooling circuit



Warning!

The oil contained in the oil separator is at the discharge pressure (high pressure).

The oil is circulated by exploiting the pressure difference between the oil separator, at the discharge pressure, and the point of injection, where the pressure is slightly higher than the suction pressure (no oil pump is then necessary).

From the injection point (18) the oil flows to the suction bearings, to the injection point on the screw profile and to the discharge bearing chamber. For the RW3 compressors, there is also a capillary tube that carries the oil to the slide valve control cylinder for capacity control.

Then the oil leaving the slide valve control cylinder -whenever present-, the suction bearings and the discharge bearing chamber flows to the suction side of the rotors and it is compressed through the rotors together with the suction gas.

The high-pressure oil-gas mixture is pushed to the external oil separator where refrigerant and oil are separated; the refrigerant flows to the condenser while the lubricant is collected on the bottom of the oil separator.

3.2 Oil flow-rate

As the circulation of oil is generated by a pressure difference, the oil flow rate depends upon the difference between the discharge and suction pressure, according to the following equation:

$$V_{OLIO} = K \cdot \sqrt{P_S - P_A}$$

Where:

V_{oil} volumetric oil flow-rate through the filter [l/min]

K = coefficient, depending on the model of compressor (see Table 4)

P_S = discharge pressure [bar]

P_A = suction pressure [bar]

RW3	H040 L030	H050 L040	H060 L050	H075 L060	H090 L070	H105 L080	H115 L095	H125 L105	H140 L115	H160 L130	H190 L160	H210 L180	H240 L200	H250 L220
K	5,5		6		6,75			7,5						

Table 4: coefficients K for calculating the oil flow-rate;

The minimum oil flow rate required to fulfil all the purposes (lubrication, seal, slide valve control and cooling) is ensured when the compressor works within the established field of operation, as long as the oil filter is normally clean and the oil maintains its characteristics. During the starting phase, as the pressures are always balanced in the compressor, there is no oil circulation; however the bearings and rotors are designed to tolerate a few seconds of dry operation before the necessary pressure difference is reached.

Warning!



Within 20 seconds from starting, the compressor has to work within the recommended application range (minimum pressure difference, see paragraph 3.8).

In part-load operation and, in general, when the minimum pressure difference is not easily reached, special measures may need to be adopted, such as:

- ✓ delayed start of the condenser fans, on air-cooled units;
- ✓ the use of a water flow-rate control valve on water-cooled units;
- ✓ the use of a pressure regulating valve between the compressor and the condenser (contact SRMTec for further information). At the same time it might be also necessary to keep the time of the compressor part-load operation to the minimum (about 5 seconds).

3.3 Lubricants

The lubricants have been selected mainly based on the following requirements:

- ✓ Seal against leaks along the rotor profile;
- ✓ Correct lubrication of the bearings;
- ✓ Good viscosity characteristics at high temperature;
- ✓ Good miscibility with the refrigerant fluid at low temperature.



Warning!

Do not use lubricants other than those recommended. All the oils approved by SRMTec must not come into contact with the humidity in the air.

Depending on the kind of refrigerant fluid, below are the oils recommended by SRMTec for the RW3 series compressors.

Supplier	Type	Chemical comp.	Density at 15°C [g/ml]	Viscosity at 40°C [cSt]	Flash point [°C]	Pour point [°C]	Flock point [°C]
CPI	Solest 170 (BS 170)	POE	0.95	175.2	265	-30	None
Emkarate	RL170H ¹	POE	0.968	170	290	-25	None
FUCHS	Reniso Triton SE 170 ²	POE	0.98	170	260	-24	None
UNIQEMA	<u>Icematic</u> SW220	POE	0.98	220	280	-22	None

Table 5: properties of oil for HFC refrigerants

Supplier	Type	Chemical comp.	Density at 15°C [g/ml]	Viscosity at 40°C [cSt]	Flash point [°C]	Pour point [°C]	Flock point [°C]
CPI	CP 4214-150	Complex ester	1.01	168	290	-43	None
TOTAL FINA ELF	Lunaria SK 100	Alchilbenzene	0.874	94	200	-33	<-58
ESSO	Zerice S 100	Alchilbenzene	0.868	98	196	-30	<-60

Table 6: properties of oil for HCFC refrigerants (R22)

¹ Standard for RW3 compressors

² Approved alternative lubricant

3.3.1 Standard lubricants: operating conditions range

Refrigerant	Oil	Cond. temperature	Evap. Temperature	Discharge gas temp.	Oil injection temp.
		[°C]			
HCFC (R22)	Zerice S100	≤45 (55) ³	≥-50 ≤+5	≤80 ⁴	Max 80
	Lunaria SK 100			≤100 ⁴	Max 90
	CP 4214-150	≤60	≥-40 ≤+12.5		Max 100
HFC	SW 220 HT-EU	≤52	≥-50 ≤+7.5		
	Reniso Triton SE 170				

Table 7: lubricants operating conditions range

The lubricant Zerice S100 and Lunaria SK100, thanks to their low viscosity, are particularly suitable to low condensing and evaporating temperatures. The additional cooling can be performed only by means of an external heat exchanger (air-oil, water-oil and refrigerant-oil heat exchanger).

The liquid injection is allowed only for lubricant:

- CP 4214-150
- SW 220 HT-EU
- Reniso Triton SE 170

3.4 Oil separator

The vertical oil separator, installed on the discharge gas line (position 2, Fig. 7), has the purpose to separate the oil from the refrigerant, to the aim of:

- increasing the efficiency of the plant reducing the amount of oil dragged in the circuit;
- creating an oil reservoir available to feed continuously the compressor.

Available in different sizes, the oil separators are delivered complete with oil heater(s), oil thermostat, oil level control, sight glass. For the correct sizing consult RefComp.

The refrigerants that can be used are: HCFC, HFC, NH₃ and other ones if only they are compatible with material of other components.

The oil separators consist of a vessel specifically designed following severe international standard specifications to perform an optimal separation in the upper volume and to carry out an oil reservoir in the lower part. Since that they can operate with refrigerant displacements from 200 to 2250 m³/h, it's important to select the correct one by mean of Table 8.

For dimensional drawings of oil separator see chapter 8.2.

³ temperature of working conditions only for short period of time

⁴ it's necessary to assure that the gas discharge temperature should be at least 30K higher than the condensing temperature

Model	Weight [kg]	Volume		Application range: max. suction volume flow					
		Oil [dm ³]	Total [dm ³]	Air conditioning		Normal cooling		Low temperature	N° of compressors
				R22	R404A and R507	R22	R404A and R507		
				[m ³ /h]					
RS-180	60	19	40	220	220	300	300	300	Max 2
RS-400	130	50	120	490	440	660	620	660	Max 3
RS-900	195	90	220	940	840	1320	1180	1320	Max 6
RS-1300	230	130	330	1320	1180	1650	1470	1650	
RS-2300	273	230	560	1650	1470	2250	2009	2250	
RS-182	29	3	30	220	220	300	300	300	
RS-402	52	7	75	490	490	660	660	660	
RS-902	66	10	140	940	940	1320	1320	1320	

Table 8 Oil separators characteristics

3.5 Oil filter

As illustrated in Fig. 7, the oil return line to the compressor is provided with a high efficiency oil filter which has to be particularly clean to assure the correct oil feed to the compressor.

The cleanness of the filter is determinate by measuring the pressure drop Δp on itself: on normal working conditions with a new filter, the pressure drop should be less than 0.8 bar.



Warning!

For the limit value of the pressure drop across the oil filter at which the filter needs to be replaced, see paragraph 3.8 "Lubrication monitoring".

It must be taken care about the oil return line during the start-up operation: it's possible that the filter will be soon clogged by dirtiness if the cooling plant has not be cleaned properly. Fig. 9 shows detailed indication on the common system to measure the pressure drop corresponding to the oil filter. If this pressure drop exceeds the values indicated in par. 3.8.2, then it means that it's necessary to replace the oil filter.

Since that the oil filter used in SRMTec compressors has a very fine net, it could be necessary to replace this component after few working hours, and of course when the value measured exceeds the set-up one.

SRMTec recommends to order a spare part oil filter with the compressor

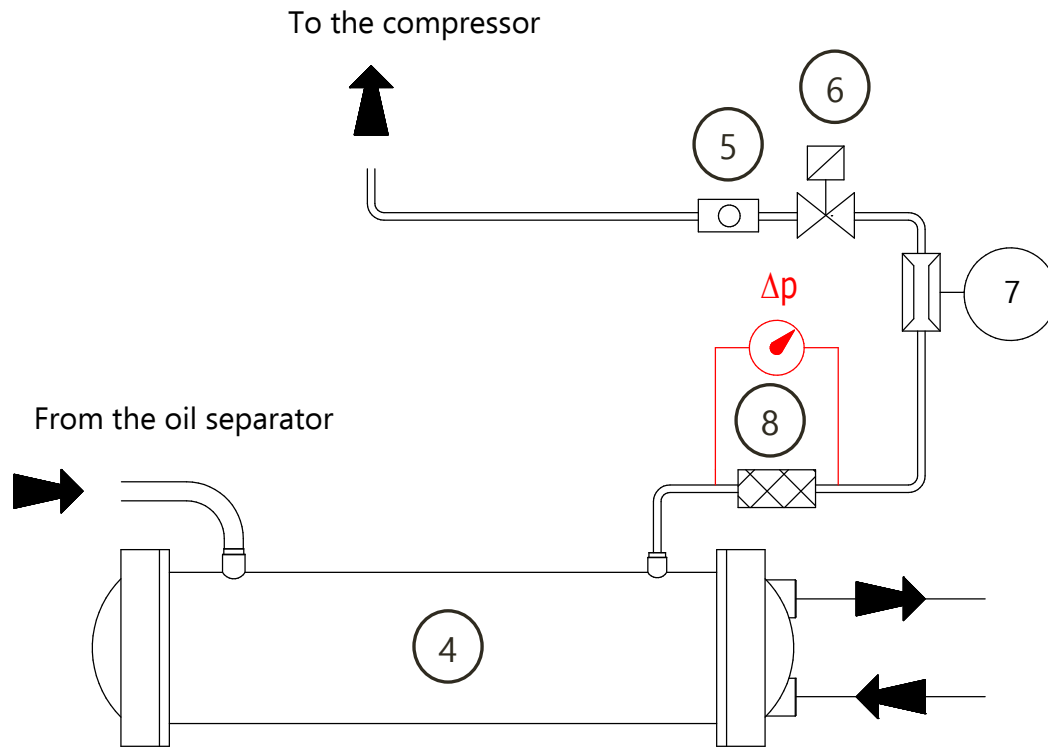


Fig. 9: Oil filter measuring point

3.6 Oil heater

The aim of the oil heater is to prevent an excessive dilution of refrigerant in lubricant during the stop period.

The oil heater must be used in the following cases:

- Installing the compressor and the oil separator outside (if it's necessary, the use of insulation material is suggested);
- Long stop period of the system.

Warning!



The application of the oil heater is permitted only in Zone 2 areas.

Danger of spark formation due to unintended switching operation or overheating of the crankcase oil heater during oil change.

Caution!



Due to the high oil solubility by the refrigerants, an oil sump heater is absolutely required.

Switch on the oil heater during standstill operations.

The oil heater is designed to prevent the excessive dilution of refrigerant in the oil when in standstill, and must be on when the compressor is off.

See chapter 8.2 to get more information about technical characteristics and dimensional drawings.



Warning!

Before starting up for the working season, the heater must be on for at least 24 hours before starting the compressor.

3.7 Oil level

The oil, if requested, is always supplied in separate cans inside the packaging, to prevent contamination of the plant with any external part or air content.

The maximum and the minimum oil level inside the separator can be monitored by means of two sight glass.

Anyway, it's possible to install an electronic oil level switch to monitor the amount of oil.

Table 8 indicates the charge of oil referred to each kind of separators.

See chapter 8.2 to get more information about technical characteristics and dimensional drawings for the sensor.



Warning!

The compressor and the oil separator are delivered with a nitrogen charge of about 1 bar to prevent contamination of external air.

It is responsibility if the customer to extract the nitrogen charge of the compressor, produce a deep vacuum and charge the oil amount required.

3.8 Lubrication monitoring

3.8.1 Oil temperature monitoring

Normally the lubrication can be indirectly monitored by checking the discharge temperature of the oil: lack of lubrication leads to an increase of that value.

Hence a temperature sensor is available (optional with the INT 69 B2 module, standard with INT 69 SNY module), to monitor the oil temperature (see chapter 6.2).

Whenever this accessory is not used, a safety thermostat should be installed on the discharge pipe to switch off the compressor as the temperature reaches 120°C.



Warning!

The additional cooling of the oil (chapter 12) does not guarantee the indirect monitoring of the lubrication through the oil temperature value.

Depending on the operating conditions, however, the discharge temperature may be quite different from the alarm condition of the above-mentioned device (120°C).

Consequently, the delay in the increase and in reaching the critical temperature of 120°C, corresponding to insufficient lubrication, must be considered, as the correct operation of the compressor may be affected in this period.

As a result, SRMTec suggests further alternative methods for monitoring correct lubrication, described below.

3.8.2 Static pressure control

The correct circulation of the oil is guaranteed by the fact that both the filter is clean and the compressor operates in the admissible field of operation (Fig. 11 shows an example).

With reference to Fig. 10⁵ and Fig. 11, to protect the compressor against insufficient lubrication, the following three pressure values need to be measured:

- ✓ The high pressure "HP";
- ✓ The oil pressure "OP";
- ✓ The low pressure "LP";

and make sure that:

- ✓ The compressor works inside the application range, within 20 sec. from the starting;
- ✓ $HP - OP < 3,5$ bar, if the compressor works outside the area A3.
- ✓ $HP - OP < 1,5$ bar, if the compressor works inside area A3.



Warning!

- Only IP54 or higher protection class oil pressure switches are allowed.
- The comply with the regulations required for Hazardous Zone 2 has to be conducted by the machine designer.

So the level of filter lodgement is not fixed but rather depends on the operating conditions of the compressor; that is, if working inside area A3, the filter will be considered dirty when the pressure drop across the filter is greater than 1.5 bar. Outside of area A3, on the other hand, but always within the application range, the filter will be considered dirty if the pressure drop exceeds the value of 3.5 bar.

⁵ This is simply a schematic drawing; refer to the dimensional drawing for each individual compressor to identify the actual position of the pressure connections.

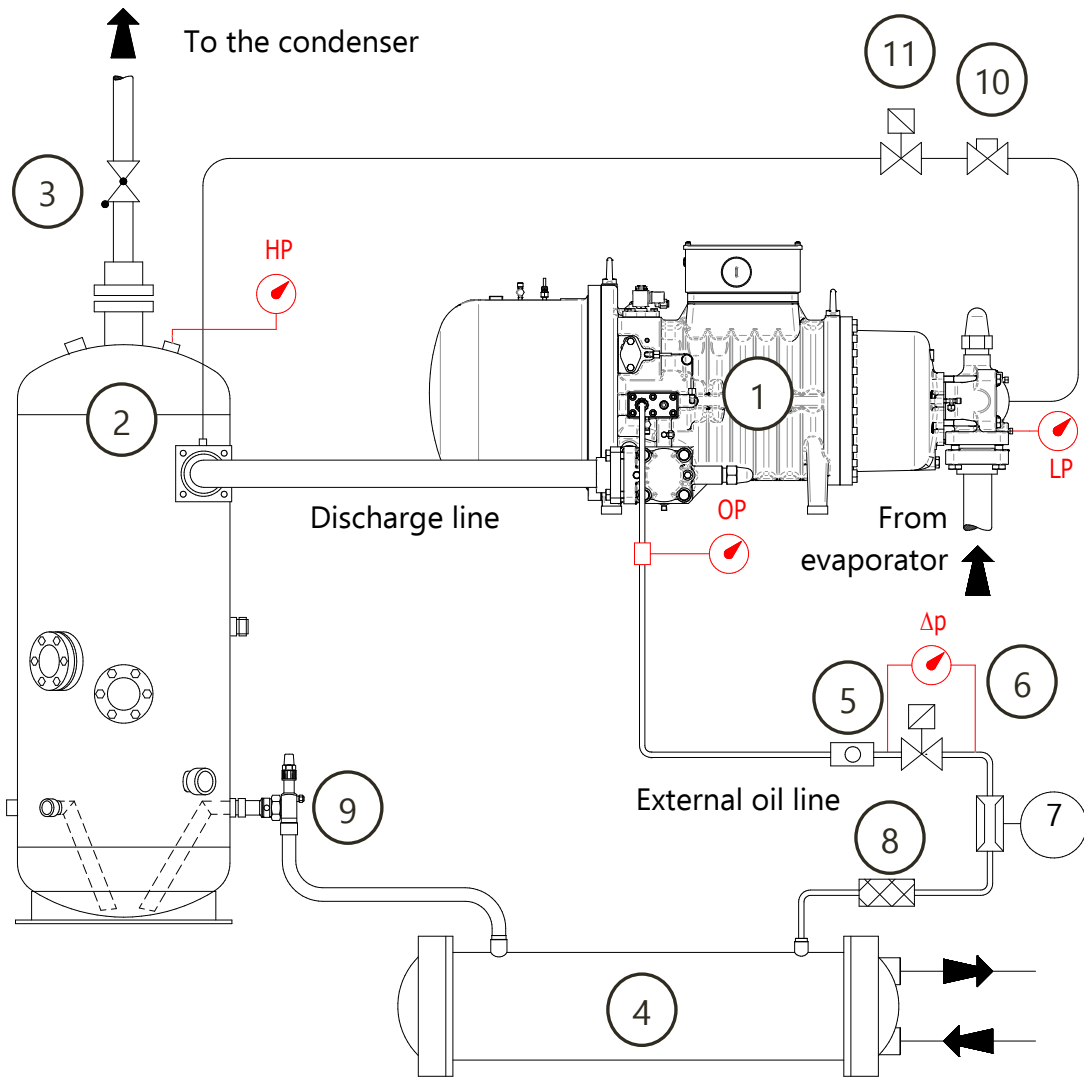


Fig. 10: measuring the HP, OP and LP pressure values in the circuit

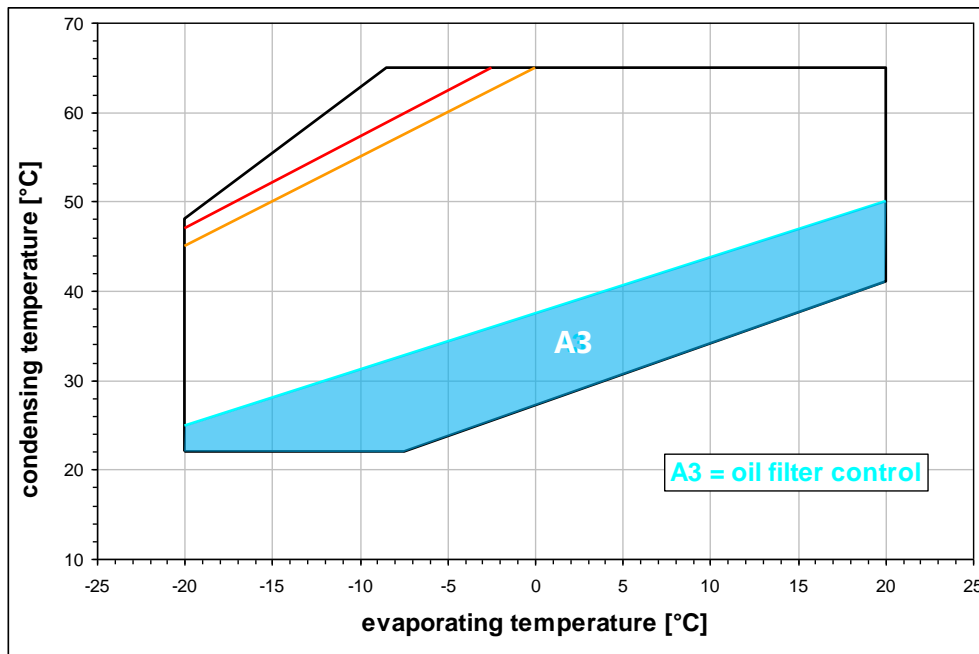


Fig. 11: generic application limit for series RW3 compressors

**Warning!**

- ✓ The compressor cannot operate for more than 20 seconds outside of the conditions required by the application limits and with the oil filter dirty. After such time, the protection system has to be activated to stop the compressor;
- ✓ The differential pressure switch for monitoring the status of the oil filter must be suitable for high pressure.

3.8.3 Flow control.

The monitoring of oil flow through the compressor could be done with a flow switch kit (see chapter 0: "*Components*")

This device is a dynamic type control cause, setting aside how much oil is in the oil separator, shows its effective flow inside the circuit to the compressor. This circulation is granted only by the difference of pressure between oil separator and suction line and is hindered by concentrated pressure drops as for instance the oil filter.

The oil flow switch with its inlet and outlet connections are assembled in the oil circulation line by customer, according to his dimensional needs.

The electrical contact of oil flow switch is "open type" but the correct working condition is that, during the running of compressor, the oil flowing through it will close the electrical contact.

If will happen that the difference between discharge and suction pressure couldn't assure the flow of oil it is beard a delay of intervention of oil flow switch.

The statements recommended by SRMTec for this delay are:

- 120 seconds during start-up procedure;
- 60 seconds during normal working.

4 Capacity control

4.1 Operating principle and oil control circuit

The SRMTec screw compressors can operate both at full load and part load.

The cylindrical chambers that house the screw rotors are fitted with a longitudinal port, whose connection with the suction side is regulated by the position of the slide valve (17), see Fig. 12.

When the slide valve completely closes the above-mentioned port, the effective compression length is maximum and coincides with the entire length of the rotors; when, on the other hand, the valve moves towards the discharge and the opening expands longitudinally, the effective working length of the rotors is reduced and as a consequence a smaller quantity of gas is processed. As a result, adjusting the volume taken in by the rotors make it possible to control the mass flow processed and definitely the cooling capacity generated by the compressor.

The slide valve is controlled by a hydraulic cylinder activated by the oil pressure.

In particular for the RW3 compressors the user can choose among two different types of partial load control:

- a) STEP or L4 configuration: the capacity is controlled into 4 fixed capacity steps (minimum-50-75 and 100% load).

The oil control circuit for the capacity control is characterized by three normally-closed solenoid valves: 14, 15 and 16.

- b) STEPLESS or LZ configuration: the capacity is controlled with continuous variation of the load, either from the minimum step to 100%, or from 50 to 100%.

The oil control circuit for the capacity control is characterized by three normally-closed solenoid valves: 14, 15 and 19.



The position and identification of the solenoid valve 16 and 19 could correspond in some models, even if the operation of the valve could differ. Please refer to chapter 16 Capacity control conversion to identify the operation mode.

The following paragraphs describe the operating principle of the oil circuit in the step and stepless configurations and, as you can see, this principle is the same in both the RW3 series compressor types.

4.1.1 Layout and identification of solenoid valves

The following table identify the position and the function of the slide valve according to the different compressor models.

Further it is also identified the position of the slide valve in the compressor body.

Layout ID	Slide valve position	STEP Control Valves position	STEPLESS Control Valves Position
1	Top		
2	Bottom		

Table 9: solenoid valves and slide valve layout ID;

RW3	H040 L030	H050 L040	H060 L050	H075 L060	H090 L070	H105 L080	H115 L095	H125 L105	H140 L115	H160 L130	H190 L160	H210 L180	H240 L200	H250 L220
Layout ref. Table 9	1		1		2			1			1			

Table 10: solenoid valves and slide valve layout correspondence

4.2 STEP capacity control

The slide valve is controlled by a hydraulic piston that can have four distinct positions, corresponding to the capacity steps: 100 - 75 - 50% - minimum step (note: the effective capacity steps may differ from the rated values, according to the normal operating conditions and from compressor to compressor).

As you can see from the picture, for all the compressors the oil circuit is characterized by the three normally-closed solenoid valves 14, 15 and 16 which respectively allow to control the three capacity steps: minimum capacity, 50 and 75%.

Below is a brief description of the operation of the oil circuit in the four compressor capacity steps.

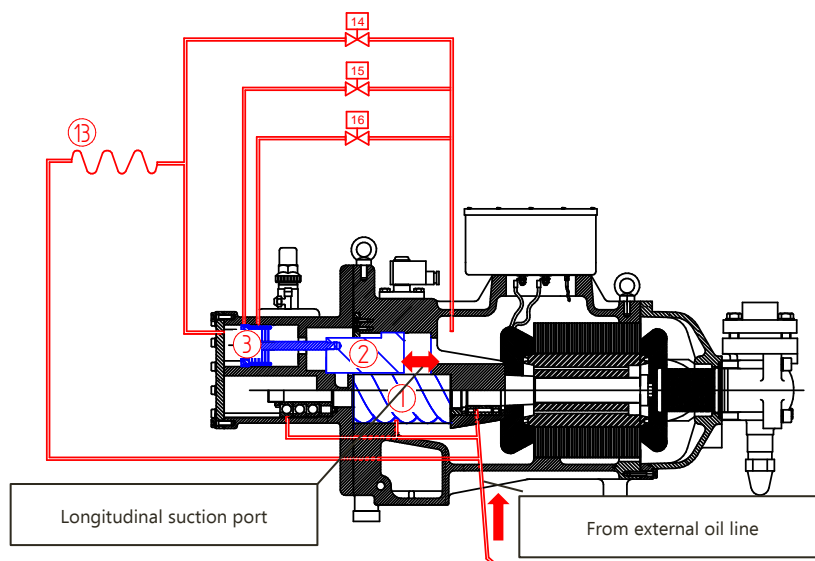


Fig. 12: step capacity control oil circuit
 14, 15, 16: capacity control solenoid valves;
 17: capacity control slide valve and operation piston;
 13: capillary tube (external to the compressor);

4.2.1 Minimum capacity step (compressor step for startup and stop)

Fig. 13 shows how the oil runs inside the control circuit. At the minimum step the solenoid valve 14 is opened, while the valves 15 and 16 are closed. Therefore, the oil coming from the oil reservoir, flows through the opened port to the suction side, not pressurizing the control cylinder. Consequently, the piston is pushed to the end stroke, the longitudinal port is completely opened on the suction side and the length along which the rotors are working is the shortest.



Caution!

Concerning the step capacity control mode (4 steps), the minimum capacity step can be used only to start and stop the compressor; it cannot be used for continuous running operations.

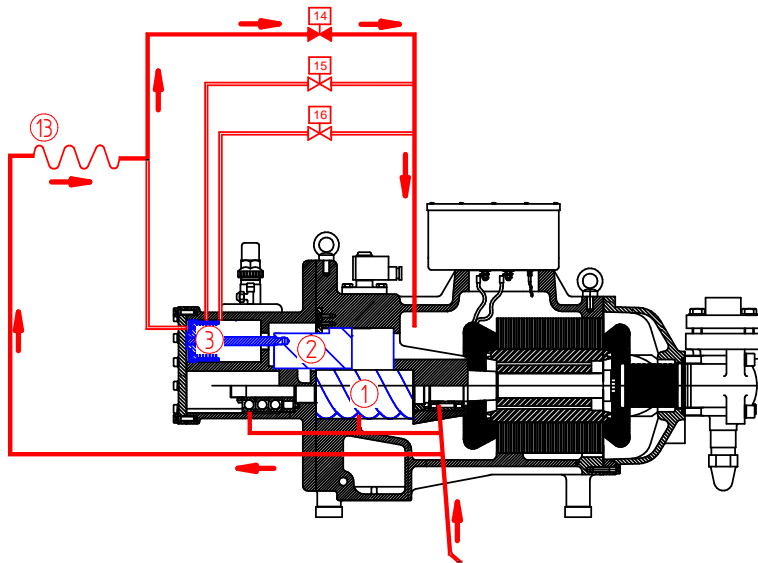


Fig. 13: Minimum capacity control oil circuit

4.2.2 50% CAPACITY

With reference to Fig. 14 at 50% capacity, the solenoid valve 15 is open while the valves 16 and 14 are closed; the oil enters the cylinder (through the 1st hole on the left) and drives the piston to the position corresponding to the 2nd hole, where the oil flows to the suction side. The slide valve also moves and partially closes the longitudinal opening, thus increasing the effective working length of the rotors.

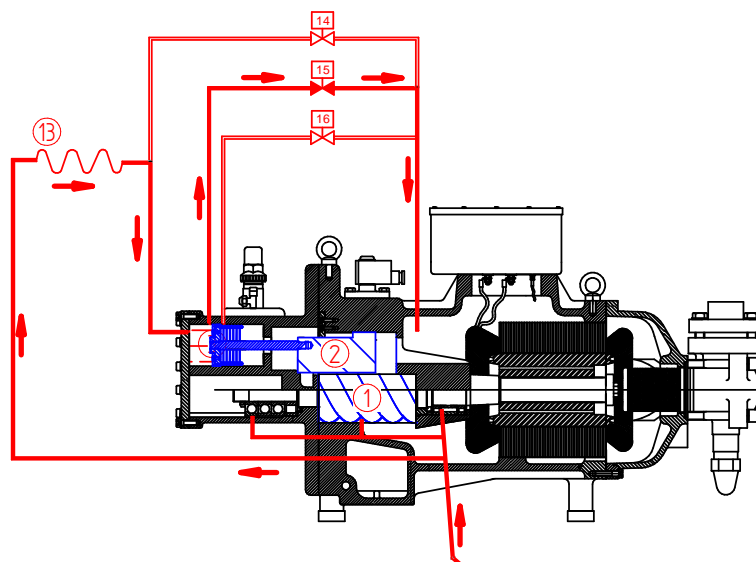


Fig. 14: capacity control at 50% step

4.2.3 75% CAPACITY

At 75 % capacity, see picture Fig. 15, the situation is similar to the previous one, but now the solenoid valve 16 is open while the valves 15 and 14 are closed; the control piston is thus positioned corresponding to the 3rd hole, the slide valve closes the opening further and increases the working length of the rotors.

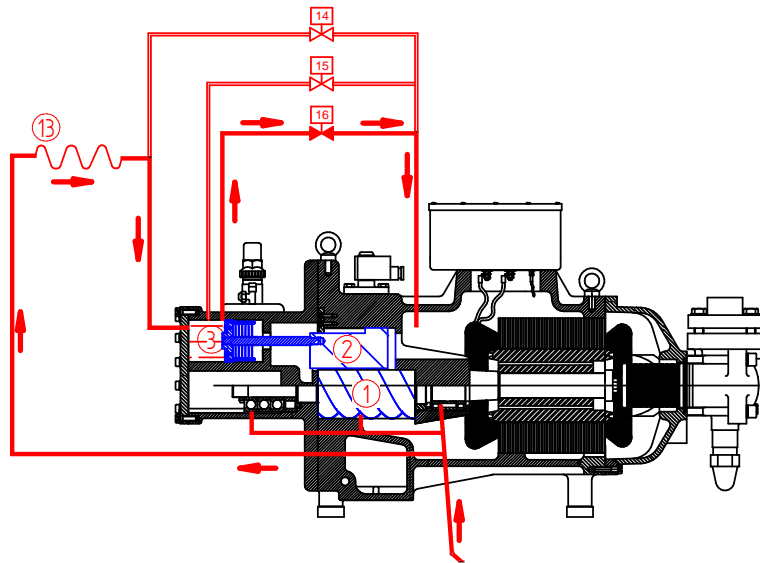


Fig. 15: capacity control at 75% step;

4.2.4 100% CAPACITY

At 100% capacity, see Fig. 16, all the solenoid valves are closed; the oil can no longer leave the cylinder and pushes the piston to the limit on the right side and the slide valve completely closes the longitudinal opening, meaning that the compression occurs along the entire length of the rotors.


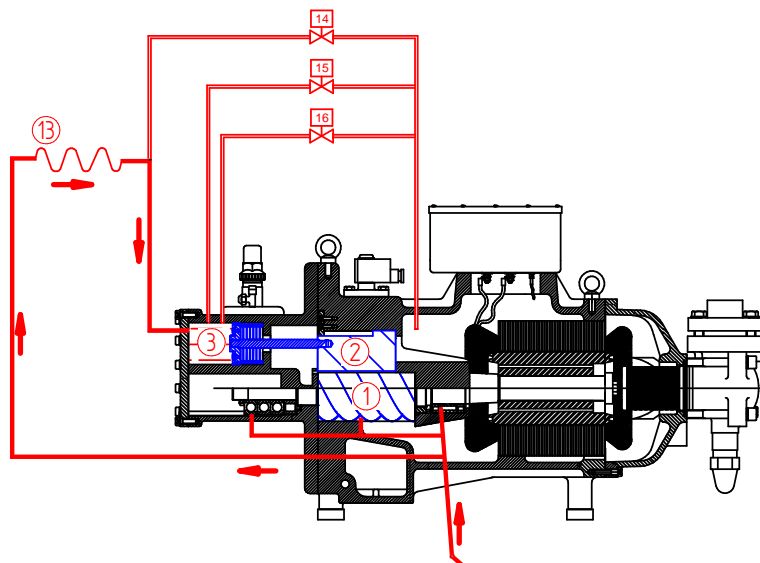


Fig. 16: capacity control at 100% step

4.2.5 Control sequence: step configuration

The oil flow is controlled by the three solenoid valves, normally-closed, positioned on the compressor casing according to the layout defined in Table 10. For all the compressors series RW3 these valves are energized according to the logic shown in Table 11.

Load control graph

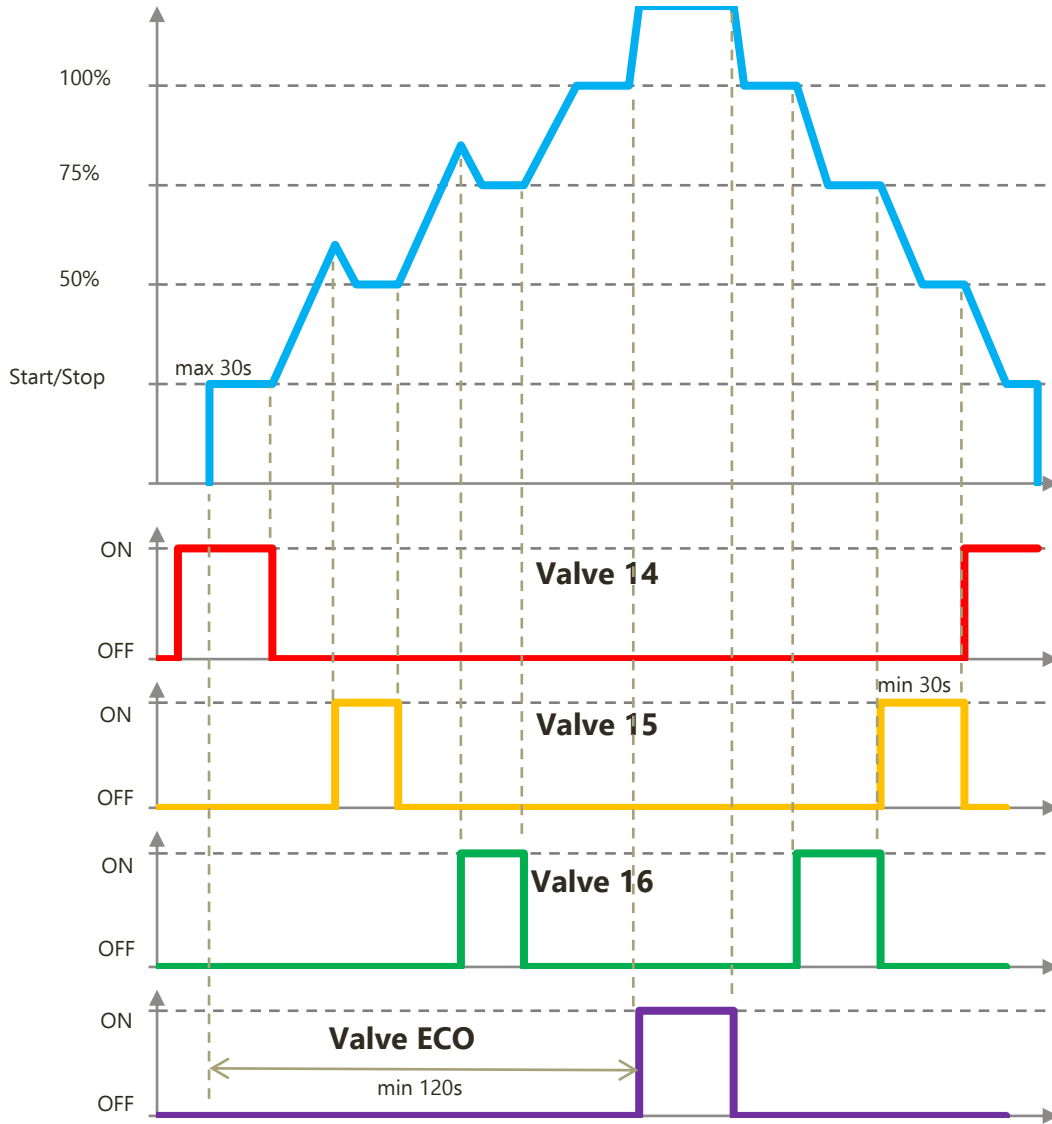

Load (capacity steps)	Solenoid valves		
	16	15	14
100%	Off	Off	Off
75%	On	Off	Off
50%	Off	On	Off
Minimum step (start up and stop)	Off	Off	On

"Off" = solenoid not energized;
 "On" = solenoid energized;

Table 11: operating logic of the solenoid valves for step capacity control;

4.3 Infinity capacity control: STEPLESS

Infinite capacity control is recommended whenever the cooling capacity of the system has to be controlled with a high degree of precision, while it is not very useful in systems featuring high inertia, where step capacity control is more suitable.

The cooling capacity is therefore controlled by using the normally-closed solenoid valves (14), (15) e (19) with the following logic:

- ✓ (19): fill the hydraulic cylinder for increasing the cooling capacity required by the users;
- ✓ (14), (15): empty the hydraulic cylinder, until the minimum step or 50%, to decrease the cooling capacity required by the users.

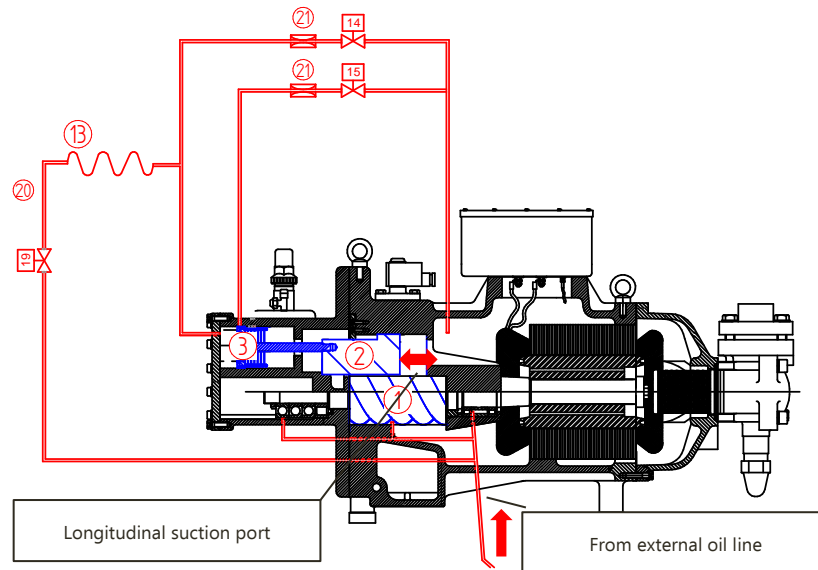


Fig. 17: infinite capacity control oil circuit (step less configuration)



The position and identification of the solenoid valve 16 and 19 could correspond in some models, even if the operation of the valve could differ. Please refer to chapter 16 to identify the operation mode.

This brings about continuous control of the flow processed by the compressor, from the minimum value to the maximum value. For details on how to convert the configuration from the step to stepless for all the compressors RW3, see chapter 16.

The oil channels must be throttled to achieve slower motion and more accurate positioning of the control piston. With reference to the Fig. 17, the load channel (20) can be throttled by installing a modified capillary tube or a reduced orifice (13). The unload channel (14) or (15) can be throttled by installing an orifice (21) upstream the solenoid valve.

Both items are supplied on request as they belong to the conversion kit from the configuration step to the stepless one, and have to be assembled by the user (see chapter 16 Capacity control conversion)

4.3.1 Control sequence: stepless configuration

Cooling capacity control is obtained using solenoid valves (14),(15) and (19) which have to be excited according to logic control shown in Fig. 18 and Table 12.

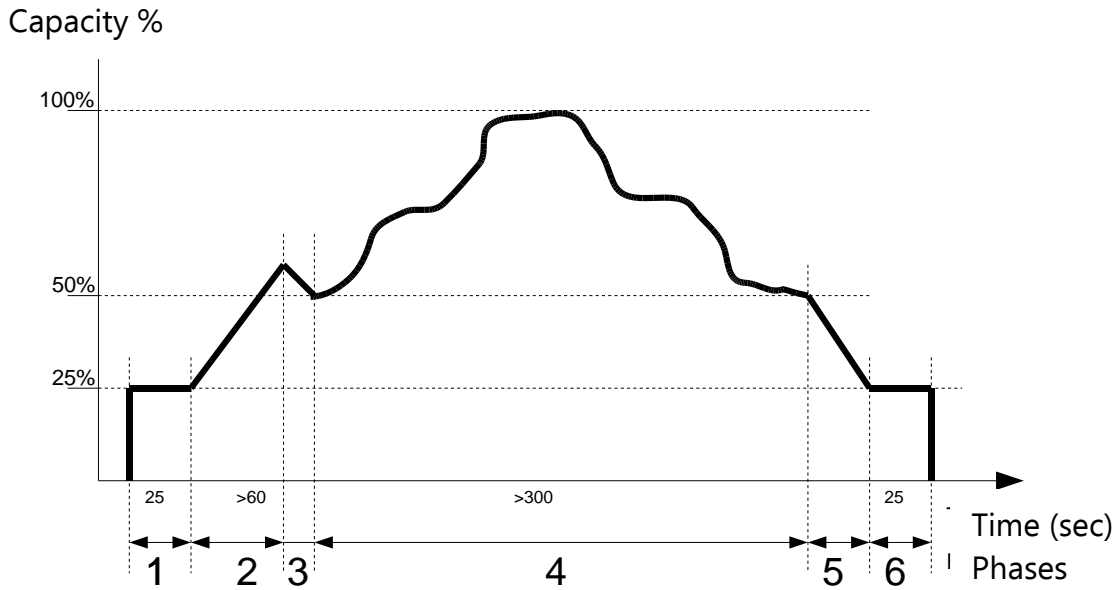


Fig. 18 Logic control of solenoid valves for stepless configuration

STEPLESS CONTROL 100÷50%				
Phase	Regolation	SOLENOID VALVE		
		14	15	16
1	Start-up	ON	OFF	OFF
2	Loading > 50%	OFF	OFF	ON
3	Unloading to 50 %	OFF	ON	OFF
4	Modulation	OFF	ON/OFF	ON/OFF
5	Unloading to 25%	ON	OFF	OFF
6	Stop	ON	OFF	OFF

“Off” = solenoid not excited

“On” = solenoid excited

Table 12: Control sequence of solenoid valves in stepless configuration

Attention !



The working at partial load condition is allowed according to the application limits reported in the chapter 11 “Application range”.

Particularly, the compressor can work at the minimum capacity step only during the startup phase, the stop phase (see paragraph 3.3) and in any case for short period of time (see previous page).

At any rate the part load operation requires specific actions to prevent:

- ✓ The insufficient return of oil due to the reduced speed of the gas;
- ✓ Higher temperatures on the discharge side, caused by the compression lower efficiency and by the lower refrigerant mass flow;
- ✓ An overheating of the electrical motor that might occur whenever the tension value is out of the given range.

Thorough and extensive testing is recommended.

4.4 Variable speed control

RECOMMENDATIONS:



Usage of frequency converter to control the load of the compressor and of the system could give significant advantage in system performances.
Usage of frequency converter in combination of compressor internal load control is discouraged.



Warning!

The installation of the inverter is permitted only in Safe Zone areas.

Danger of spark formation due to switching operation.

Use shielded cables between frequency converter and compressor motor

The usage of a frequency converter permits the speed control with conventional asynchronous motors, reaching the highest efficiency control method for compressors.

In the variable-frequency control mode, the operating frequency of the motor can be adjusted automatically to greatly reduce the reactive loss of the motor.



All the SRMTec compressor are designed to operate in the frequency range 25Hz-60Hz, and the motor have to be connected according to the Fig. 19.

When using frequency converter for capacity control, several basic factor has to be taken into account:

- positive displacement compressors have a practically constant torque requirement over the entire speed range;
- to grant the constant torque operation of the compressor, the voltage and frequency must be changed proportionally;
- the speed of the asynchronous motor is affected by the slipping of the motor.

This means that, as conventional inverters cannot supply motor operating voltages higher than supply voltage, when the motor is driven at frequency higher than the nominal speed (>50Hz) it will be supplied with "under voltage" conditions. The selection of a special winding motor voltage (380V-3-60Hz) could avoid this situation but the sizing of the inverter is affected by the larger current drawn.

For details on motor size and electrical data please refer to Table 19; for special motor voltage please check the data on SRMTec selection software or contact SRMTec.

When the driving frequency instead is much lower than the nominal, the refrigerant flow could be not sufficient to cool down the motor.

It is so necessary to check in the SRMTec selection software the application envelope limitations according to the rotating frequency.

The motor speed control has to be regulated between minimum and maximum speed with smooth and reduced variation of load. Refer to the picture below for a reference of time and speed variation.

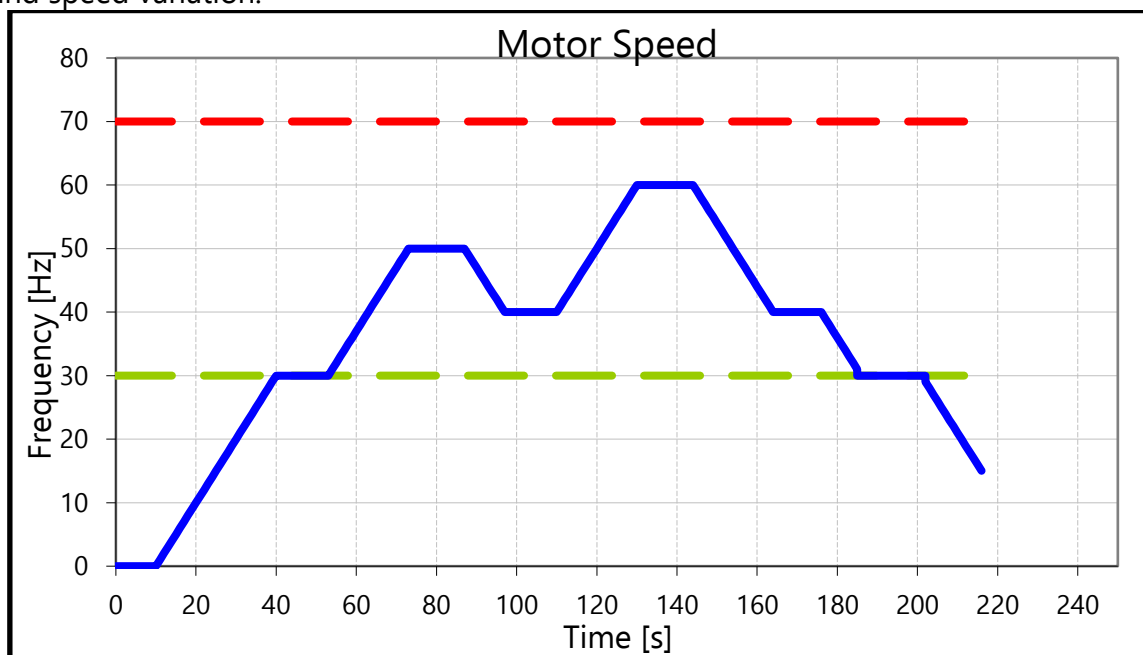


Fig. 20 Speed vs Time variation example

4.5 Procedure for starting and stopping the compressor

To limit the peak current when starting, the electric motors are started in the part-winding configuration, or alternatively with the windings connected in the star configuration (see chapter 6: Electrical motor). This, however, means also a drop in the starting torque, and as a result the resisting torque needs to be reduced in order to start the compressor without excessively overloading the electric motor. For this purpose, SRM Tec recommends to start the compressors at the minimum capacity step, see Fig. 21.

Concerning the RW3 series compressors, distinction needs to be made between the step and the stepless configuration.

In the configuration with 4 steps the slide valve automatically returns to the position of minimum capacity after the compressor stops. In fact, due to the pressure difference the oil can flow out of the cylinder to the crankcase through the pipe marked by number 20, see Fig. 12. Therefore the compressor can start again at the minimum capacity.

In the infinite configuration, on the other hand, this pipe is closed by the solenoid valve (19), see Fig. 17, which is normally closed. Consequently, unless the solenoid valve (14) is energized before stopping, the oil cannot flow out of the cylinder and as a result the compressor is not discharged.

For this reason, so as to stop and re-start the compressor at the minimum capacity step the valve (14) must be energized for around 25 seconds before switching off the compressor, see Fig. 21. Moreover the valve (14) should be kept energized during the compressor standstill periods.

The starting and stopping procedure indicated in Fig. 21 has to be followed for all the screw compressors, both in the step and in the stepless version, as this avoids noisy stopping due to the temporary reverse rotation with high mass flow.



Attention!

If it is necessary to shutdown for an emergency, the compressor will stop at the current capacity step. In the stepless configuration then, before restarting the unit, make sure that the compressor is at the minimum capacity step.

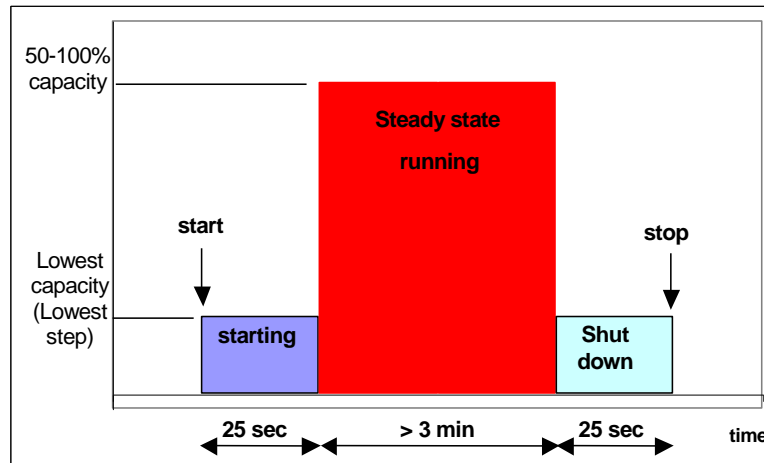


Fig. 21: starting and stopping the compressor;

4.6 Operating limits at part load

Operation at part load increases the discharge temperature (it is recommended not to exceed 110° C), and reduces the cooling effect of the electrical motor due to the reduced refrigerant flow. At the same time the partial load operation has a slightly lower efficiency than at full load.

In particular, the discharge temperature increases if:

- The condensing pressure increases;
- The evaporating pressure decreases;
- The temperature of the suction gas (superheat) increases.

To define the operating limits at part load, see chapter 11 "Application range".

The pictures below exemplify, through the highlighted area, the limited application envelopes at partial load.

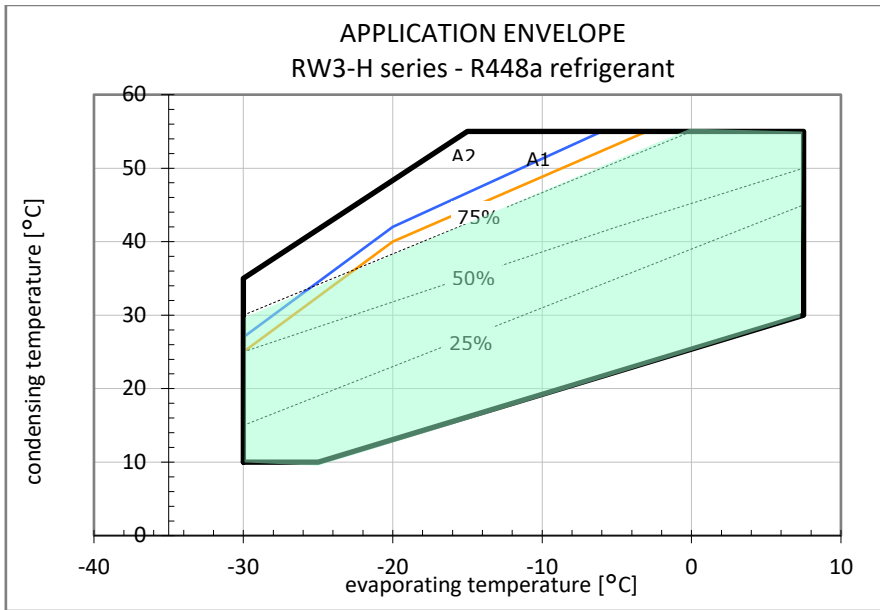


Fig. 22 Example of limited application limit at 75% load

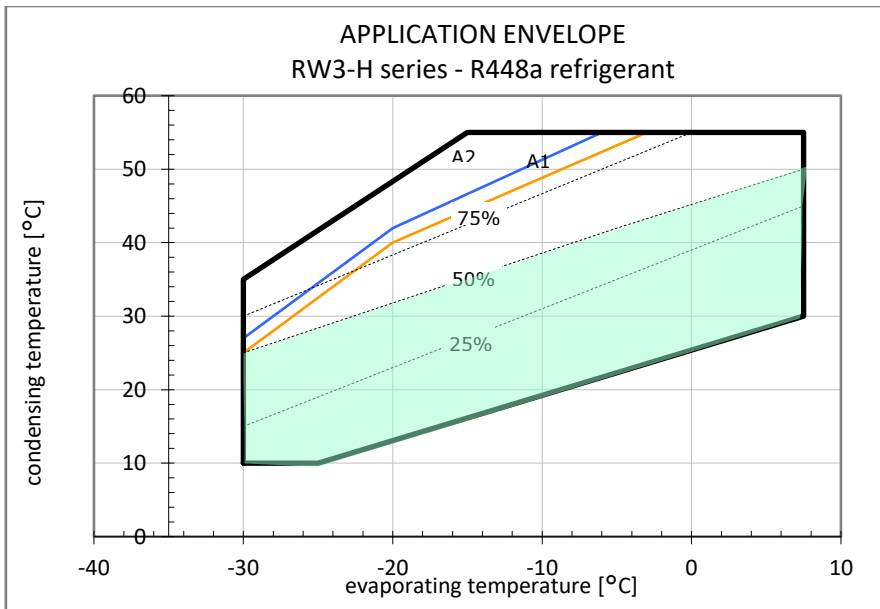


Fig. 23 Example of limited application limit at 50% load

5 Components

5.1 Suction filter (standard)

The suction filters of the RW3 compressor range could be of different shapes, illustrated below:

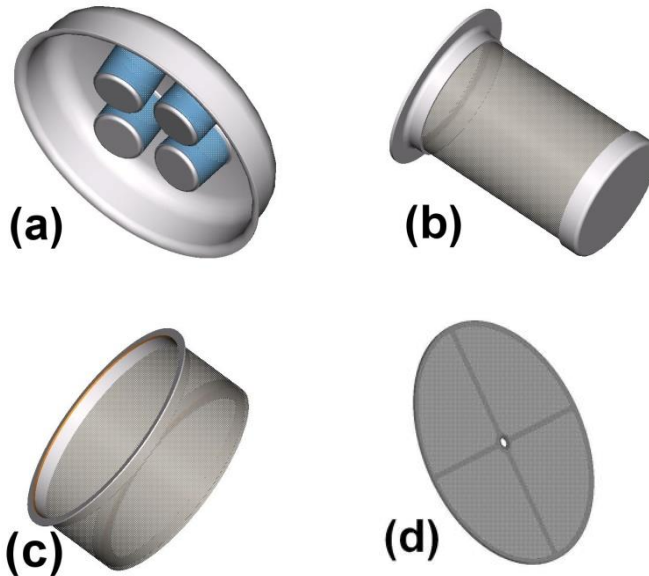


Fig. 24 Suction filters shape

Some models give also the possibility to inspect and clean without disassembling the suction valve.

On the table below the shape and possibility of inspection of the suction filter is indicated according to the compressor model:

RW3	H040	H050	H060	H075	H090	H105	H115	H125	H140	H160	H190	H210	H240	H250	
	L030	L040	L050	L060	L070	L080	L095	L105	L115	L130	L160	L180	L200	L220	
Filter shape	(a)			(b)			(b)			(b)			(c)		
Inspectable by	Disassembling suction valve and cover			Disassembling suction valve			Disassembling suction valve			Disassembling suction valve			Disassembling suction valve and cover		

Table 13: suction filter shape and possibility to inspect

Refrigerant are good solvents for sediments, grease and oil in the pipe work; large quantities of contaminants can end up in the compressor and controls.

Attention!



- Apply maximum cleanliness for pipelines and components.
- Braze under a protective gas (use dry nitrogen).
- Follow cleanliness requirements according DIN 8964 or comparable standards
- Apply suction side cleaning filter in case of widely extended systems.

5.2 Safety valve (standard)

The compressors are fitted with a safety valve that when necessary opens a passageway between the high and low pressure sections, see Fig. 25. The valve is sized in accordance with the European standard EN 700-24035-2-34. The safety valve opens when the pressure differential, between discharge and suction, exceeds 30 bar, and closes again automatically.

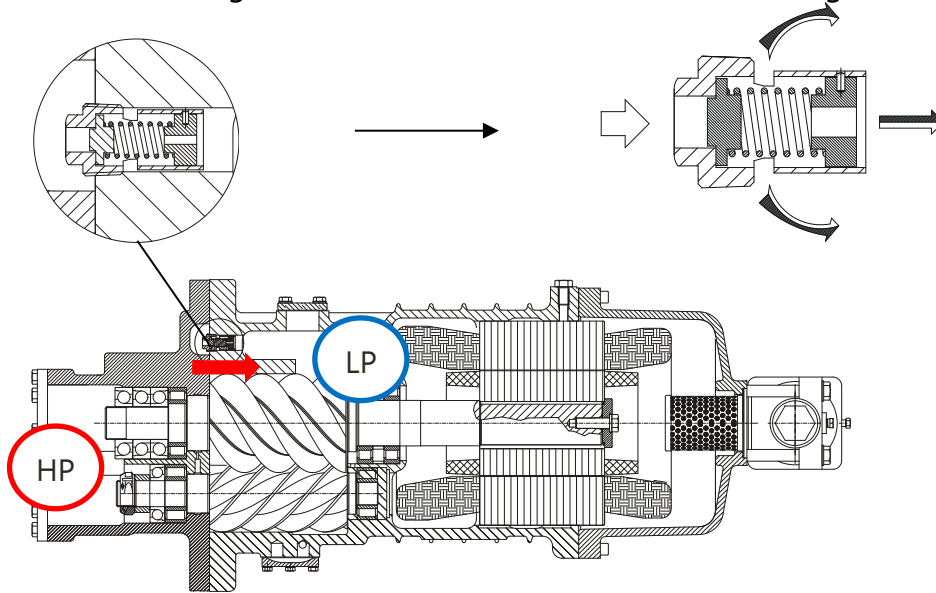


Fig. 25: safety valve shape and position

Attention!



- The compressor safety valve is intended exclusively for compressor protection
- The compressor safety valve has, for any reason, not to be considered for the protection of the refrigerating system.

5.3 Check valve (standard)

To avoid the backflow of the gas when the compressor stops, due to the pressure difference, the compressor is fitted with a check valve installed immediately upstream of the discharge shut-off valve, see Fig. 26.



Attention!

When the compressor stops, following the balancing of the pressure, there is a temporary reverse rotation of the rotors, which produces a typical noise. If this noise lasts more than 3 seconds, check and if necessary replace the check valve.

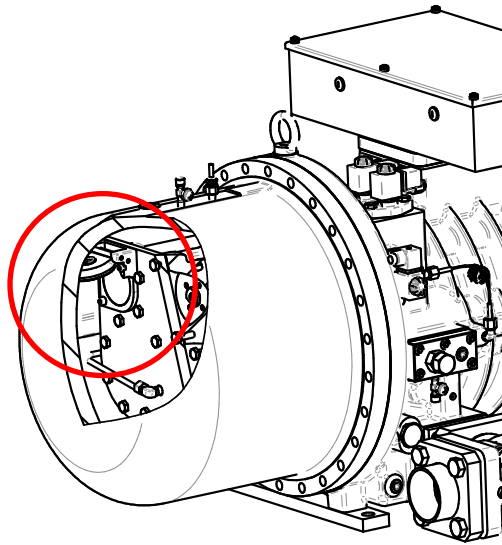


Fig. 26: check valve

5.4 Rubber vibration damper (standard)

The compressors are delivered with as standard with a vibration dampers kit, inserted only for shipment in the electrical box.

Fig. 27 below shows the location of the rubber vibration dampers underneath the 4 feet of the RW3 compressor.

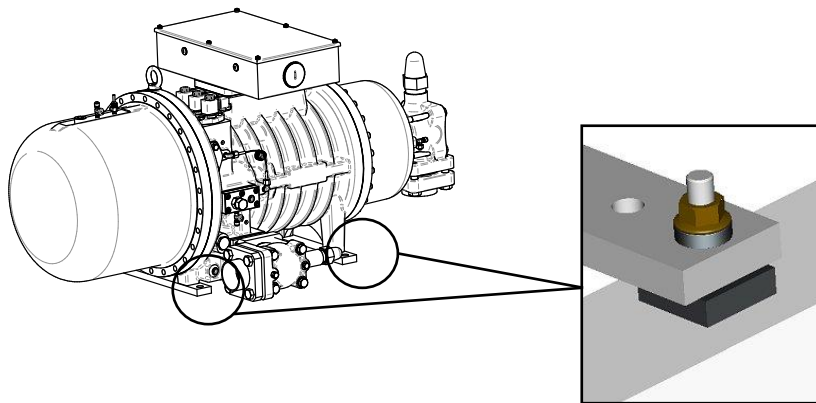


Fig. 27: position of the rubber vibration damper underneath the 4 feet of the compressors;



In order to completely fulfil their purposes, the vibration dampers must be compressed as little as possible and the exact tightness of the self-locking bolt is achieved when the deformation of the vibration damper bushing is around 0.5 mm less than its size when relaxed.

Fig. 27 and Fig. 28 respectively show the correct assembly of the vibration damper, and the assembly diagram for all the components included in the kit.

Below are the codes of the vibration damper kit for all the series models.

RW3	H040	H050	H060	H075	H090	H105	H115	H125	H140	H160	H190	H210	H240	H250
	L030	L040	L050	L060	L070	L080	L095	L105	L115	L130	L160	L180	L200	L220
Vibration damper kit	303243							303321						

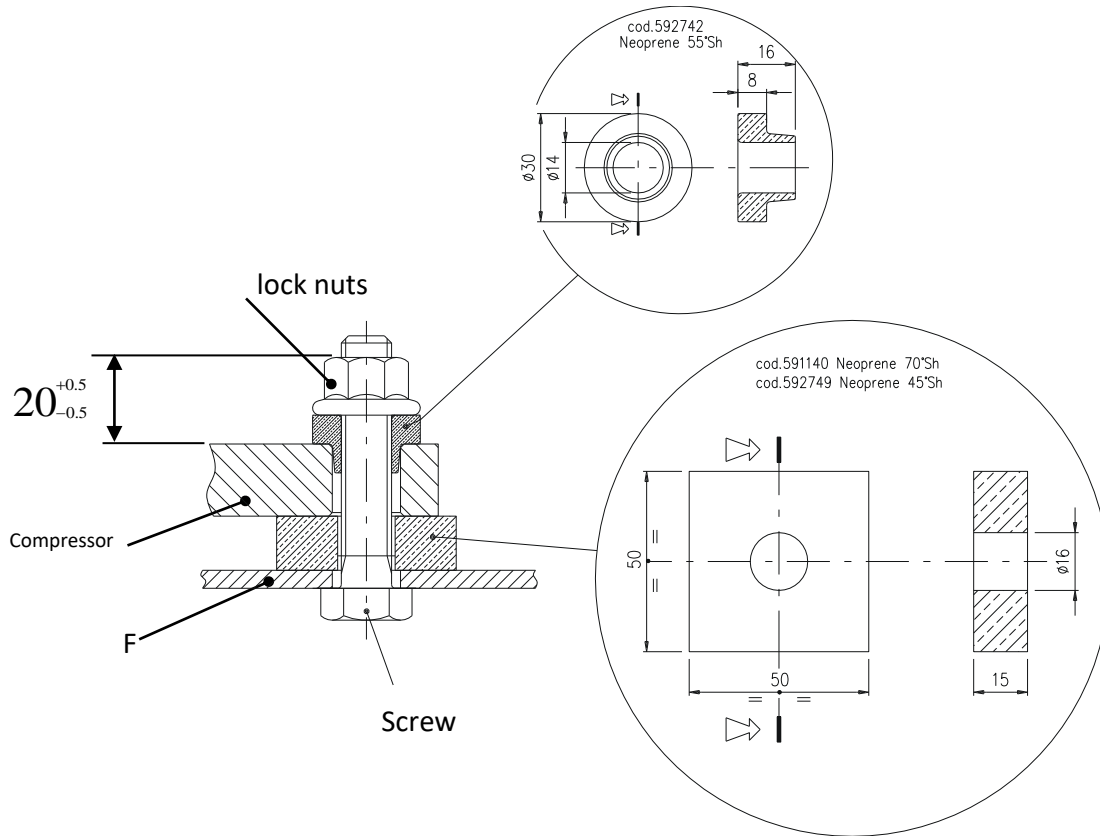


Fig. 28: Assembly diagram for the rubber vibration dampers;

5.5 Oil line components



The oil line kit is supplied as standard. The voltage of the electrical components could be selected within different solutions.

The following kits are available, depending on the model and the voltage, in case of separate purchase:

RW3	H040	H050	H060	H075	H090	H105	H115	H125	H140	H160	H190	H210	H240	H250
	L030	L040	L050	L060	L070	L080	L095	L105	L115	L130	L160	L180	L200	L220
110V-50/60Hz	303993			303053					303055					
230V-50/60Hz	303994			303054					303056					


Table 14 Oil line kits

Please contact SRM Italy Srl for more details on the components of the oil flow switch kit and technical details.

 	<p>Warning! THE PROTECTION MODULE MUST NOT BE INSTALLED FOR ANY REASON INSIDE THE ELECTRICAL BOX when used with A2L refrigerants! The sparks produced by the internal relay could provoke and ignition. Is mandatory to install the protection module in an Electrical box installed in a Safe Zone.</p>
--	---

Technical specifications of the flow switch:

Switch value:	6 l/min H ₂ O (N. 680015) and 10 l/min H ₂ O (N. 680016)
Voltage supply:	250V AC – 1A – 60VA
Max temperature:	85°C

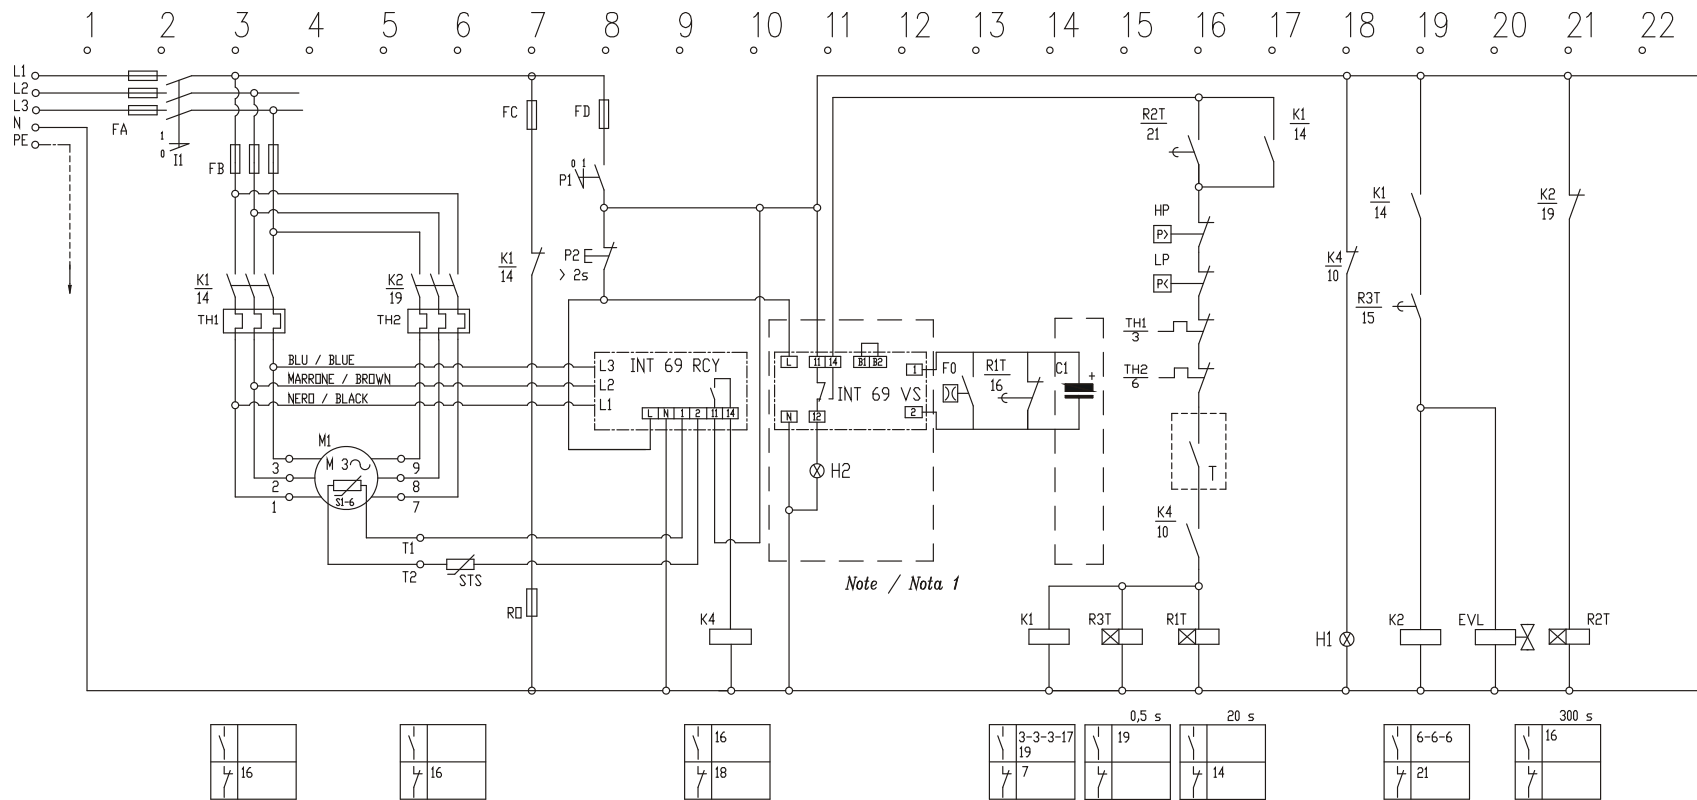

KEY:

- | | | | |
|-----|-----------------------------------|------|---------------------------------|
| T | CONTROL THERMOSTAT | M | COMPRESSOR |
| FA | MAIN FUSE | H | MAIN SWITCH |
| FB | COMPRESSOR FUSE | RO | OIL HEATER |
| FC | CONTROL CIRCUIT FUSE (OIL HEATER) | STS | DISCHARGE TEMPERATURE SENSOR |
| FD | CONTROL CIRCUIT FUSE | SI-6 | MOTOR TEMPERATURE SENSOR |
| HP | HIGH PRESSURE SWITCH | PI | ON-OFF SWITCH |
| LP | LOW PRESSURE SWITCH | P2 | MOTOR PROTECTION RESET |
| H | SIGNAL LAMP (MOTOR PROTECTION) | EVL | SOLENOID VALVE (LIQUID LINE) |
| K1 | START CONTACTOR | H2 | SIGNAL LAMP (OIL FLOW FAULT) |
| K2 | RUN CONTACTOR | RIT | TIME RELAY (OIL FLOW CONTROL) |
| R2T | TIME RELAY "PAUSE TIME" | C1 | ELECTROLYTIC CAPACITOR |
| R3T | TIME RELAY START - RUN | FO | OIL FLOW SWITCH |
| K4 | MOTOR PROTECTION RELAY | TH1 | RELAY OVERCHARGE FIRST WINDING |
| | | TH2 | RELAY OVERCHARGE SECOND WINDING |

Fig. 29: wiring diagram for the connection of the flow switch; electric motor with part-winding configuration PW (MCE007\$2);
 Note 1: INT 69 B2 and electrolytic capacitor included only in appropriate kits.

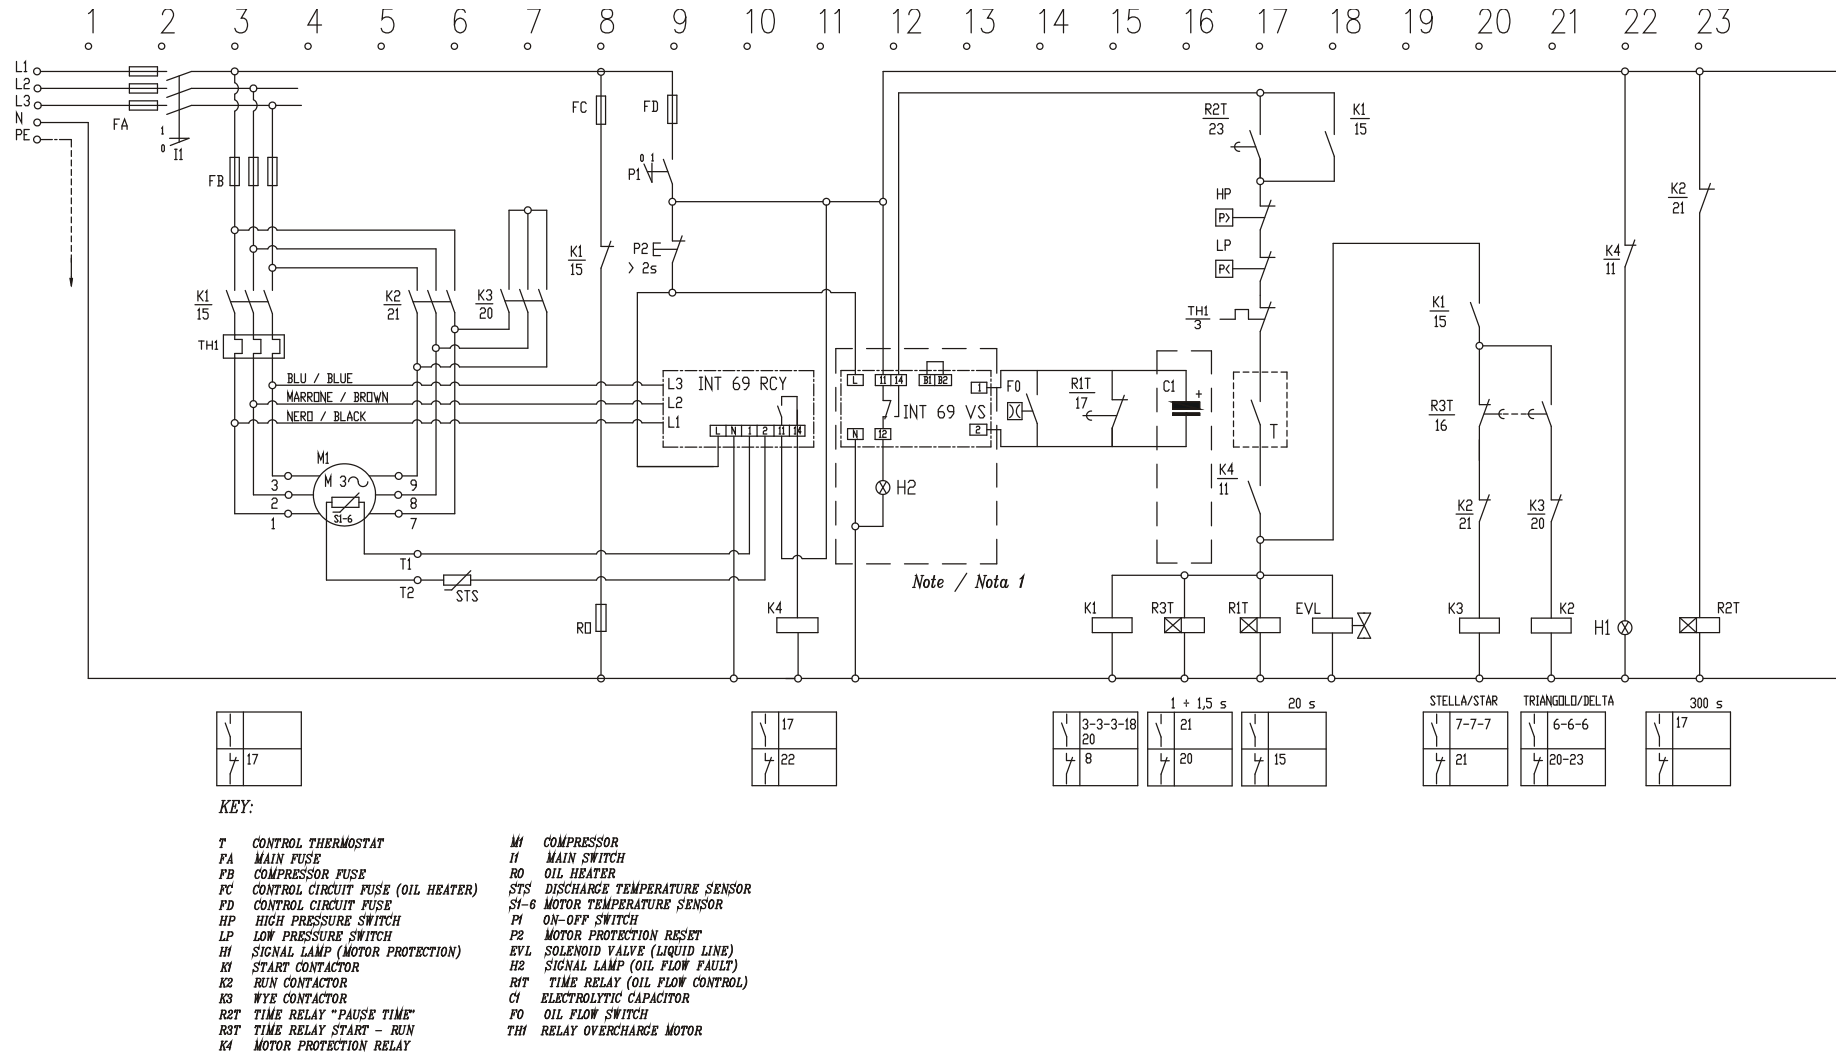


Fig. 30: wiring diagram for the connection of the flow switch; electric motor with star-delta configuration YΔ (MCE008\$2);
 Note 1: INT 69 B2 and electrolytic capacitor included only in kit appropriate.

6 Electrical motor



The electrical connection of the machine to the network line must be carried out by the customer at its own expense and responsibility, by use of specialized personnel and in accordance with safety standard EN 60204.



It is mandatory to install upstream of the power supply line a suitable isolating device with residual current protection coordinated with the earth system.



Each connection must be performed under the conditions described in par. 1.5

6.1 General

The motor stator is secured to the compressor casing by using a screw and a key. Hence no special tools are required to replace the motor.

The electrical motors are designed and tested in compliance with the European standard EN 700-24035-2-34.

The electric motors are three-phase asynchronous two-pole motors (2900 rpm at 50 Hz). To reduce the peak current, they are available in the part-winding (PW) or star/delta (Y/ Δ) version; for the standard supply see Table 19 in paragraph 7.1 Electrical data.

Depending on the compressor model there are two different types of PW motors which differ from each other for the connection of the three phases: star or delta type. In any case at the compressor starting only a part of the windings is powered, while in normal operation all are powered. The PW versions can be:

- ✓ Double star (Y-YY);
- ✓ Double delta (Δ - $\Delta\Delta$).

As regards the mains connections, there is no difference between the two PW motor configurations. Fig. 31 and Fig. 32 below show the internal connections of the phases, depending on the configuration of the electrical motor.

• PART-WINDING CONFIGURATION

Important note:

The two above-mentioned part-winding types of motors can be distinguished by measuring the electrical resistance between terminals 1-2-3 and 7-8-9.

With reference to Fig. 31:

- ✓ in the Y-YY configuration there is continuity between terminals 1 and 2, 1 and 3, 2 and 3, 7 and 8, 7 and 9, 8 and 9; while there is insulation between terminals 1 and 7/8/9, 2 and 7/8/9, 3 and 7/8/9.
- ✓ in the Δ - $\Delta\Delta$ configuration there is continuity between each pair of terminals and there is not reciprocal insulation between any of them.



PART-WINDING CONFIGURATION

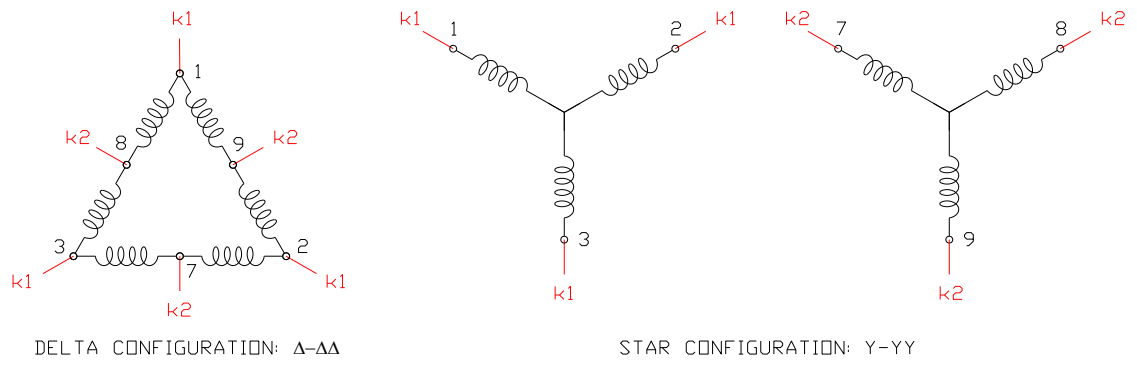


Fig. 31: internal winding connections for the motors with part-winding configuration

• STAR-DELTA CONFIGURATION



Important note:

With reference to Fig. 32, measuring the electrical resistance between terminals 1-2-3 and 7-8-9, the star-delta version has the following values: continuity between terminals 1 and 8, 3 and 7, 2 and 9, and insulation between terminals 1 and 2/3/7/9, 2 and 1/3/7/8, 3 and 1/2/8/9, 7 and 1/2/8/9, 8 and 2/3/7/9, 9 and 1/3/7/8.

STAR-DELTA CONFIGURATION

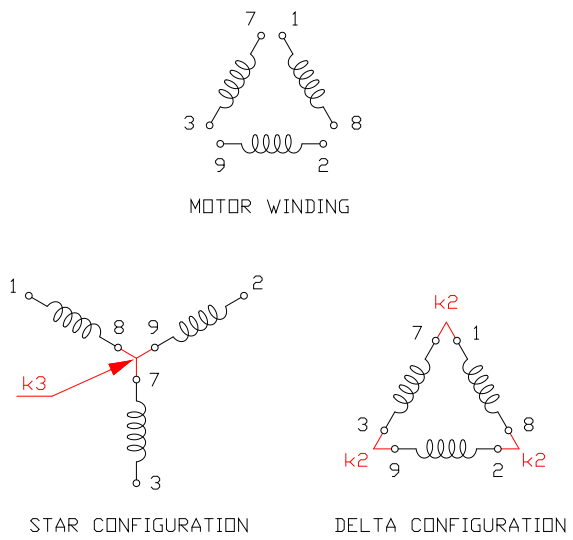


Fig. 32: internal winding connections for the motors with star-delta configuration

By starting the electrical motor either in part-winding configuration or with the windings in star connection for the electrical motor in star-delta configuration there is a reduction in the starting current LRA and starting torque. To achieve a reduction in the resisting torque and

consequently start the motor without overloading it, the compressor needs to be started at the minimum capacity step, see chapters 4: "Capacity control" and 13.5: "Operating instructions".



Note:

Then with the screw compressors no by-pass system between the high and low pressure is required for reducing the resisting torque on starting.



Fig. 33 shows how to connect the electrical motor to the three-phase line, both for the star-delta configuration and the part-winding one. It also gives the time sequence for the contactors. The compressor therefore starts as follows:

- ✓ In the PW motors, the delay in closing the run contactor K2 from when the starting contactor K1 closes must be 1 second maximum (recommended value 0.6 sec), see Fig. 33.
- ✓ In the star-delta configuration, on the other hand, the starting duration in star configuration (closing of contactors K1-K3) must not exceed 1.5 sec (recommended value 0.8/1 sec); while when switching to delta configuration (closing of contactors K1-K2), contactor K2 must be closed with a delay of 35-50 msec from the instant when contactor K3 is opened, see Fig. 33 again.

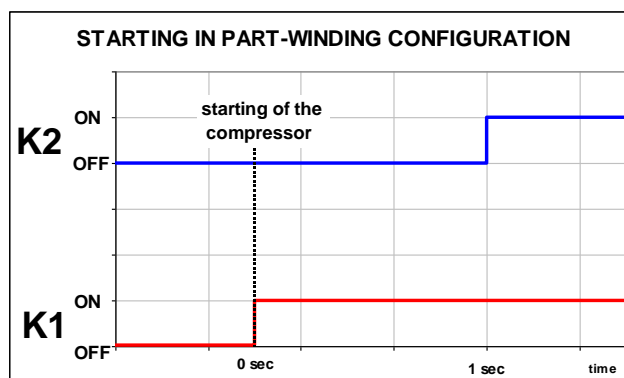
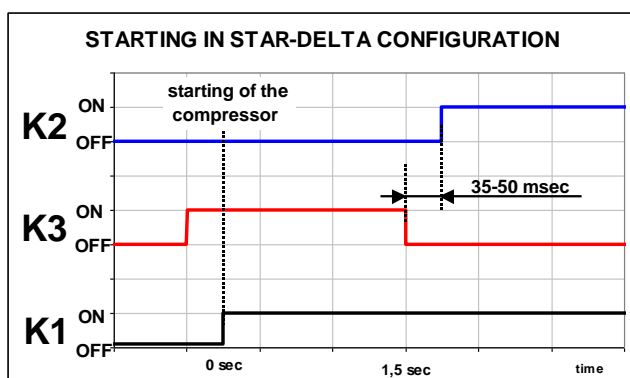
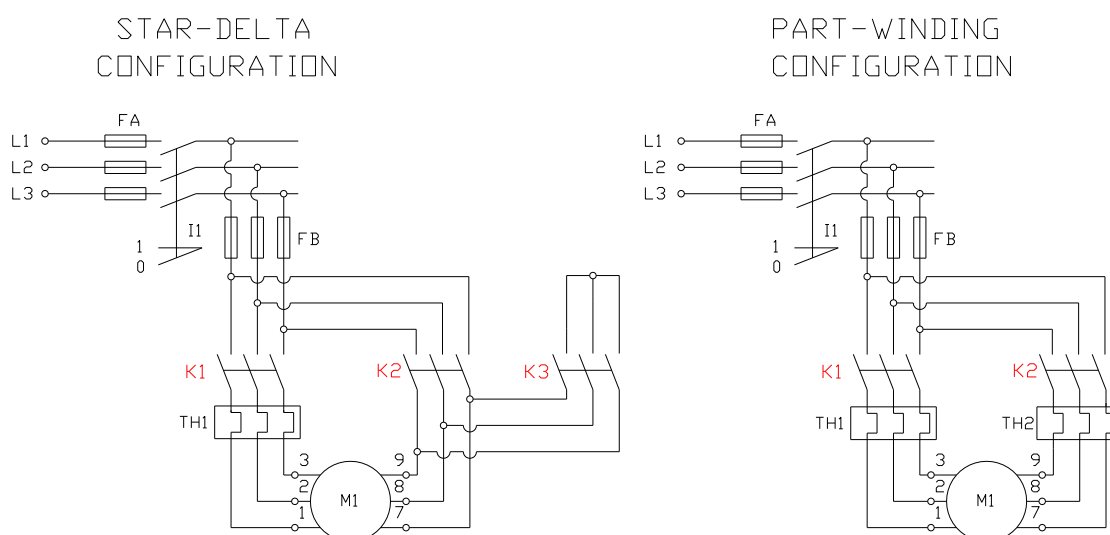


Fig. 33: connection diagrams to the three-phase network and time charts for the activation of contactors K1, K2 and K3 in the two compressor starting modes: star-delta and part-winding;

FA, FB: main fuses and compressor's fuses

I1: main switch; M1: electrical motor; TH1, TH2: overload relay;

6.2 Protection devices

6.2.1 Motor thermistors (standard)

To protect the motor against high temperatures six PTC thermistors connected in series are inserted in the motor windings. Three thermistors are positioned on the intake side of the motor (suction side) and have an activation temperature of 100°C, while the other three are positioned on the opposite side of the motor (discharge side) and have an activation temperature of 120°C.

The resistance of the chain of thermistors when cold (temperature less than 40°C) must be less than 1800 Ohm; but even if just one of the thermistors reaches the critical temperature, the resistance of the chain will increase exponentially, with the consequent activation of the INT 69 B2 electronic module (INT 69 SNY as an option), which cut off the power supply to the motor. The resistance can be measured between terminals T1 and T2 on the terminal block.



Attention !

When measuring the resistance of the thermistors' chain, never apply a voltage higher than 3V.

6.2.2 INT 69 B2



Warning!

THE PROTECTION MODULE MUST NOT BE INSTALLED FOR ANY REASON INSIDE THE ELECTRICAL BOX with A2L refrigerants!



The sparks produced by the internal relay could provoke and ignition.

Is mandatory to install the protection module in an Electrical box installed in a Safe Zone.

This electronic protection module is supplied as standard with the compressor and in combination with the thermistors it carries out the function of monitoring the temperature of the electrical motor windings. The thermistors in the motor can be connected in series to a further PTC probe for monitoring the temperature of the oil (set point 120°C; Fig. 36 shows the position of the temperature sensor in the compressor; see also chapter 12: "Additional cooling").

The protection device is electrically connected by the manufacturer as shown in Fig. 34. For the technical specifications of the module, see Table 15.

Activation threshold	4500 Ohm;
Reset threshold	2750 Ohm;
Power supply	115-230 V \pm 10%, 50/60 Hz, 3VA;
Switching relay	250 V AC, max 2.5 A, switch capacity 300 VA At least AC/DC 20mA
Ambient temperature	-30° C...+70° C
Fuse required	4 A quick blow

Table 15: INT 69 B2 technical specifications

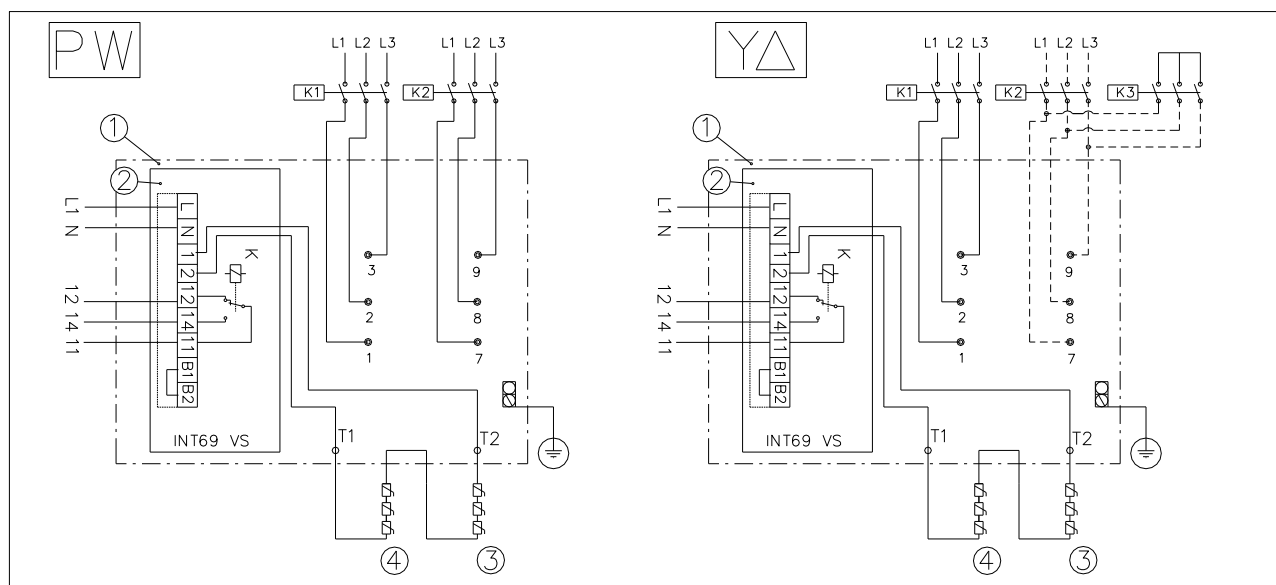


Fig. 34: electrical connections to the INT 69 B2 module (part-winding and star delta);

1	Terminal plate	L1/N	Phase + neutral
2	Motor protection device INT 69 B2	11/14	Control circuit
3, 4	Motor thermistors PTC	1/2	Connection cables to thermistor (orange)
L1, L2, L3	Supply voltage	12	alarm
PW	K1 Contactor 1st PW (PW 50%) K2 Cont. 2nd PW (PW 50%)	B1, B2	Link for automatic reset
Y/·	K1 and K3 Start contactors (Y) K1 and K2 Run contactors (·)	K	Relay (supplied fitted)



To protect the electronic module, it is recommended to install a 4A fast-blow fuse to prevent the contacts from melting in the event of short-circuits.

The correct operation of the module must be checked when testing the installation and after any fault occurred in the auxiliary circuit. For this purpose, remove one of the connection wires from terminals T1 and T2 on the terminal block (not powered). When supplying power to the auxiliary control circuit, the power runs between terminals 12 and N, signaling an alarm.

In the event where the thermal protector on the electric motor is activated, this must be reset by specialist personnel. The device can only be reset after the causes of activation have been identified and removed.

Attention!

Following an alarm and after the motor has cooled down, an internal lockout prevents the compressor from starting again.



1. Reset the INT 69 B2 module by briefly disconnecting the power supply through the main switch or by pressing a specific button that can be installed for this purpose in the power supply line.
2. Never apply power to the module terminals 1-2, B1-B2, nor to terminals T1 and T2 of the terminal plate.

A phase monitor must be installed to check the correct direction of the electrical motor rotation.

6.2.3 INT 69 SNY (optional)

	Warning! THE PROTECTION MODULE MUST NOT BE INSTALLED FOR ANY REASON INSIDE THE ELECTRICAL BOX!
	The sparks produced by the internal relay could provoke and ignition. Is mandatory to install the protection module in an Electrical box installed in a Safe Zone.

The INT 69 SNY module is available as an optional. This module carries out the following functions:

- ✓ monitors the temperature of the electrical motor and the oil;
- ✓ monitors the direction of rotation of the motor;
- ✓ monitors for a missing phase.

The electrical connections on the INT 69 SNY protection module are shown in Fig. 34 (PW and Star/Delta). For the technical specifications of the module see Table 17 in the following pages.

Monitoring the temperature

The temperature of the motor and the oil are monitored by the PTC sensors. The oil temperature sensor is connected in series to the chain of thermistors in the electrical motor (for its position of the sensor on the compressor see Fig. 36).

Manual reset of alarm through disconnection of power supply for at least 5 seconds .

The temperature is monitored through its value (static control) and through the swiftness of its increase (dynamic control).

Only when the alarm is given by the temperature static control, and only if the reset level has been reached, the motor protector will perform an automatic reset after 5 minutes from the alarm detection.

Attention!

Following an alarm and after the motor has cooled down, an internal lockout prevents the compressor from starting again.



1. Reset the INT 69 SNY module by briefly disconnecting the power supply through the main switch or by pressing a specific button that can be installed for this purpose in the power supply line.
2. Never apply power to the module terminals 1-2, B1-B2, nor to terminals T1 and T2 of the terminal plate.



TAKE NOTE: Before re-starting the compressor following an alarm, the operator must check the temperature of the motor and the oil temperature, making sure that the resistance of the PTC chain is less than 2,9 kΩ.

Monitoring the direction of rotation of the motor

The correct direction of rotation of the motor is monitored by measuring the sequence of the phases at the compressor terminals.

The function has a manual reset and requires the power supply to be disconnected for at least 5s . The check is performed in the first 5 seconds at each starting.



Attention!

Following an alarm for wrong rotation, an internal lockout prevents the compressor from starting again.



1. Put the system in the Machine switched-off status
2. Reset the INT 69 SNY module by briefly disconnecting the power supply through the main switch or by pressing a specific button that can be installed for this purpose in the power supply line.
3. Before re-starting the compressor check the correct sequence of the phases

Monitoring for a missing phase

The phases are monitored during the start-up and. The alarm causes the stop of compressor and it could not start before 5 minutes.

So the reset is automatic till maximum 10 consecutive restarts (in the first 24 hours of working) with a missing phase the compressor is stopped definitively. After this, it must be reset manually by disconnecting the power supply for at least 2 seconds.




Attention!

Following a repeated alarm for missing, an internal lockout prevents the compressor from starting again.



4. Put the system in the Machine switched-off status
5. Reset the INT 69 SNY module by briefly disconnecting the power supply through the main switch or by pressing a specific button that can be installed for this purpose in the power supply line.
6. Before re-starting the compressor check the power supply of the compressor.

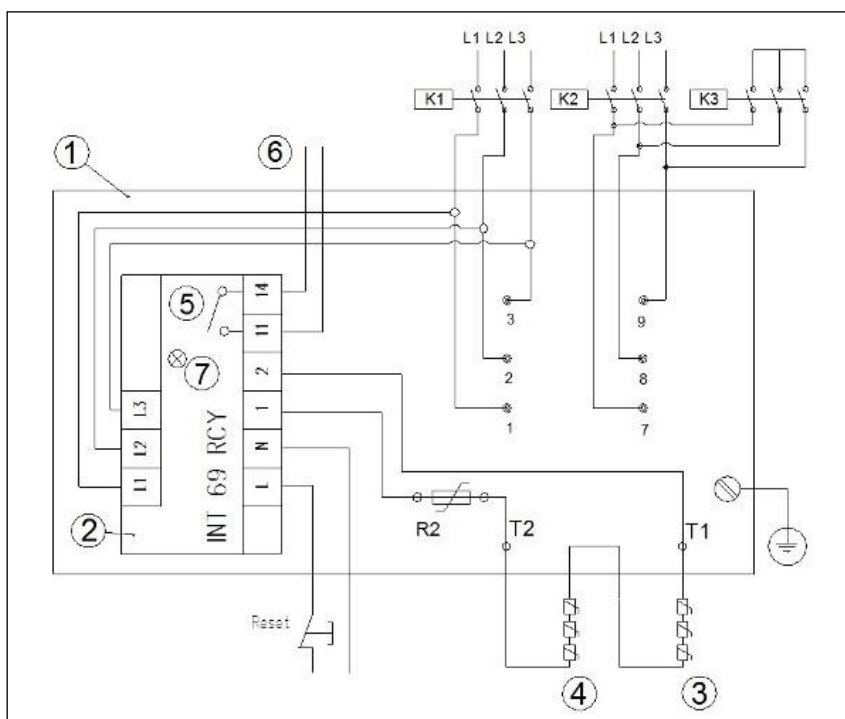

1) Terminal box

2) Motor protection device INT 69 SNY

3-4) Motor thermistors PTC

R2) Discharge gas temperature sensor

L1-L2-L3) Power supply

PW motor: K1 PW contactor 50%

K2 PW contactor 50%,
 Y/D motor: K1-K3 start contactors (Y)
 K1-K2 run contactors (D)
 L/N) Phase + neutral 230V-50/60Hz
 6) Control circuit
 1/2) Connection cables to thermistors

5) Relay
 7) Led

Fig. 35: electrical connections to the INT 69 SNY module (part-winding and star delta)

Trip value	4500±20% Ohm
Reset value	2750±20% Ohm
Power supply	115/120 V or 230/240 V -15/+10%, 50/60 Hz, Absorbed power : 3VA
Output relay	AC, 240 V, 2,5A max continuous current, C300 Potential-free normally open contact (NOC)
Ambient working conditions (temp.)	-30°C...+70°C
Required fuse	4 A, fast type
Motor supply	200...690V AC ±10%, 3 AC, 50/60 Hz

Table 16: INT 69 SNY technical specifications;

The INT 69 SNY has to be fitted in a main control box far away from the compressor according to the following indications:

- ✓ The connection cables to the motor terminals must be connected following the specified sequence: L1 to terminal 1, L2 to terminal 2 and L3 to terminal 3; check the direction of rotation with an indicator;
- ✓ To connect the module to the PTC sensors, only use shielded cables or a twisted pair (danger of induction);

Alarm signals

The motoprotector INT 69 SNY is equipped on its box with a led for displaying the kind of the alarm occurred. The kind of optic signalling identifies the motoprotector status and in case of alarm also its cause.

- ✓ Solid GREEN Led: fault-free status
- ✓ Blinking RED Led: alarm status

Through the cyclical sequence of the red blinks it is possible to identify both the category and the type of the detected alarm.

Specifically, with reference to the table and examples reported below, the blinking cycle can be divided onto two subsequent sequences: at first that of the alarm category and afterwards that of the alarm type.

- 1^ cycle sequence (alarm category):

- ✓ 1 blink followed by a pause of 1 second identifies alarms caused by the electric motor temperature (PTC) or by the discharge temperature;
- ✓ 2 blinks followed by a pause of 1 second identify alarms caused by the electrical phases (Phase Monitoring).

- 2[^] cycle sequence (alarm type, in succession to the first sequence):


A certain number of blinks according to the alarm type (look at the following table), followed by a pause of 2,5 seconds.

Error Category		Fault Type	
Number of Flash	Error Category	Number of Flash	Fault Type
1	PTC	1	Static
		2	Dynamic
		3	Time delay active (PTC < Restart Limit)
2	Phase Monitoring	1	False phase sequence
		2	Phase failure

Table 17 INT69SNY Alarm Signal

For your convenience hereby we report a couple of examples:

1. "PTC" alarm caused by a too fast increase of the motor temperature.

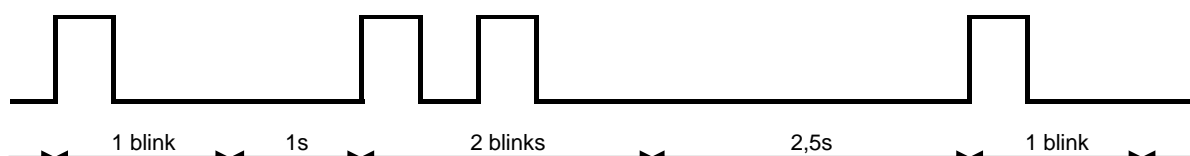

2. "Monitoring Phase" alarm caused by wrong phase sequence.



6.2.4 Lubricant/Discharge temperature probe (optional)

The lubricant and discharge temperature could be protected from excessive values with the installation of a temperature probe.

The Fig. 36 illustrate the position of installation of the temperature probe on the compressors.

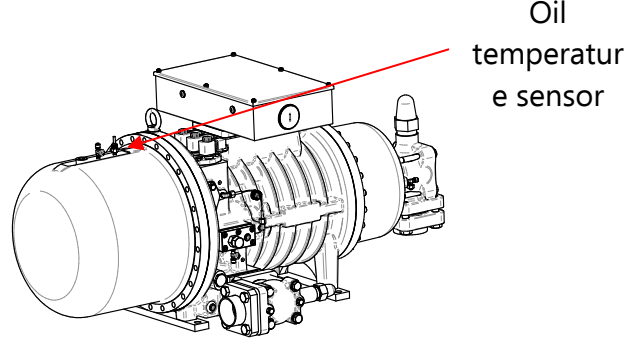
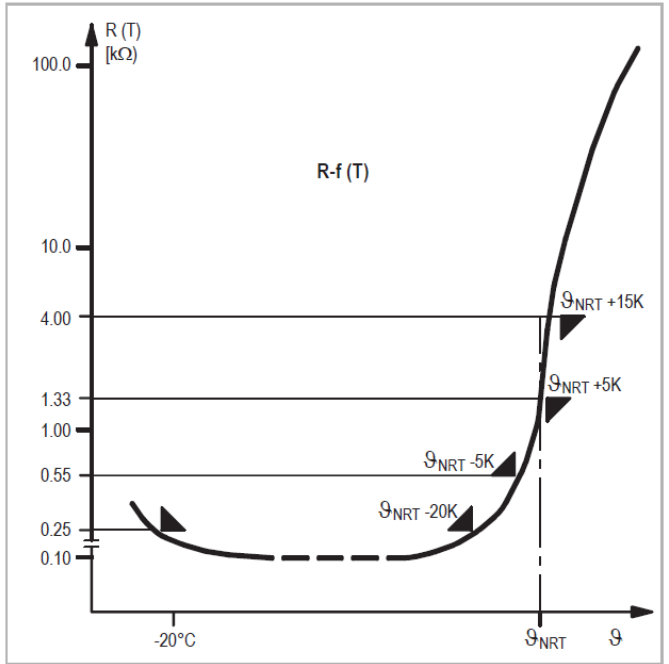


Fig. 36: position on compressor for oil temperature monitoring sensor

The temperature sensor is of PTC type with the following parameters, according to DIN 44081:

Max. operation voltage	30V
Reset value	2750±20% Ohm
Nominal tripping value	120°C
Ambient working conditions (temp.)	-25°C...+60°C
Max. operating temperature	+180°C
Max. operating pressure	46bar



Table 18: Temperature probe technical specifications



Characteristics curve of a single PTC acc. to DIN 44081

Fig. 37 Characteristics response curve of a single PTC

6.3 Power supply

	<p>Warning!</p> <p> For the direction of rotation of the rotors see chapter 1. If the motor turns in the opposite direction the compressor can be seriously damaged.</p>
---	---

- Motor power supply for standard version (part-winding and star-delta):
400 V - 3 phases - 50 Hz / 460 V - 3 phases - 60 Hz (other power supply on request);
- Permissible voltage range: $\pm 10\%$ of rated voltage;
- Permissible voltage unbalance between L1 - L2 - L3: $\pm 2\%$;
- Maximum voltage drop during the starting phase: 10 % of rated voltage;
- Permissible frequency range: $\pm 2\%$ of rated frequency;
- Permissible current unbalance: 5 /12 % calculated as follows:

Currents on the first contactor: $I_1 - I_2 - I_3$

Currents on the second contactor: $I_7 - I_8 - I_9$

Currents of each supply phase

$$I_R = I_1 + I_7$$

$$I_S = I_2 + I_8$$

$$I_T = I_3 + I_9$$

Unbalance of the three R - S - T currents:

$$I_M = \frac{I_R + I_S + I_T}{3}$$

$$SB_3\% = \frac{\text{MAX}\{|I_R, I_S, I_T\} - I_M}{I_M} \cdot 100$$

$$SB_3\% < 5\%$$

Unbalance of the six 1 - 2 - 3 - 7 - 8 - 9 currents:

$$I_M = \frac{I_1 + I_2 + I_3 + I_7 + I_8 + I_9}{6}$$

$$SB_6\% = \frac{\text{MAX}\{|I_1, I_2, I_3, I_7, I_8, I_9\} - I_M}{I_M} \cdot 100$$

$$SB_6\% < 12\%$$

6.4 Selection of electrical components

The various electrical components: cables, fuses etc. must be sized considering the maximum current that can be absorbed by the electrical motor during normal operation, i.e. the FLA.

Specifically, erring on the side of safety, in Part-Winding configuration the contacts on the motor contactors must be sized for a current equal to at least 65% of the maximum operating current (FLA). On the other hand, for the star-delta configuration the contacts must be sized for a current equal to at least 75% of the FLA.

7 Data

7.1 Electrical data

Mod. RW3		H040	H050	H060	H075	H090	H105	H115	H125	H140	H160	H190	H210	H240	H250	
Nominal motor power	HP (kW)	40 (30)	50 (37)	60 (45)	75 (55)	90 (67)	105 (78)	115 (85)	125 (90)	140 (105)	160 (120)	190 (140)	210 (154)	240 (179)	250 (184)	
Nominal Voltage (V)	V	400/3/50Hz - 460/3/60Hz														
PW	Starting current (A)	LRA Y	277	303	373	280	351	652	586	646	-	-	-	-	-	
		LRA YY	398	406	547	459	580	1015	965	770	-	-	-	-	-	
	Max running current (A)	FLA	75	90	105	124	140	168	182	196	-	-	-	-	-	
Y/ Δ	Starting current (A)	LRA Y	131	134	182	159	193	254	318	318	354	374	453	543	595	595
		LRA Δ	398	406	547	459	580	770	953	953	1155	1155	1333	1645	1802	1802
	Max running current (A)	FLA	75	90	105	124	140	168	182	196	249	70	305	335	360	410
Standard Delivery - Fornitura standard																

Table 19: electrical data of the compressors (RW3-H..)

Mod. RW3			L030	L040	L050	L060	L070	L080	L095	L105	L115	L130	L160	L180	L200	L220
Nominal motor power	HP/kW		30 (22)	40 (30)	50 (37)	60 (45)	70 (52)	80 (60)	90 (67)	100 (75)	120 (90)	140 (105)	150 (110)	160 (120)	180 (135)	200 (150)
Nominal Voltage (V)	V	400/3/50Hz - 460/3/60Hz														
PW	Starting current (A)	LRA Y	277	277	303	262	280	405	646	646	-	-	-	-	-	-
		LRA YY	331	398	406	422	459	670	953	953	-	-	-	-	-	-
	Max running current (A)	FLA	65	80	88	103	117	139	154	163	-	-	-	-	-	-
Y/ Δ	Starting current (A)	LRA Y	109	131	134	139	159	193	318	318	276	354	374	453	543	543
		LRA Δ	331	398	406	422	459	580	953	953	876	1155	1155	1333	1645	1645
	Max running current (A)	FLA	65	80	88	103	117	139	154	163	196	210	236	250	270	300
Standard Delivery - Fornitura standard																

Table 20: electrical data of the compressors (RW3-L.);


7.2 Technical data

Mod. RW3		H040	H050	H060	H075	H090	H105	H115	H125	H140	H160	H190	H210	H240	H250
Nominal motor power:	HP (kW)	40 (30)	50 (37)	60 (45)	75 (55)	90 (67)	105 (78)	115 (85)	125 (90)	140 (105)	160 (120)	190 (140)	210 (154)	240 (179)	250 (184)
		L030	L040	L050	L060	L070	L080	L095	L105	L115	L130	L160	L180	L200	L220
		30 (22)	40 (30)	50 (37)	60 (45)	70 (52)	80 (60)	90 (67)	100 (75)	120 (90)	140 (105)	150 (110)	160 (120)	180 (135)	200 (150)
Displacement at 50/60 Hz	m ³ /h	118/ 142	150/ 180	175/ 210	205/ 246	237/ 284	286/ 343	318/ 382	341/ 409	402/ 482	445/ 534	510/ 612	562/ 674	600/ 720	700/ 840
Weight	Kg	245	255	265	410	420	535	540	545	665	675	710	1030	1050	980
Discharge line, internal Ø	mm/ "	42 / 1 5/8"	42 / 1 5/8"	42 / 1 5/8"	54 / 2 1/8"	54 / 2 1/8"	54 / 2 1/8"	54 / 2 1/8"	54 / 2 1/8"	80 / 3 1/8"	80 / 3 1/8"	80 / 3 1/8"	80 / 3 1/8"	80 / 3 1/8"	80 / 3 1/8"
Suction line, internal Ø	mm/ "	54 / 2 1/8"	54 / 2 1/8"	54 / 2 1/8"	67 / 2 1/8"	67 / 2 1/8"	80 / 3 1/8"	80 / 3 1/8"	80 / 3 1/8"	92 / 3 5/8"	92 / 3 5/8"	92 / 3 5/8"	104,8 / 4 1/8"	104,8 / 4 1/8"	104,8 / 4 1/8"
Capacity control steps		STEP: 100,75,50%, minimum capacity; STEPLESS: from minimum capacity to 100% or from 50 to 100% - on demand													
Protection devices		INT 69 SNY													

Table 21: technical data

8 Dimensional drawings and packaging

8.1 Compressors

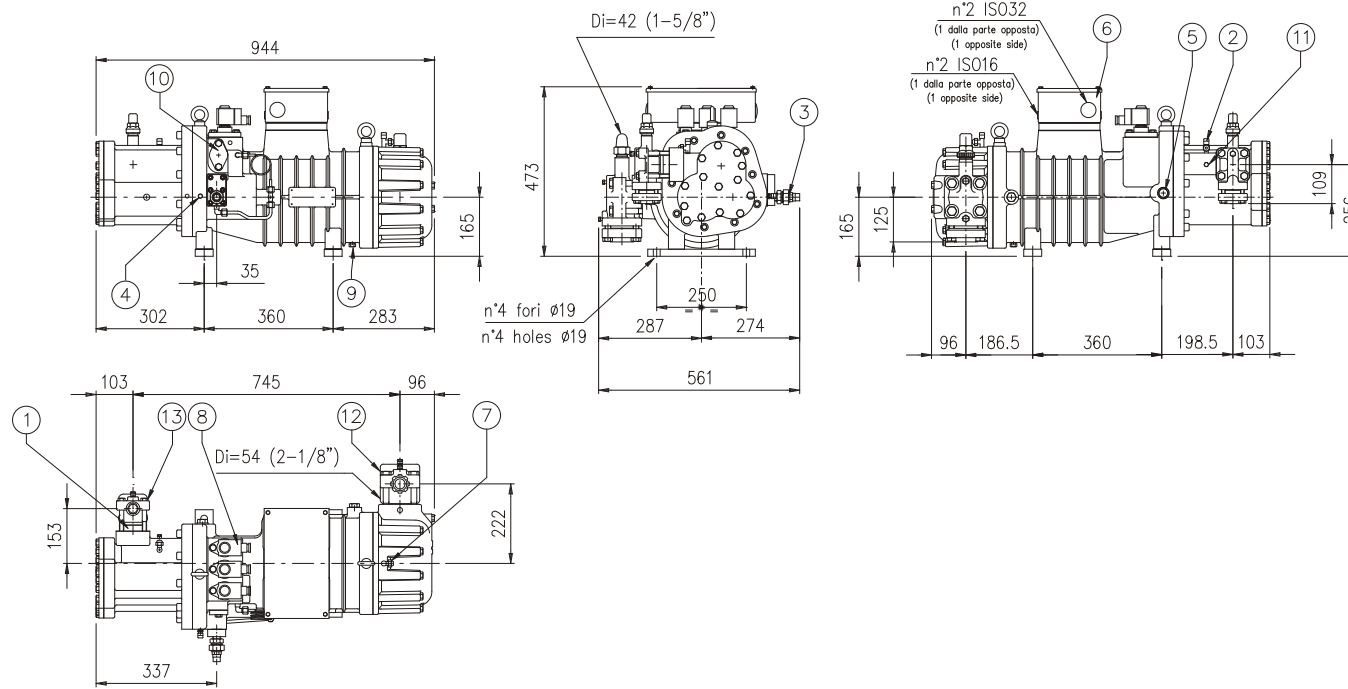


LEGENDA

- 1 - Valvola di non ritorno
- 2 - Alta pressione 1/4" SAE-FLARE
- 3 - Connessione raffreddamento olio (opzionale)
- 4 - Pressione olio 1/4" SAE-FLARE
- 5 - Iniezione liquido #16/economizzatore #22 (opzionale)
- 6 - Scatola morsalettera
- 7 - Bassa pressione 1/4" SAE-FLARE
- 8 - Solenoidi parzializzazione
- 9 - Scarico olio su carcassa 1/4"-18 NPT
- 10 - Posizione solenoide parzializzazione continua
- 11 - Sensore temperatura scarico 1/8"NPT (opzionale)
- 12 - Rubinetto aspirazione (opzionale)
- 13 - Rubinetto mandato

KEY

- 1 - Non return valve
- 2 - High pressure gas 1/4" SAE-FLARE
- 3 - Oil cooler connections (optional)
- 4 - Oil pressure 1/4" SAE-FLARE
- 5 - Liquid injection #0,63"/economiser #0,866"(optional)
- 6 - Electrical box
- 7 - Low pressure gas 1/4" SAE-FLARE
- 8 - Solenoid valves for part-load operation.
- 9 - Oil drain motor housing 1/4"-18 NPT
- 10 - Solenoid valve connection (step-less capacity control)
- 11 - Discharge temperature sensor 1/8"NPT (optional)
- 12 - Suction shut-off valve (optional)
- 13 - Discharge shut-off valve

Fig. 38: dimensional drawing of the models: RW3-H040÷060/L030÷050;

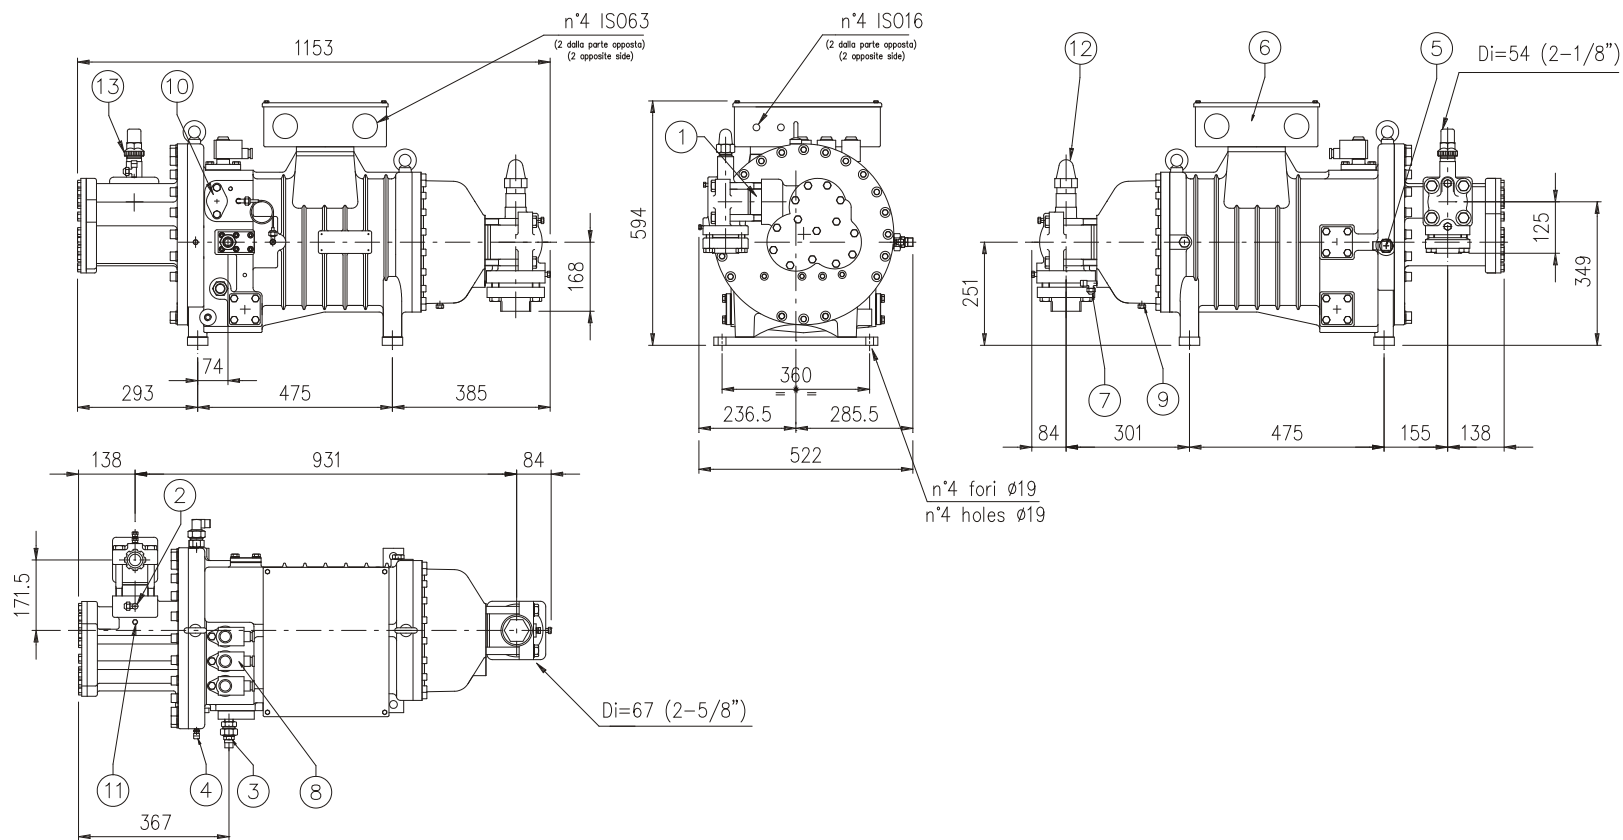


LEGENDA

- 1 - Valvola di non ritorno
- 2 - Alta pressione 1/4" SAE-FLARE
- 3 - Connessione raffreddamento olio (opzionale)
- 4 - Pressione olio 1/4" SAE-FLARE
- 5 - Iniezione liquido ø16/economizzatore ø22 (opzionale)
- 6 - Scatola morsettiere
- 7 - Bassa pressione 1/4" SAE-FLARE
- 8 - Solenoidi parzializzazione
- 9 - Scarico olio su carcassa 1/4"-18 NPT
- 10 - Solenoide controllo capacità continua (opzionale)
- 11 - Sensore temperatura scarico 1/8"NPT (opzionale)
- 12 - Rubinetto aspirazione (opzionale)
- 13 - Rubinetto mandata



KEY

- 1 - Non return valve
- 2 - High pressure gas 1/4" SAE-FLARE
- 3 - Oil cooler connections (optional)
- 4 - Oil pressure 1/4" SAE-FLARE
- 5 - Liquid injection ø0,63"/economiser ø0,866"(optional)
- 6 - Electrical box
- 7 - Low pressure gas 1/4" SAE-FLARE
- 8 - Solenoid valves for part-load operation.
- 9 - Oil drain motor housing 1/4"-18 NPT
- 10 - Solenoid valve connection (step-less capacity control)
- 11 - Discharge temperature sensor 1/8"NPT (optional)
- 12 - Suction shut-off valve (optional)
- 13 - Discharge shut-off valve

Fig. 39: dimensional drawing of the models: RW3-H075÷090/L060÷070;

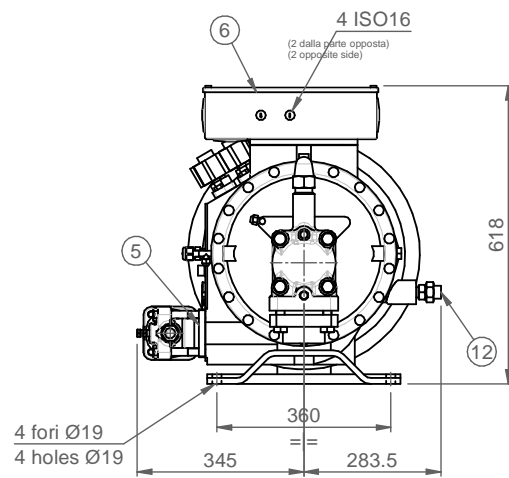

Con manicotto aspirazione
With suction bush

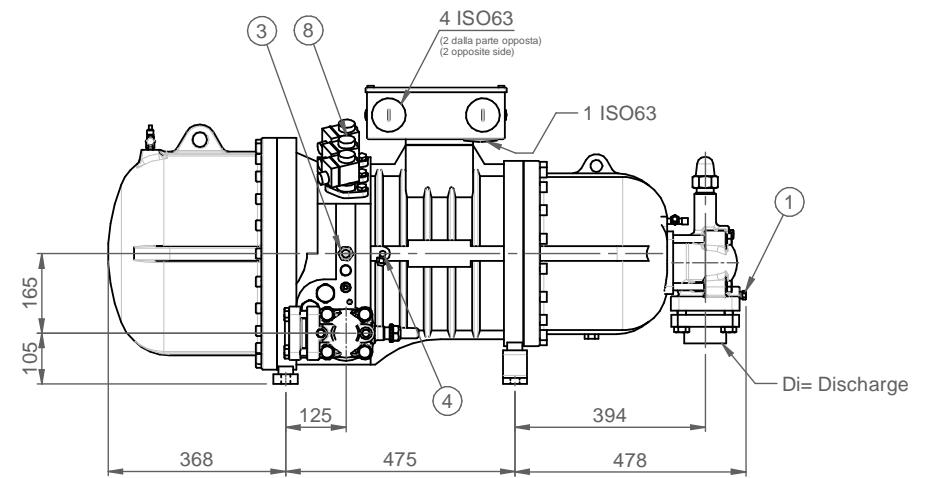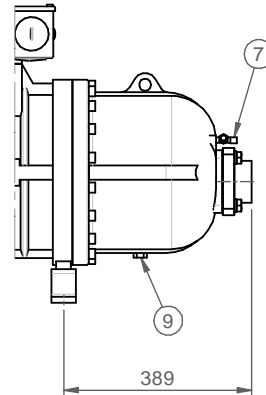

Possible connections	
Ø= Suction	Ø= Discharge
54 (2-1/8")	35 (1-3/8")
67 (2-5/8")	42 (1-5/8")
77 (3")	54 (2-1/8")
80 (3-1/8")	67 (2-5/8")

LEGENDA

- 1 - Rubinetto aspirazione (opzionale)
- 2 - Rubinetto mandata
- 3 - Connessione raffreddamento olio
- 4 - Pressione olio 1/4" SAE-FLARE
- 5 - Valvola di non ritorno
- 6 - Scatola morsettiera
- 7 - Bassa pressione 1/4" SAE-FLARE
- 8 - Solenoidi parzializzazione
- 9 - Scarico olio su coperchio
- 10 - Alta pressione 1/4" SAE-FLARE
- 11 - Sensore temperatura di scarico 1/8" NPT (opzionale)
- 12 - Iniezione di liquido/economizzatore (opzionale)

KEY

- 1 - Suction shut-off valve (option)
- 2 - Discharge shut-off valve
- 3 - Oil cooler connection
- 4 - Oil pressure 1/4" SAE-FLARE
- 5 - Check valve
- 6 - Electrical box
- 7 - Low pressure 1/4" SAE-FLARE
- 8 - Capacity control solenoid valves
- 9 - Oil drain motor housing
- 10 - High pressure 1/4" SAE-FLARE
- 11 - Discharge temperature sensor 1/8" NPT (option)
- 12 - Liquid injection/Eco connection (option)


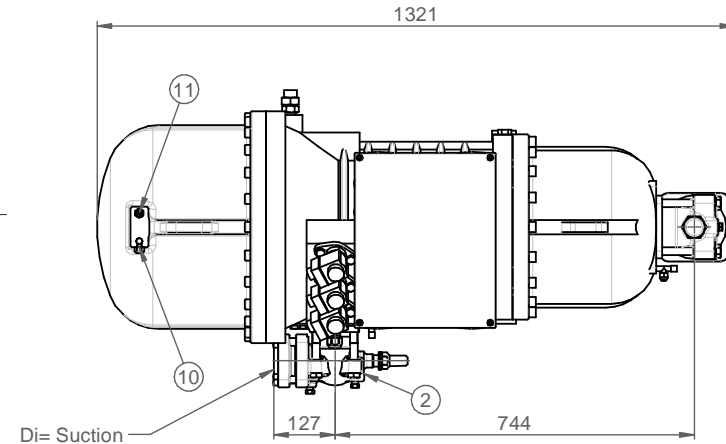


Fig. 40: dimensional drawing of the models: RW3-H095 ÷ 125/L080 ÷ 105;

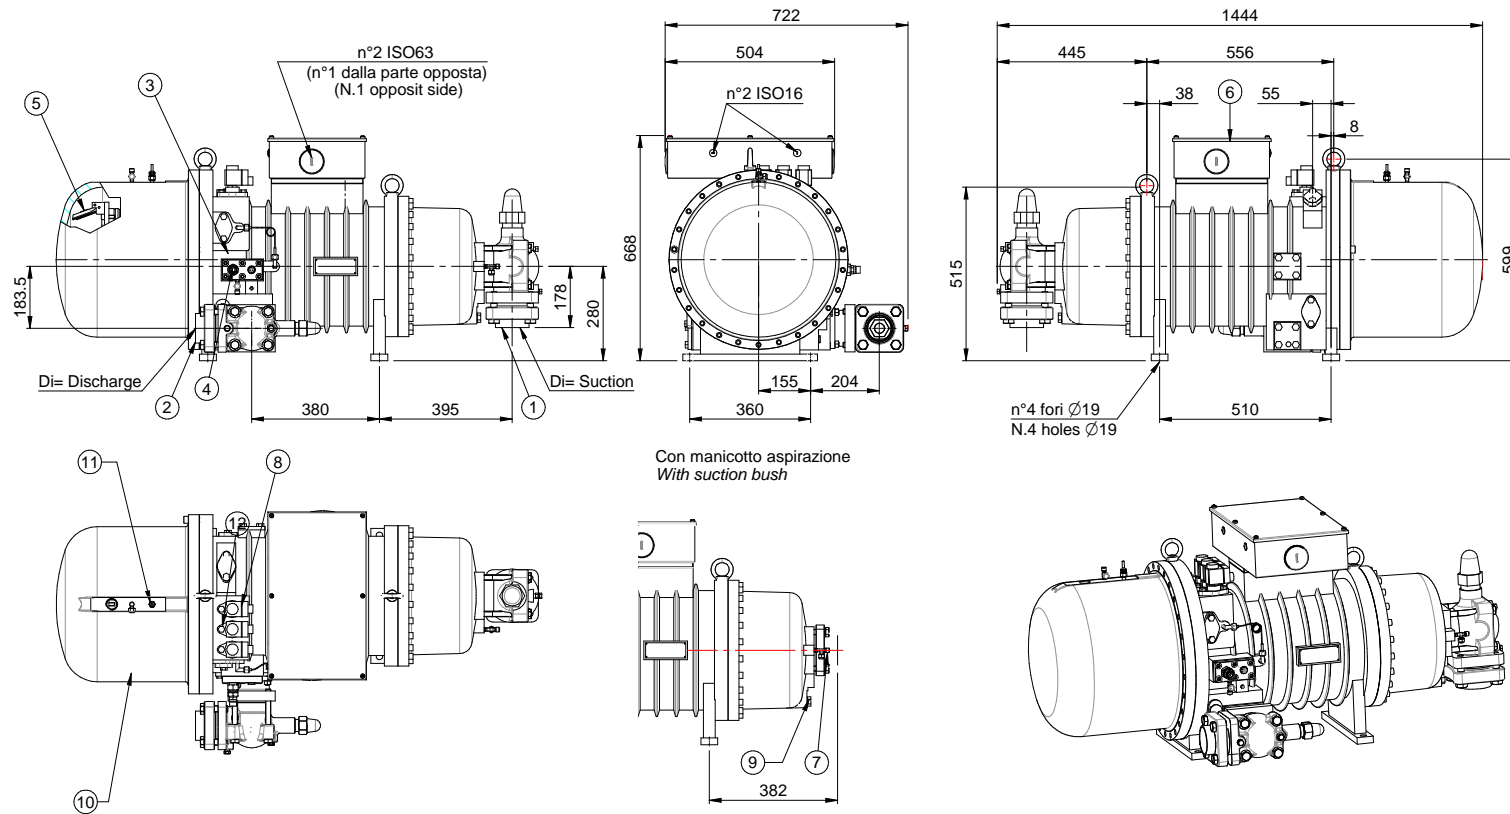


LEGENDA

- 1 - Rubinetto aspirazione (opzionale)
- 2 - Rubinetto mandata
- 3 - Connessione raffreddamento olio
- 4 - Pressione olio 1/4" SAE-FLARE
- 5 - Valvola di non ritorno
- 6 - Scatola morsettiera
- 7 - Bassa pressione 1/4" SAE-FLARE
- 8 - Solenoidi parzializzazione
- 9 - Scarico olio su coperchio
- 10 - Alta pressione 1/4" SAE-FLARE
- 11 - Sensore temperatura di scarico 1/8" NPT (opzionale)
- 12 - Iniezione di liquido/economizzatore (opzionale)

KEY

- 1 - Suction shut-off valve (option)
- 2 - Discharge shut-off valve
- 3 - Oil cooler connection
- 4 - Oil pressure 1/4" SAE-FLARE
- 5 - Check valve
- 6 - Electrical box
- 7 - Low pressure 1/4" SAE-FLARE
- 8 - Capacity control solenoid valves
- 9 - Oil drain motor housing
- 10 - High pressure 1/4" SAE-FLARE
- 11 - Discharge temperature sensor 1/8"NPT (option)
- 12 - Liquid injection/Eco connection (option)

Fig. 41: dimensional drawing of the models: RW3-H140÷190/L115÷160;

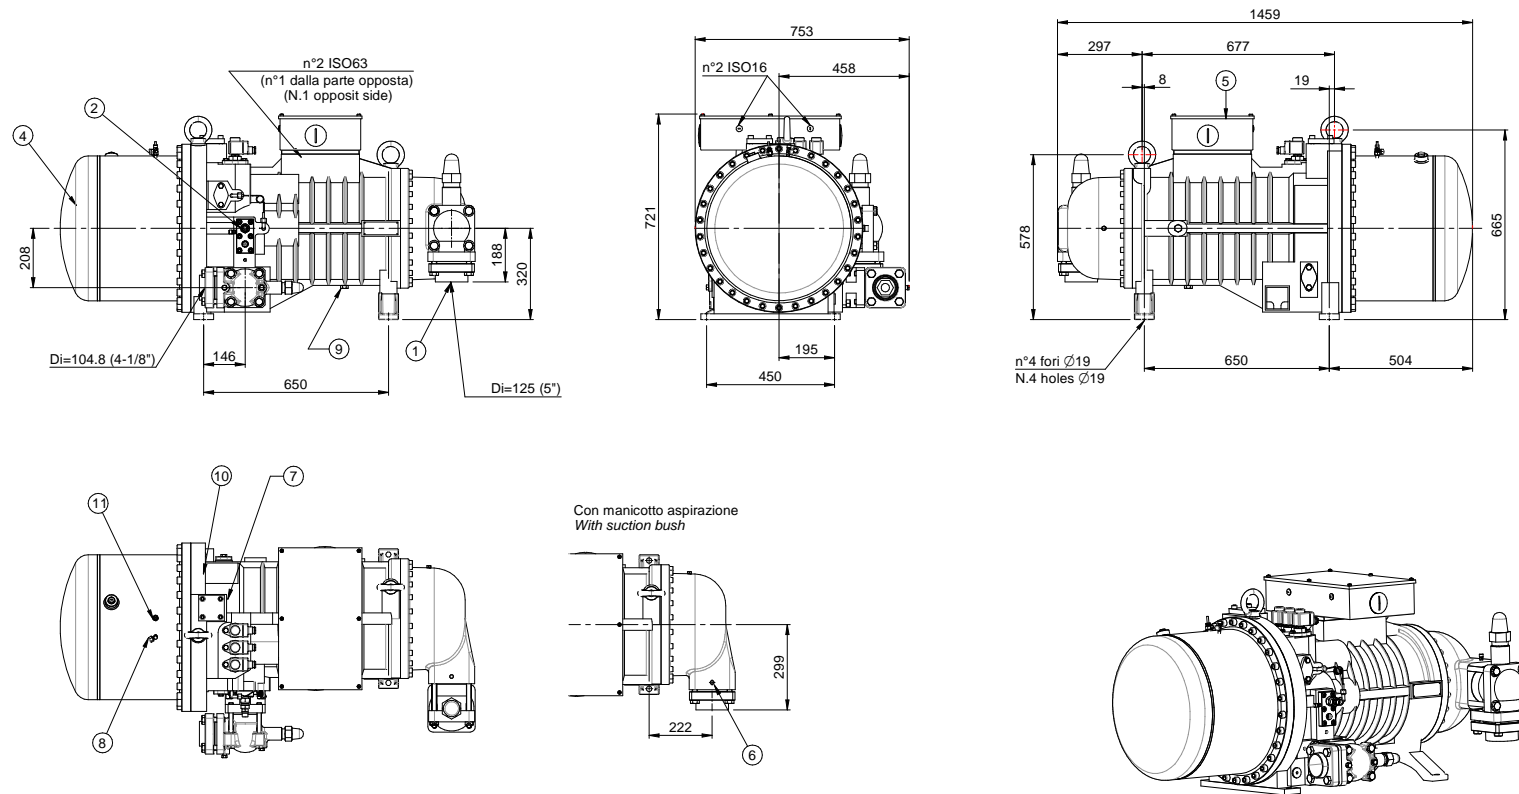**LEGENDA**


- 1 - Manicotto aspirazione
- 2 - Connessione linea olio D=16
- 3 - Pressione olio 1/4" SAE-FLARE
- 4 - Valvola di non ritorno
- 5 - Scatola morsetti
- 6 - Bassa pressione 1/4" SAE-FLARE
- 7 - Solenoidi parzializzazione
- 8 - Alta pressione 1/4" SAE-FLARE
- 9 - Scarico olio su coperchio M14
- 10 - Raccordo iniezione liquido Ø28/Rubinetto eco Ø42 (opzionali)
- 11 - Sensore temperatura scarico 1/8"NPT (opzionale)

KEY

- 1 - Suction connection
- 2 - Oil line connections D=16
- 3 - Oil pressure 1/4" SAE-FLARE
- 4 - Non return valve
- 5 - Electrical box
- 6 - Low pressure gas 1/4" SAE-FLARE
- 7 - Solenoid valves for part-load operation.
- 8 - High pressure gas 1/4" SAE-FLARE
- 9 - Oil drain motor housing M14
- 10 - Liquid injection connection Ø28/ Economizer shut-off valve Ø42 (optionals)
- 11 - Discharge temperature sensor 1/8"NPT (optional)

Fig. 42: dimensional drawing of the models: RW3-H210÷250/L180÷220;


8.2 Oil separators

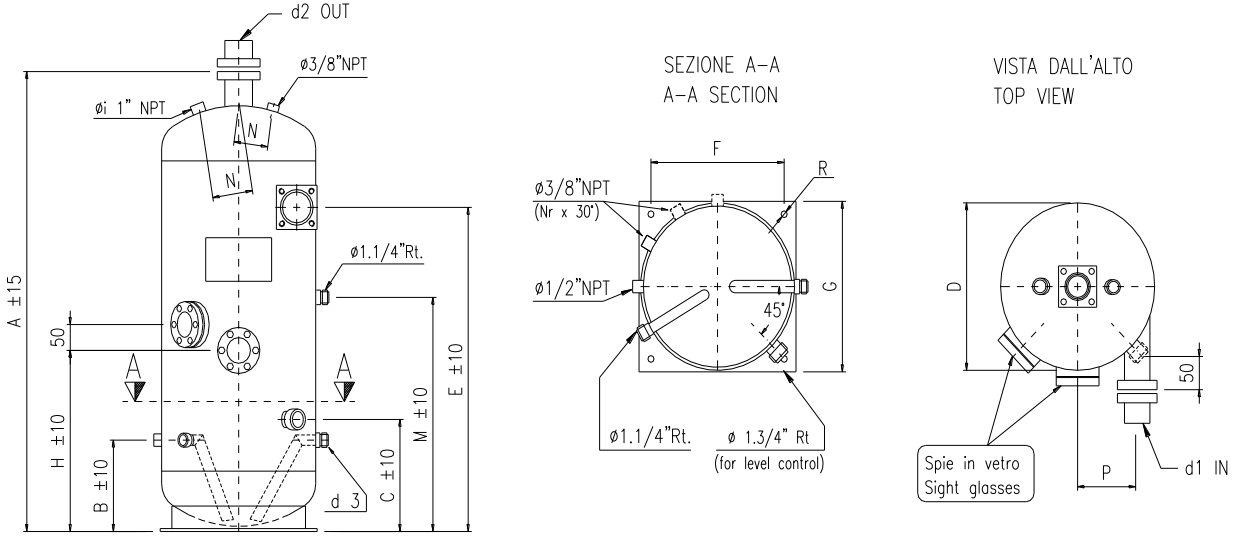

MODEL			RS 180	RS 400	RS 900	RS 1300	RS 2300
Compressor Suction Volume	Air conditioning	m3/h	220	490	940	1320	1650
	Cooling and Low temperature	m3/h	300	660	1320	1650	2250
Nominal Data	Max compressors No.	N.	2	3	6	6	6
	Oil Volume	dm3	19	50	90	130	230
	Total Volume	dm3	40	120	220	330	560
Nominal Data	A	mm	830	1170	1440	1485	1780
	B	mm	200	220	280	300	395
	C	mm	240	260	300	320	375
	D	mm	324	406	508	610	711
	E	mm	550	865	1105	1100	1335
	F	mm	280	320	440	530	530
	G	mm	330	380	500	610	610
	H	mm	330	460	560	550	725
	M	mm	420	510	650	650	775
	N	mm	90	100	100	135	150
	P	mm	120	145	198	235	265
CONNECTIONS	d1	mm	ODS 54	OD 76	OD 89	OD 114	OD 141
	d2	mm	ODS 54	OD 76	OD 89	OD 114	OD 141
	d3	mm	1"1/4 Rtlk	1"3/4 Rtlk	ODS 42	ODS 54	ODS 76
	Joint Øi 3/8" NPT	N.	1	2	3	4	4
PED CATEGORY **			III	IV	IV	IV	IV
WEIGHT		Kg	60	130	195	230	273

Table 22 Dimensions of oil separators

8.3 Oil separators "ECO" version

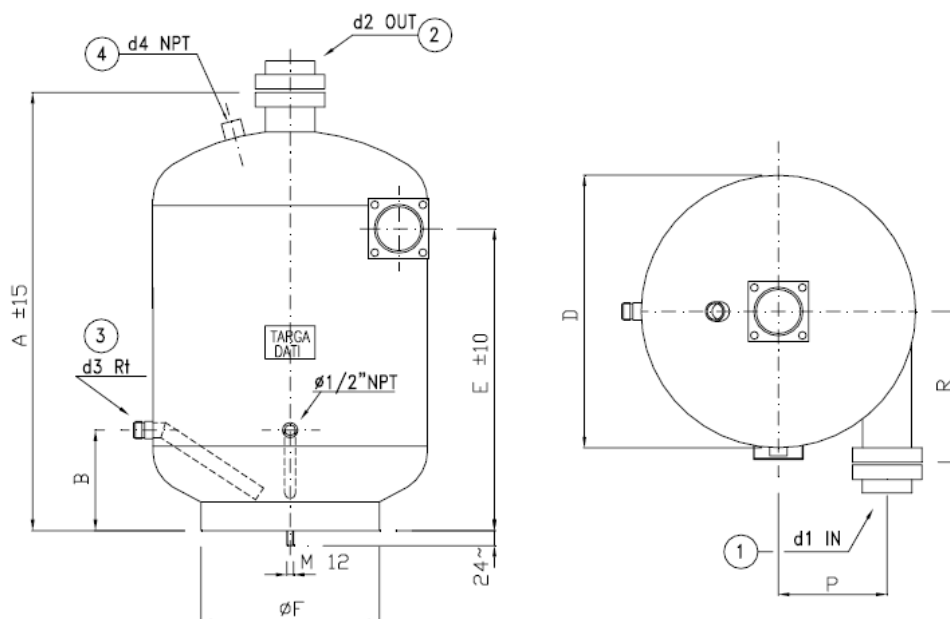

MODEL			RS 182	RS 402	RS 902
Compressor Suction Volume	Air conditioning	m3/h	220	490	940
	Cooling and Low temperature	m3/h	300	660	1320
Nominal Data	Max compressors No.	N.	2	3	6
	Oil Volume	dm3	3	7	10
	Total Volume	dm3	30	75	140
Nominal Data	A	mm	545	750	900
	B	mm	100	160	180
	C	mm	300	400	500
	D	mm	385	525	640
	E	mm	114	168	219
	F	mm	545	750	900
	P	mm	115	155	198
	R	mm	190	230	277
CONNECTIONS	d1	mm	ODS 54	OD 76	OD 89
	d2	mm	ODS 54	OD 76	OD 89
	d3	mm	1" Rtlk	1" Rtlk	1" Rtlk
	D4	NPT	1/2" NPT	1" NPT	1" NPT
PED CATEGORY **			II	III	IV
WEIGHT		Kg	29	52	66

Table 23 Dimensions of oil separators "ECO"

** PED category according to EU directive 97/23-CE

The category refers to the use of group 2 fluids at the PS value of standard temperature version

Design temperature: -10/+120°C

Design pressure / Pressione di progetto : 32 bar

9 Transport, Handling and Storage

9.1 Receiving and unpacking

In order to protect and avoid damages during transport, the compressor is usually placed on a wooden pallet, fixed by screws, and a cardboard cover.

All the informations/pictograms required for shipping are printed on the package.


Upon receipt of the compressor, after removing the upper part of the package, make sure that no damage occurred during transport. If you notice damage due to transport, please provide to make a written complaint, possibly accompanied with photos of the damaged parts, to your insurance company and send copies to the Manufacturer and transporter. For the entire period that the compressor is not used, before unpacking it, store in a dry place at a temperature between + 5 ° C and + 45 ° C and in position to avoid contact with atmospheric agents.

For the entire period that the compressor is not used, after being unpacked, before first start-up or for long period unused, you need to change the oil and check the operation.


If the compressor is not used for long periods, you need to change the oil and check the operation.

 Please dispose of the packaging according to the different types of material in full compliance with the legislation in force in the country of use.


9.2 Package dimensions:

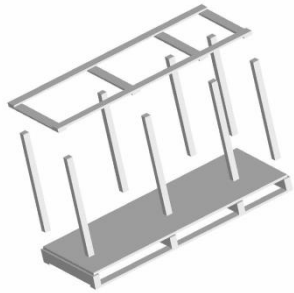

Internal packaging structure with cardboard walls

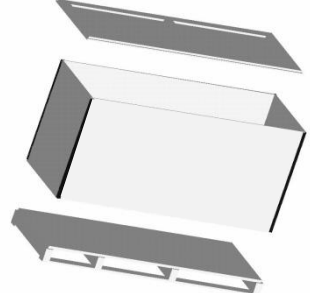

Packaging with wooden wall

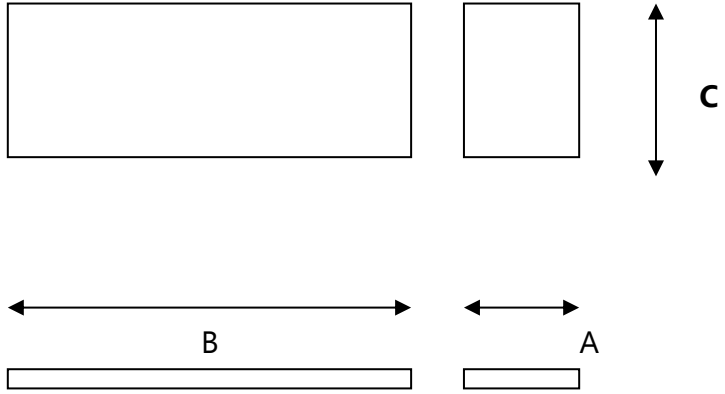

Models	A [mm]	B [mm]	C [mm] Wooden packing	C [mm] Carton packing
RW3-H040÷060/L030÷050	590	1580	835	872
RW3-H075÷090/L060÷070	590	1580	835	872
RW3-H105÷125/L080÷105	770	1440	835	872
RW3-H140÷250/L115÷220	720	1860	1052	1015

Table 24: Packing dimensions (mm);

9.3 Transport & Handling



The transport of the packed compressor must be operated by qualified personnel using a forklift truck.



ATTENTION : before making any transport operation, make sure that the lift capacity is suitable for the load to be lifted.

Place the forks exclusively in the pallet bottom. After positioning the forks at the points indicated, lift slowly without sudden movements.



With the usage of a forklift, bring the compressor as close as possible to the place to install, then carefully remove the protective packing, paying attention not to damage it, and follow the instructions below:

- Remove the carton.
- Remove the screws that fix compressor to the wooden pallet.



Please dispose of the packaging according to the different types of material in full compliance with current legislation in the country of utilization.



It is mandatory to install the compressor in a ventilated area with proper ventilation to keep the room temperature between +2°C to +40°C, with humidity level between 5 to 95%.

It is mandatory to contact the manufacturer or authorized dealer in the event of an inadequate exhaust of hot air from the place of installation of the compressor.

It is mandatory that the air introduced into the compressor installation site is clean and free of dust, fumes and flammable vapors.

9.4 Compressor lifting

The compressor has to be lifted using the eyebolts of the same.

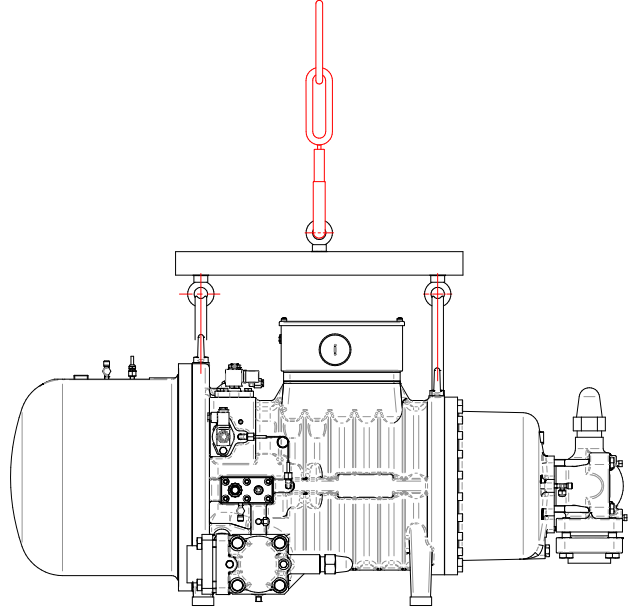


Fig. 43: anchor points for lifting the compressor;



The compressor can be transported by securing it to a pallet or alternatively lifting it with a suitable cross-beam, using the anchor points highlighted in Fig. 43.

Please check the capacity of the lifting crane according to the weight indicated in table below:

RW3	H040 L030	H050 L040	H060 L050	H075 L060	H090 L070	H105 L080	H115 L095	H125 L105	H140 L115	H160 L130	H190 L160	H210 L180	H240 L200	H250 L220
Weight [kg]	245	255	265	410	420	535	540	545	665	675	710	1030	1050	980

Table 25: Compressor weight

10 Performance data for the RW3 series compressors



In order to have performance data for conditions different than those as given above, use SRMTec selection program (contact SRMTec to have the updated software version):

The screenshot displays the SRMTec Software 1.9.6 interface. On the left, there are configuration panels for 'Condizioni di progetto' (Project Conditions), 'Operating Conditions', 'Circuit Options', 'El. Motor options', and 'Capacity control'. The main area shows a table of compressor models with their performance metrics. The selected model, RS3-H140, is shown in a detailed view on the right, including a 3D model and technical specifications.

Compressore	Qe(kW)	Pn(kW)	COP()	CA(A)	Qc(kW)	m(kg/h)	EER()	Qcooler(kW)	Td(°C)	Qd(kW)	IIP(bar)
R1234ze (VI=2.2)											
RS3-H040	65.8	19.1	3.45	34.7	83	1615.3	11.754	0	61.1	2.3	-
RS3-H050	75.3	21.9	3.44	38.3	95	1846.8	11.732	0	62.0	2.3	-
RS3-H060	81.4	23.7	3.43	49.5	103	1997.9	11.719	0	62.2	2.3	-
RS3-H070	99.0	28.3	3.50	49.1	125	2428.9	11.936	0	61.8	2.7	-
RS3-H080	110.1	31.2	3.53	69.2	139	2701.5	12.040	0	61.8	2.7	-
RS3-H100	132.7	37.5	3.54	75.5	167	3257.3	12.074	0	61.4	3.5	-
RS3-H110	147.7	41.8	3.53	80.0	186	3624.8	12.056	0	61.9	3.5	-
RS3-H120	157.5	44.7	3.52	83.8	199	3864.0	12.022	0	62.2	3.5	-
RS3-H140	184.9	51.8	3.57	88.3	232	4537.3	12.179	0	61.2	4.7	-
RS3-H160	208.0	57.8	3.60	96.0	261	5104.4	12.278	0	61.3	4.7	-
RS3-H180	233.3	64.7	3.61	118.2	293	5725.9	12.303	0	61.6	4.7	-
RS3-H200	262.3	72.8	3.60	125.1	331	6435.7	12.294	0	62.4	3.7	-
RS3-H220	289.2	80.2	3.61	144.0	365	7097.4	12.304	0	62.6	3.7	-
RS3-H240	319.3	88.6	3.60	155.0	404	7834.7	12.296	0	62.8	3.7	-
RS3-H270	388.0	121.3	3.20	200.2	503	9521.5	10.914	0	67.1	6.2	-

RS3-H140

Portata a 50/60 Hz [m³/h] **402 / 482**
 Peso (kg) **730**
 Carica olio [dm³] **14**
 Connessione di scarico int. [Mm / "] **80 / 3 1/8"**
 Connessione di aspirazione int. [mm / "] **92 / 3 5/8"**
 Tipo avviamento **Star Delta (SD)**
 Taglia motore **Standard (Small)**
 Motore **400/3/50**
 L.R.A. [A] **354/1155**
 Fla [A] **225**

Performance data are obtained through measurements made at the suction and discharge connection.

See chapter 8: "*Dimensional drawing and packaging*" for connection positions on each models.

According to the chapter 11: "*Application range*", the following tables highlight the working condition which require the monitoring of the filter pressure drop (see chapter 3) or the additional cooling (see chapter 12);

For all the refrigerant mixtures the above-mentioned temperatures are the DEW ones.

The performances are optimized for the following working conditions:

- Gas suction overheating: SH=10K;
- Liquid sub-cooling: SC=5K;
- Three-phase electrical net frequency: f=50Hz;
- Nominal voltage: V=400V;
- Working conditions without ECONomiser circuit.

Key:

Te: Evaporating temperature [° C];

Tc: Condensing temperature [° C];

Qe: Refrigerant power [kW];

Pta: Absorbed power [kW];

11 Application range

11.1 General

The normal admissible operating conditions for the RW3 series compressors, with changes in evaporation and condensing temperature, are defined by a polygon, as highlighted in Fig. 44.

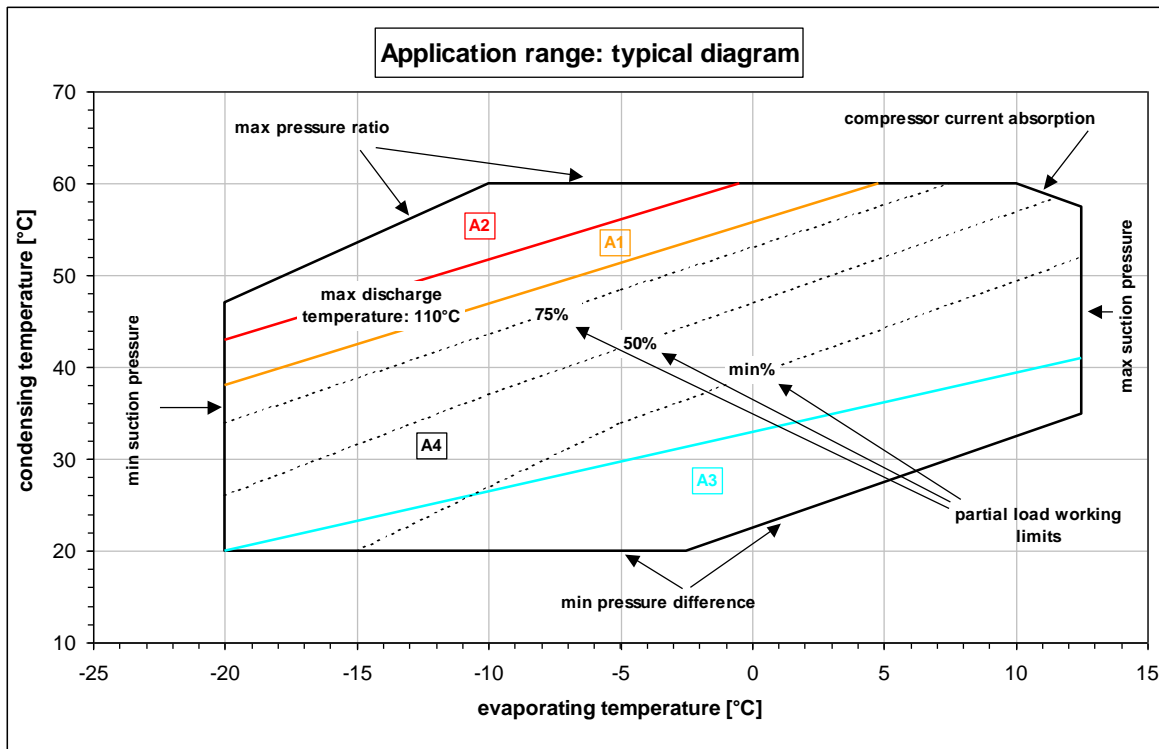


Fig. 44: typical application range;

The entire field of operation of the compressor is divided into four areas, featuring special precautions that must be adopted so as to ensure correct operation; specifically:

- Area A1: area in which the correct operation of the compressor requires additional cooling by the injection of liquid (refrigerant) or cooling of the oil in an external circuit (air-oil, water-oil and refrigerant-oil heat exchangers), see chapter 12 Additional cooling;
- Area A2: area in which additional cooling must be provided only by cooling the oil. Use air-oil or water-oil exchangers (the injection of liquid into the compressor is not allowed), see chapter 12 Additional cooling;
- Area A3: area in which the status of the oil filter needs to be monitored: the pressure drop allowed across the filter must be less than 1.5 bar; if the pressure drop across the filter is greater than 1.5 bar, the compressor must be stopped and the filter replaced. When the filter has been replaced, check the condition of the new filter after around 200-300 hours of operation. The pressure drop across a clean filter is less than 0.8 bar, see chapter 3: "Lubrication";
- Area A4: area of standard compressor operation;

In addition to the above given areas, the diagram gives also, as dotted lines, the working limits on partial load: 75%, 50% and min%. For each partial load, these lines limits the maximum possible condensation temperature in relation to the evaporation temperature.

Because of the several refrigerants available, please refer to the official SRMTec selection software for specific details.

12 Additional cooling

12.1 Admissible compressor discharge temperature

The value of the discharge temperature is determined by the following factors:

- ✓ power input of the compressor and any part-load conditions, which determine a drop in the cooling capacity of the electric motor;
- ✓ actual cycle working compression ratio;
- ✓ superheating of the refrigerant fluid on the suction side;
- ✓ characteristics of the refrigerant gas, such as the thermal capacity;
- ✓ characteristics of the oil mixed with the refrigerant.

An excessive discharge temperature can cause:

- ✓ the carbonization and permanent alteration of the oil;
- ✓ a reduction in the oil cinematic viscosity, with a consequent drop in the lubrication capacity and reduction in the volumetric efficiency of the compressor;

Excessive cooling of the oil, on the other hand, may cause, as well as a high pressure drop in the oil circuit, the excessive dilution of the oil by the refrigerant, and consequently:

- ✓ an alteration in the flow of lubricant inside the compressor;
- ✓ a reduction in the lubricating properties;
- ✓ the bypass of refrigerant fluid to the suction side (through the oil circuit), which has undergone the compression process but will not produce the cooling effect.

The maximum admissible discharge temperature depends by the type of lubricant used while, when the compressor is off, the minimum temperature of the oil before starting is 40°C.

Below is described how to evaluate the additional cooling capacity when the oil needs to be cooled, and the possible ways to provide it.

12.2 Evaluating the additional cooling capacity

When the discharge temperature exceeds the values indicated in Table 7 at page 24, an additional cooling system is required.

The additional cooling capacity required to perform such cooling can be calculated by multiplying the mass flow in the evaporator by the difference between the enthalpy at the discharge without additional cooling and the enthalpy at the discharge pressure when the temperature is at the limit indicated in Table 7 (the enthalpy values should be read on the refrigerant chart).

When calculating the required cooling capacity, the most critical normal operating conditions should be considered (minimum evaporation temperature, maximum condensing temperature, maximum superheat).

Alternatively, the calculation can be performed automatically using the SRMTec selection program.

As a result, depending on the additional cooling capacity to be provided, there are two possible methods to limit the compressor discharge temperature:

- **Liquid injection:** cooling by injection of refrigerant (liquid) onto the rotors. It is taken from the condenser outlet and subsequently expanded;
- **Oil Cooler:** cooling of the oil in a circuit external to the compressor. It can be used either an oil-air, or an oil-water, or an oil-refrigerant heat exchanger.

The following pages describe the two above-mentioned methods of cooling.

12.3 Oil cooler

In comparison with the liquid injection method this one allows a further extension of the application limits of the compressor (see chapter 11: '*Application limits*') and a more efficient operation. In fact, cooling improves the volumetric and isentropic efficiency of the compression, thus increasing the coefficient of performance of the refrigerating cycle.

General recommendation about oil cooler could be summarized in the following list:

- installation as near as possible to the compressor;
- installation under the level of oil separator/compressor;
- oil pressure drop < 0.5 bar during normal operation;
- oil solenoid valve in the oil line close to the compressor to avoid flooding during off periods;
- oil line shut-off valve recommended for service purposes;
- oil by-pass around the oil cooler or possible heating of oil cooler if there are the cooling conditions: oil temperature in the oil cooler near to 20°C or oil volume in the cooler and pipelines more than 25 litres. In these two situations the oil pressure drop would be excessive.



ATTENTION!

the pressure drop in the external oil cooling circuit must not exceed 0.5 bar.

12.3.1 Examples of oil cooler application

- Air cooled oil cooler

The oil cooler (finned coil) must be installed as near as possible to the compressor, so that the pressure drop in the circuit does not exceed 0.5 bar in normal conditions. The cooling system with fans must be controlled by a temperature sensor positioned on the compressor discharge line, set at desired temperature; the control logic may be ON-OFF or variable speed.

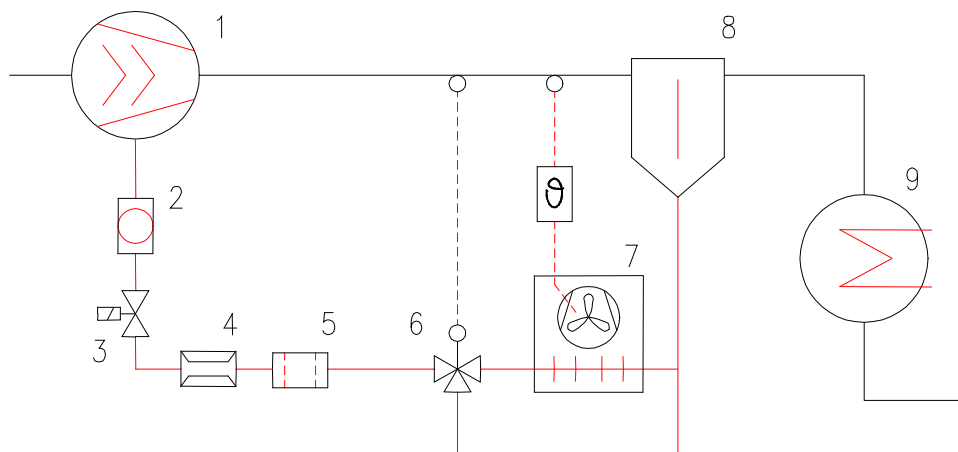


Fig. 45 Schematic layout of air oil cooler

1	Compressor	6	3 way thermostatic valve
2	Oil line sight glass	7	Air/oil cooler
3	Oil line solenoid valve	8	Oil separator
4	Oil flow switch	9	Condenser
5	Oil filter		

To ensure the rapid heating of the oil when starting (so as to reduce the high pressure drop with cold oil), the cooler should be heated during standstill periods, or the cooler can be bypassed using a modulating 3 way valve (ref. 6 in Fig. 45) that should have a modulating control function thermostatically controlled with high sensitivity and an effective temperature range less than 10 K.

This is especially recommended when the temperature of the cooler, during standstill periods, may drop below 40°C, or when the volume of oil in the cooler and in the pipes exceeds 25 dm³

- Water cooled oil cooler

The oil-water heat exchanger can be supplied with condenser water or chilled water. The water supply can be modulated by a two-way valve with the temperature sensor on the compressor discharge pipe (set at 100°C) or alternatively, as highlighted in Fig. 46, a modulating three-way valve can be used, with the temperature sensor positioned on the oil pipe leaving the compressor.

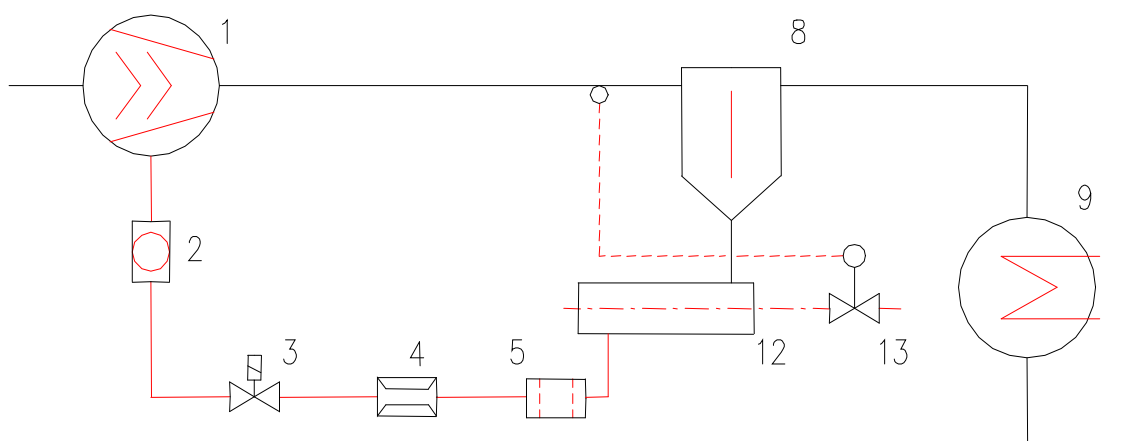


Fig. 46: oil cooling with oil/water heat exchanger

1	Compressor	8	Oil separator
2	Oil line sight glass	9	Condenser
3	Oil line solenoid valve	12	Water/Oil cooler
4	Oil flow switch	13	Oil flow modulating valve
5	Oil filter		

12.4 Injection of liquid by thermostatic expansion valve

A relatively simple and economical system for additional cooling consists in the injection of refrigerant (saturated liquid) at intermediate pressure onto the rotors, as seen in the diagram of Fig. 47⁶. The liquid is injected through the economizer port and allows the operating limits to be extended, see chapter 11: *'Application range*.

When the required additional cooling capacity exceeds a certain percentage of the compressor cooling capacity, the use of this method would entail an excessive quantity of refrigerant and bring about its dilution in the oil, with a consequent loss in the oil lubricating properties, as well as an excessive overloading of the motor. In this situation,

⁶ This is simply a schematic drawing; refer to the dimensional drawing for each individual compressor to identify the actual position of the liquid injection port and the high and low pressure connections.

the oil should be cooled in an external circuit with a heat exchanger, see the following paragraph. The operating limits shown in chapter 11 highlight the normal operating conditions in which cooling by injection is admissible, and the conditions where an external oil cooler is required.

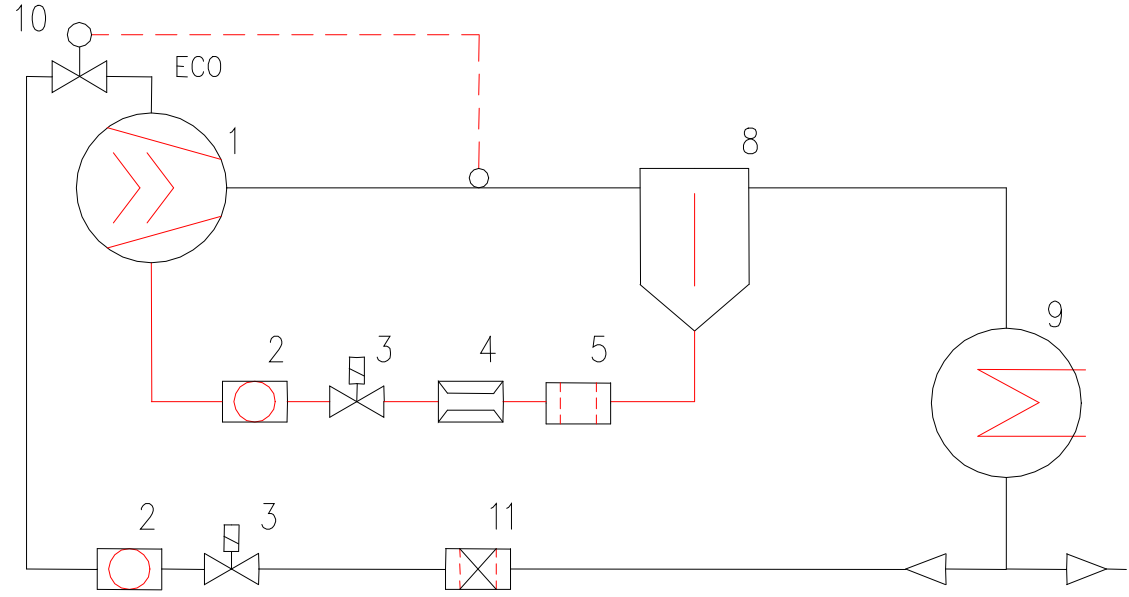


Fig. 47: injection of refrigerant (saturated liquid) via thermostatic expansion valve;

- | | | | |
|---|-----------------|----|----------------------|
| 1 | Compressor | 8 | Oil separator |
| 2 | Sight glass | 9 | Condenser |
| 3 | Solenoid valve | 10 | Liquid injection vae |
| 4 | Oil flow switch | 11 | Dryer filter |
| 5 | Oil filter | | |

To inject the refrigerant into the compressor, an expansion device must be installed; this may be:

- ✓ a thermostatic expansion valve;
- ✓ a calibrated nozzle;
- ✓ a capillary tube.

If a thermostatic valve is used, the expansion can be controlled accurately. In this case, the quantity of refrigerant injected varies according to the actual temperature measured at the discharge side of the compressor.

The thermostatic valve should be set to be activated at discharge temperatures as indicated in Table 7 (manufacturers such as Danfoss, Alco and Sporlan provide such products).

Notes:
for the correct sizing of the thermostatic valve according to the specific application, contact your valve supplier;



- the use of liquid injection is not recommended when the required additional cooling capacity reaches values of around 10% of the cooling capacity of the compressor;
- the use of liquid injection together with the ECONomizer circuit is strongly not recommended.

The thermostatic valve bulb must be positioned on the discharge line around 10-20 cm from the discharge shut-off valve; it must be thermally insulated so as to not be affected by the outside temperature, and the contact with the discharge pipe must be improved by using conductive paste. Attach the bulb securely.

Make sure only saturated liquid or sub-cooled liquid is tapped from the line. Once the injection circuit has been constructed, check that there are no dangerous vibrations in the section of pipe that runs from the valve to the point of injection.

To prevent the migration of oil and protect the components against liquid-oil slugging, the injection pipe must initially run vertically, starting from the point of injection, see the picture Fig. 48⁷.

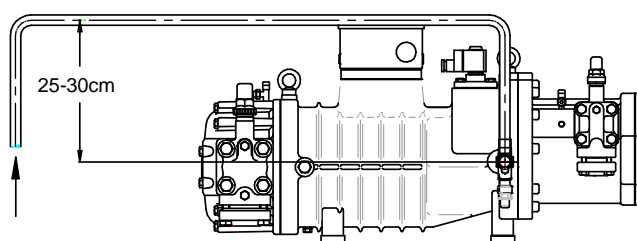


Fig. 48: layout of the liquid injection line;

The valve should not be oversized, so as to avoid the injection of an excessive quantity of liquid. When sizing, the injection pressure must be considered, intermediate between the evaporation and condensing pressure. This can be determined using the SRMTec selection program.

Together with the expansion device, the injection circuit must be fitted with a solenoid valve, a thermostat (or equivalent device) positioned on the discharge, a sight glass and a fine mesh filter (max 25 μm) to avoid the injection of metallic particles onto the rotors that may affect the correct operation and the life of the compressor.

The thermostat on the discharge line will activate the injection circuit when the discharge temperature exceeds the value of 110°C, while it will be de-activated when the discharge temperature drops below 100-105°C.

The compressor should have an injection fitting (special accessory available upon request); the diameter of the injection pipe is determined according to Table 26 below.

RW3	H040 L030	H050 L040	H060 L050	H075 L060	H090 L070	H105 L080	H115 L095	H125 L105	H140 L115	H160 L130	H190 L160	H210 L180	H240 L200	H250 L220
\varnothing [mm]	16					22					28			

Table 26: injection pipe diameter;

⁷ This is just a schematic drawing: please refer to the specific compressor dimensional drawing in order to locate the actual position for the liquid injection port.

13 General design recommendation

13.1 Installation

The compressor must be installed horizontally. To prevent the compressor from transmitting vibrations to the structure, the vibration damper kit should be used. It is supplied as an option. Flexible pipes are not required on the suction or discharge lines. Only minimum flexibility of the lines is required, so that these do not exert any force on the compressor.

Please use pipes and components that are extremely clean and dry inside, without slag, swarf, rust and phosphate coating.

When operating in extreme conditions, such as low ambient temperatures or aggressive atmospheres, suitable measures should be adopted. Please contact SRMTec.

13.2 General design recommendations about pipe lay out

The screw compressors can be incorporated into the system in a similar way to reciprocating compressors. Only the specific features of the oil circuit require special attention.

Pipe dimensions for short circuits is mostly determined by the nominal size of the shut off valves. The usual criteria apply with regard to flow velocities (oil return).

The pipe layout and the system construction must be designed so that the compressor cannot be flooded with oil or liquid refrigerant during off periods. For this purpose the discharge and suction lines should at first be led downwards from the compressor. As additional measures (also provides simple protection against liquid slugging during starting) for systems with direct expansion either a swan-neck upwards after the evaporator or installation of the compressor above the level of the evaporator is required (not essential with "pump down" system). A solenoid valve should also be fitted in the liquid line directly before the expansion valve.

The use of "flooded evaporators with HCFC/HFC refrigerants requires separate oil return from the evaporator or low pressure receiver. The bleed point (preferably several) should be situated in the area of the liquid level (oil rich phase). The return should be made via the suction line, the refrigerant must however first be evaporated by means of a heat exchanger. With strongly varying liquid levels (e. g. pump systems) a bleed at the lowest point or after the circulating pump is practical the discharge line sections down to the header should have a sufficient fall to ensure free drainage discharge gas header in form of an horizontal pipe.

As a result of the preferred installation of the oil separator these plants usually allow the suction lines to be run below the level of the compressors; this is the safest solution.

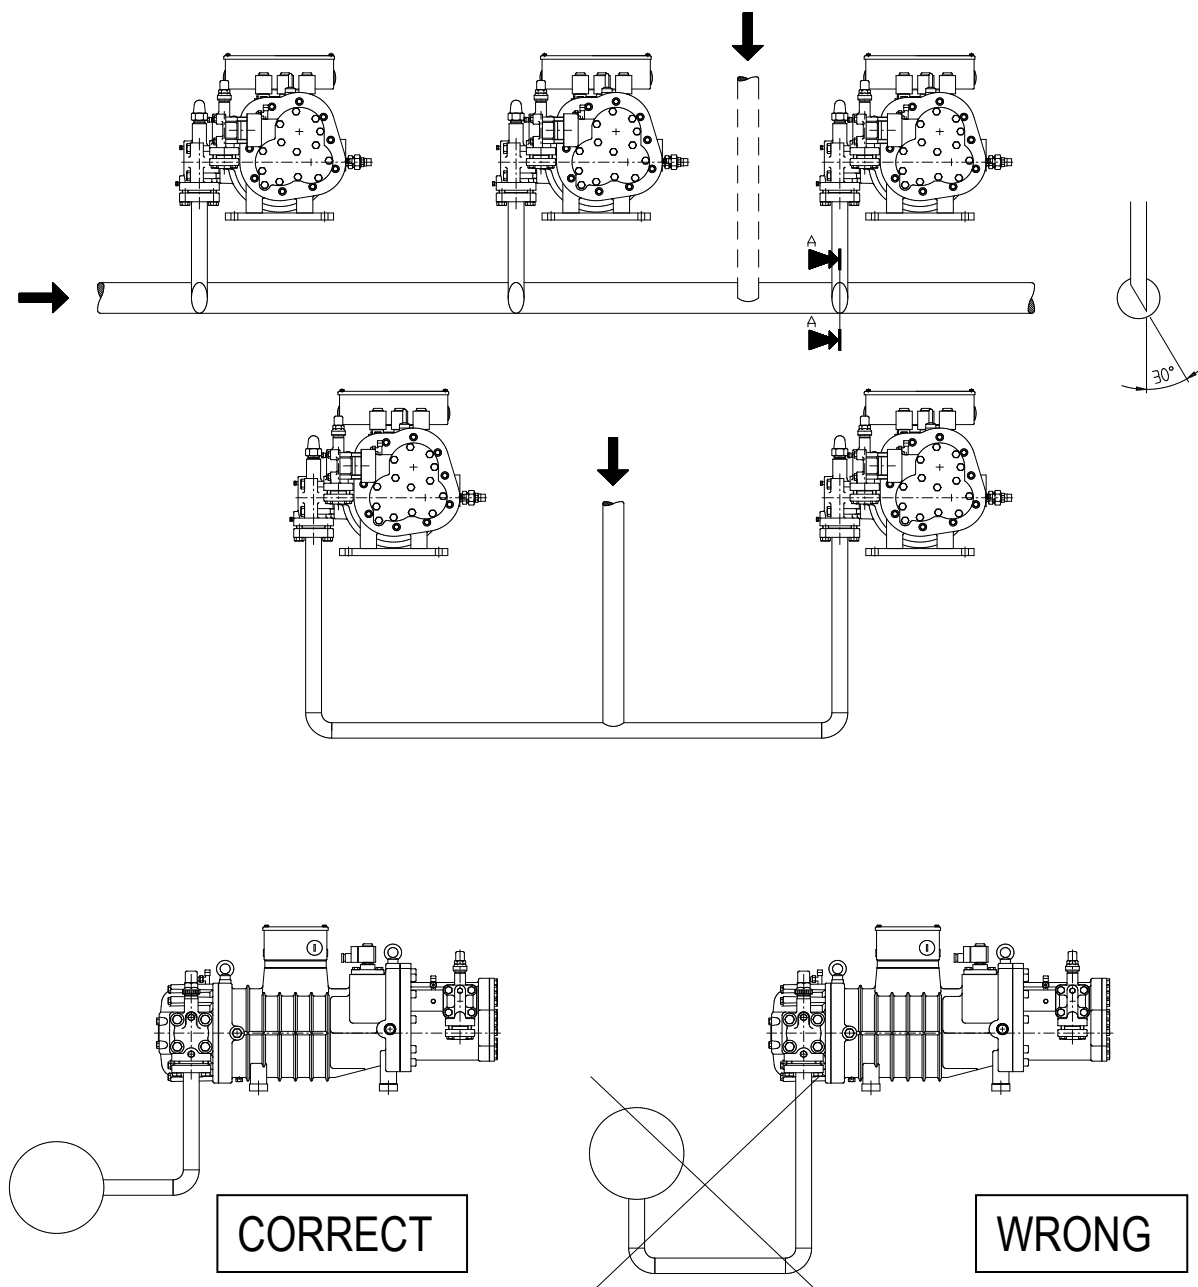


Fig. 49 General pipe layout recommendation for suction line

13.3 Pipe layouts and construction

Due to the low level of vibration and the small discharge gas pulsation the suction and discharge lines can usually be made without a flexible element or muffler.

The pipes must however be sufficiently flexible and must not exert any strain on the compressor. Critical pipe section lengths should be avoided (also dependent upon operating conditions and refrigerant).

An oil heater is situated in the oil separator to prevent high refrigerant dilution of the oil during off periods. This is controlled by means of a thermostat, the temperature setting is 70°C. In addition an off cycle bypass is recommended which reduces the pressure in the oil separator to suction pressure during of cycle and thus reduces refrigerant saturation. Apart from this an additional start unloading is also achieved.

A check valve is necessary after the oil separator and an equalising line controlled by a solenoid valve between the oil separator and the suction line (only open during off cycle). With parallel compounded compressors the solenoid valve may only be open when all compressors are switched off.

The compressor must be protected against contamination with dirt (scale, rust and phosphate deposits). For widely branched pipe systems which are difficult to inspect for contamination the use of a suction side fine filter (max. 25 μ m) is necessary. In addition a generously dimensioned good quality filter drier is required to provide the system with a high degree of dehydration and chemical stability.

13.4 Heat pumps



Warning!

Reverse cycle systems or hot gas defrosts require suitable measures to protect the compressor against:

- ✓ Liquid slugging;
- ✓ Increase in oil carry over, which determines a consequent decrease in the oil level inside the compressor;
- ✓ Operation with a reduced Δp (HP-LP), and a consequent reduction in lubrication.

To protect the compressor against liquid slugging, a suction accumulator should be installed. To prevent excessive oil carry over (due to a rapid decrease in pressure in the oil separator), make sure that the temperature of the oil during the reverse cycle procedure is at least 30-40 K above the condensing temperature. It may be necessary to install a pressure regulating valve downstream the compressor to limit the drop in pressure during reverse cycle and defrost operation. The compressor can also be stopped just before reversing the cycle and then started again after the pressure has balanced. In any case the compressor should work within the specified range of pressures and within the operating limits, as well as with the recommended protectors, within a maximum of 20 seconds from starting (see chapter 3: "*Lubrication*").

13.5 Parallel Compounding

The parallel compounding of 2 or more compressors with one common oil separator is possible (up to 6). The following schematic picture shows a 2-compressors circuit (parallel operation with common oil separator).

The single discharge lines should ensure a sufficient fall, in this way we have a free drainage in the oil separator. The common discharge line should be fitted horizontally like in the Fig. 50 with a right angles or in the direction of flow.

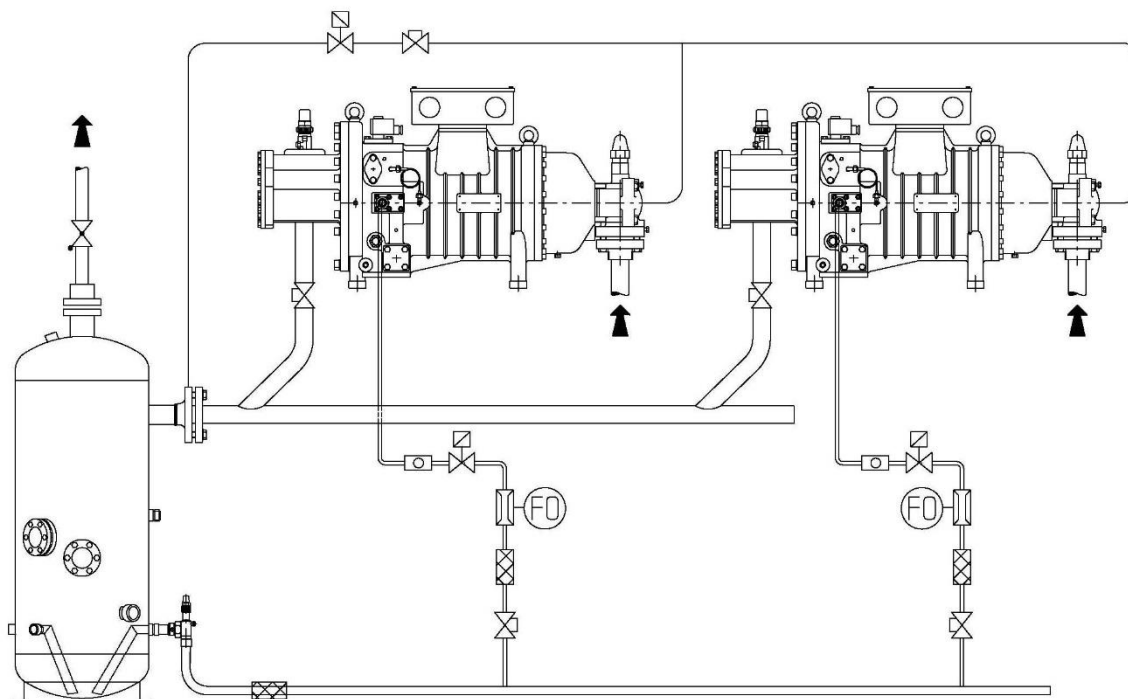


Fig. 50: Parallel compounding with two or more compressors

13.5.1 EXAMPLES OF PARALLEL COMPOUNDING LAY-OUT

13.5.1.1 Parallel compounding with common oil separator and common water oil cooler:

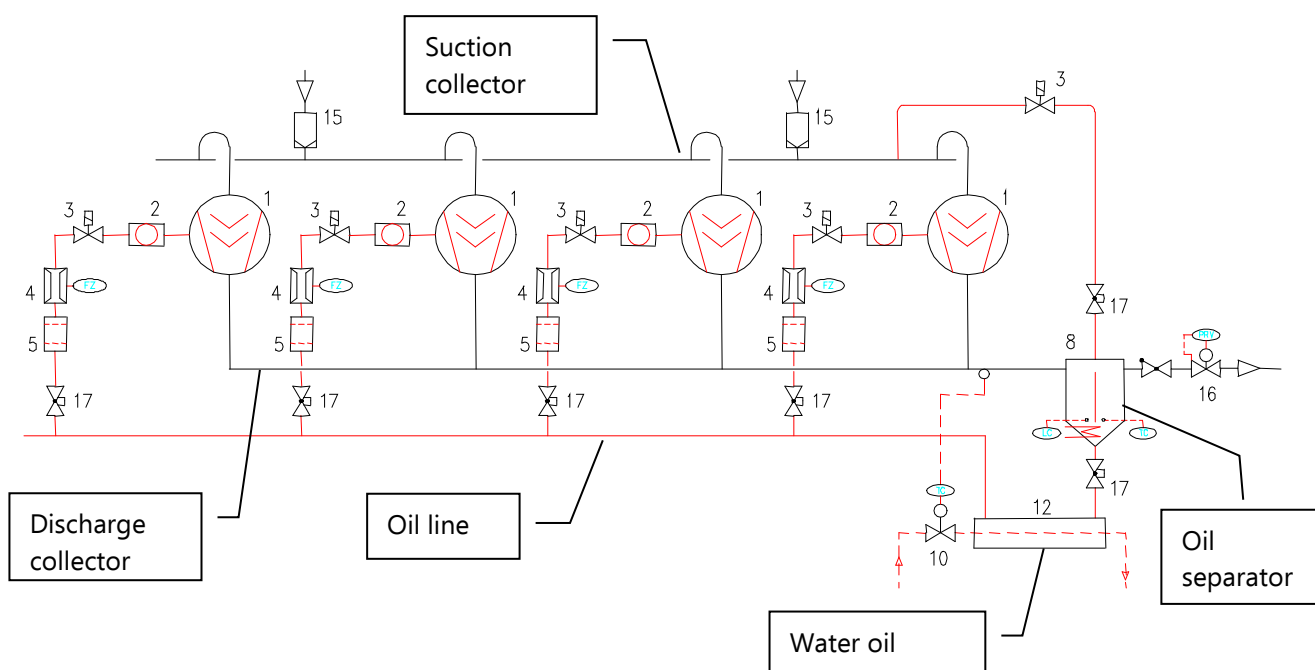


Fig. 51: Parallel compounding with common water oil cooler

13.5.1.2 Parallel compounding with common oil separator and common air oil cooler:

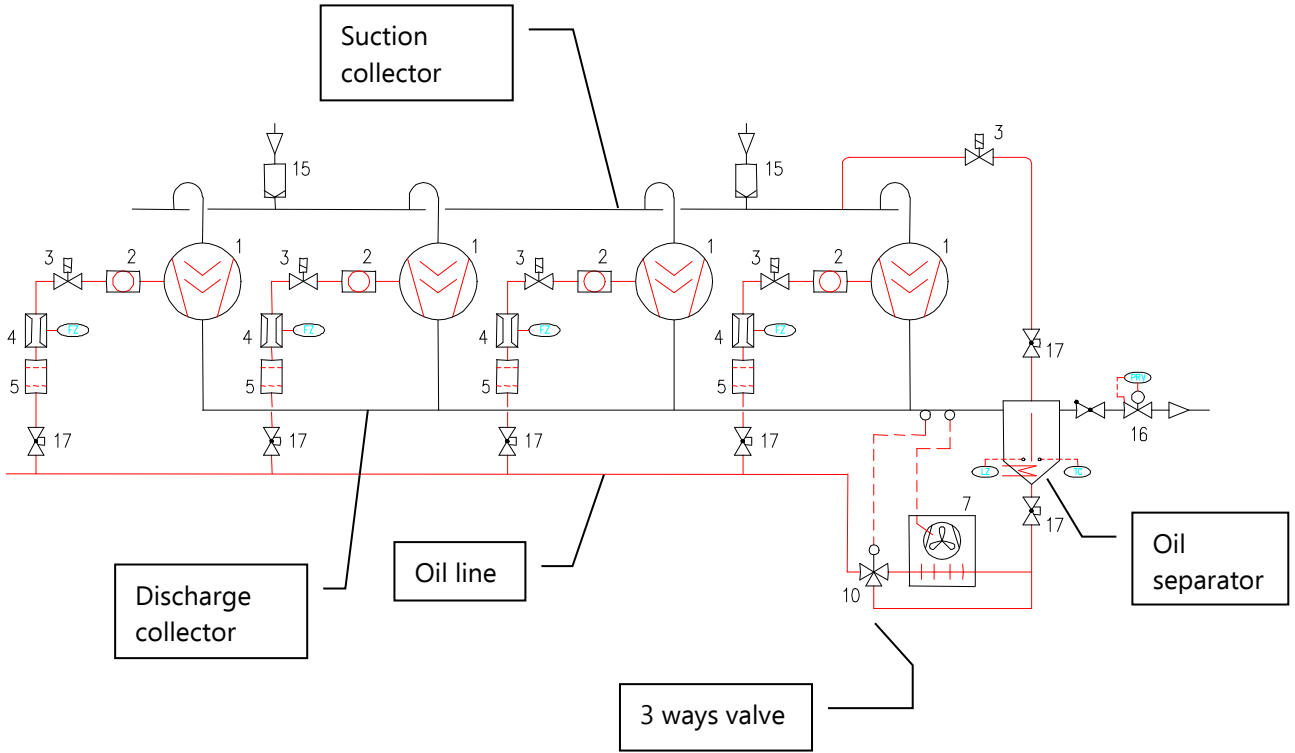


Fig. 52: Parallel compounding with common air oil cooler

13.5.1.3 Parallel compounding with multiple economisers:

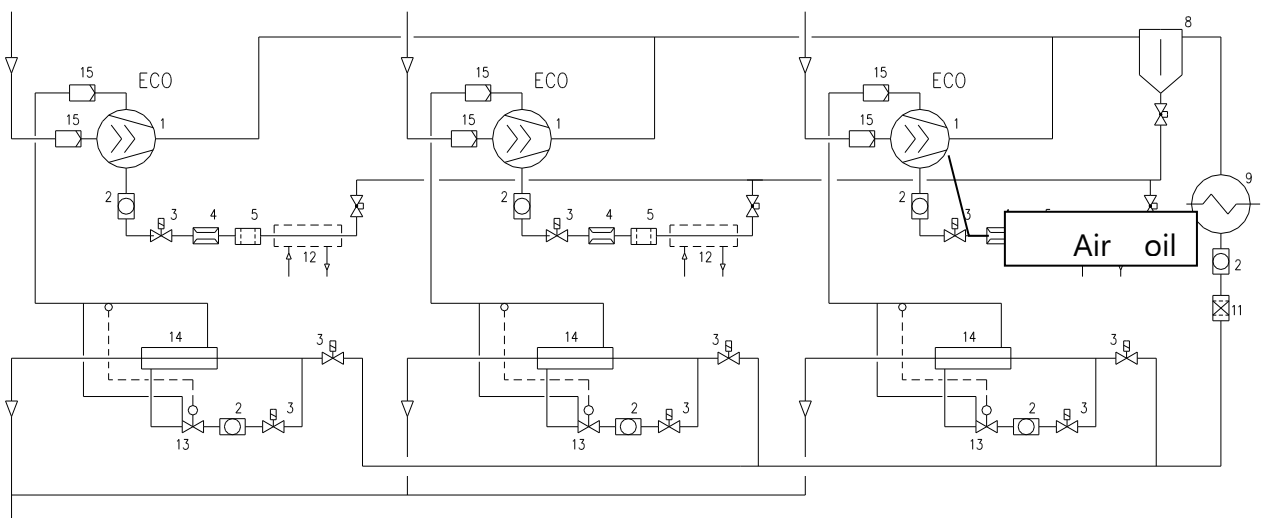


Fig. 53: Parallel compounding with one economiser for each compressor

- 1) Compressor
- 2) Sight glass
- 3) Solenoid valve
- 4) Oil flow switch
- 5) Oil filter
- 6) Mixing valve
- 7) Air cooled oil cooler
- 8) Oil separator with heater and level control
- 9) Condenser
- 10) Mixing valve
- 11) Drier filter
- 12) Water cooled oil cooler
- 13) Regulation valve
- 14) Economiser heat exchanger
- 15) Suction gas filter
- 16) Condensing pressure regulator
- 17) Shut off valve

14 Operative instruction

14.1 Ambient operating and storage temperature

The temperature of the environment where the compressor operates and is stored must be between -15°C and +50°C.

14.2 Suction superheat

Because of the lubricant solubility with refrigerants, the design, operation mode and control of the compressor and the system are subject to particular requirements.

Low or insufficient superheat in operation and insufficient heating or the oil sump during shut-off periods lead to a substantial reduction of the oil viscosity in the compressor.

This results in reduced performance, heavy wear on drive gear parts, increased oil carryover and foaming into the oil separator.

Secure the compressor against wet operations and guarantee a sufficiently high suction gas temperature.



ATTENTION!

The discharge gas temperature must be at least 10K above the condensing temperature!



Preferred use of heat exchanger between liquid line and suction gas line in order to rise the suction superheat at approx. 7K at system design conditions.

14.3 Pressure specifications

The compressor has the following pressure specifications:

- ✓ Maximum operating pressure: 27.5 bar high pressure side;
- ✓ Maximum balanced pressure: 19 bar high and low pressure sides.

Never operate the compressor at a higher pressure than the maximum operating pressure specified by SRMTec and indicated on its plate. The user must ensure also that the balanced pressure does not exceed the maximum value specified by SRMTec.

To test the tightness of the compressor, proceed as follows:

- ✓ Test the tightness on low pressure side at 19 bar;
- ✓ Test the tightness on high pressure side at 30.2 bar.

The compressors are designed and tested according to the European standards EN 60335-2-34.

14.4 Balanced pressure when starting

In order to generate a starting torque greater than the resisting one, the balanced system pressure (pressure inside the compressor during standstill periods) must not exceed 19 bar.



Attention!

The compressor has to start at minimum capacity step.

14.5 Maximum ambient temperature

During operation, the temperature of the environment where the compressor is working must be kept below the maximum value of 50°C when using common refrigerants (ex. R22, R407C, R134a, R1234yf, R1234ze, R513a) and +40°C when using low temperature application refrigerants (ex. R404A, R507, R407F, etc).

If the compressor is installed in a soundproofed cabinet, suitable ventilation and temperature monitoring systems must be provided.

14.6 Number of start-ups

The compressor can be started a maximum of 6 times per hour (1 start every 10 minutes).




Attention!

A number of starts higher than the one suggested may damage the electrical motor and affect the theoretical compressor working life.

14.7 Starting, stopping and minimum running time

The compressor must operate for a minimum time of three minutes. In addition, it must be started and stopped at minimum capacity (minimum step). The transients at minimum load must last 25 seconds at least.

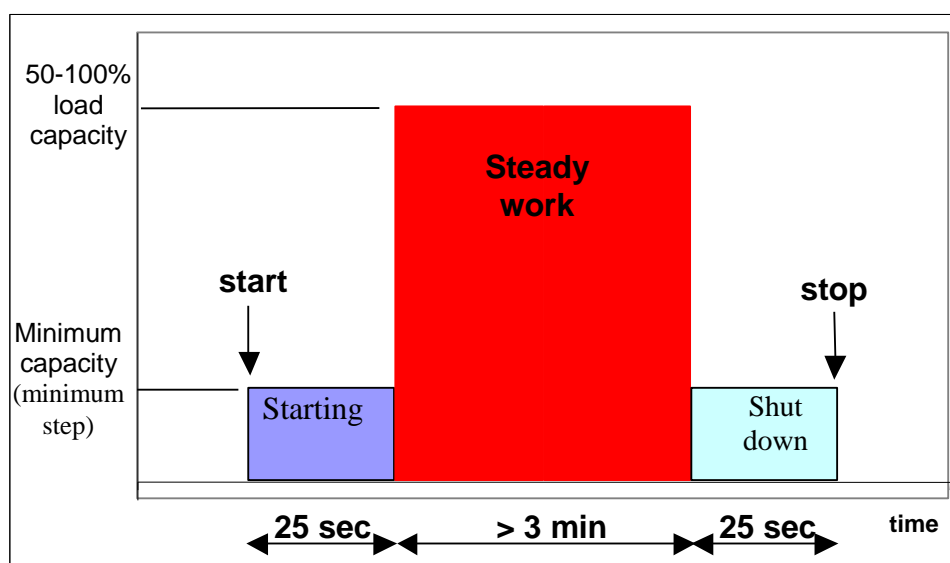

14.8 Testing

14.8.1 Leak testing/evacuation/oil charge



Note:

The compressors are supplied with a protective nitrogen charge (0.5-1 bar above atmospheric pressure) to prevent air from entering inside.

Perform the leak test on the refrigerant circuit with dry nitrogen; if the circuit is tested with dry air, the compressor must be bypassed. Empty the entire circuit, including the compressor and the sections isolated by the valves, both on the suction side and on the discharge side. The vacuum required is at least 1.5 mbar (with isolated vacuum pump); if necessary, repeat the operation more than once. After emptying, add the oil to the oil separator and switch on the oil heater.

As regards the compressor, this has already been tested for leaks under pressure, and therefore this test does not need to be performed by the user. If the leak test does need to be repeated by the user, make sure the design pressures reported on the compressor rating plate are never exceeded (see paragraph 14.3: "Pressure specifications").



Warning!

- Never subject the compressor to pressure higher than the design values indicated on the rating plate;
- Never start the compressor under vacuum.

14.8.2 Refrigerant charge



Charge the liquid refrigerant directly into the receiver and into the condenser, and complete the charge on the suction side during operation.

To avoid liquid backflow when the refrigerant is charged in the liquid phase (verify that the discharge temperature is around 20K above the condensing temperature).

An insufficient charge causes a low suction pressure and a high superheat (observe the chapter 11: "*Application limits*").

To identify the correct discharge temperature, use the SRMTec selection software.

14.9 Starting

STARTING:

- ✓ After discharging the protective nitrogen charge, connect the compressor to the plant, making sure that the shut-off valves are closed. This avoids contact between the humidity of the air and the oil. However if the oil comes into contact with the humidity, it must be for not longer than 30 min;
- ✓ Make all the electrical connections as given in the wiring diagram on chapter 0: "Electrical devices";
- ✓ Perform the following preliminary checks:
 - ✓ Correct setting of the start timers;
 - ✓ Oil level;
 - ✓ Correct safety and protection devices setting and functioning;
 - ✓ Correct functioning of the high and low pressure switches;
 - ✓ Look for leakage along the piping and system components;
 - ✓ Turn on the oil heater at least 24 hours before each first seasonal start-up. The oil inside the separator must have a temperature at least 15K higher than the ambient temperature;
 - ✓ Charge the condenser with the minimum refrigerant charge;
 - ✓ Open the suction and discharge shut off valves and start the compressor while checking the correct motor rotation in the following way (even if some protection electronic device is used):
 - Connect a manometer on the suction port;
 - Start for 1 second max;
 - If the compressor screws rotate correctly, the suction pressure will drop promptly. The electronic protection intervention or a suction pressure increase implies the wrong rotors rotation. In this case, switch two of the power supply phases in the terminal plate.
 -



Warning!

To prevent severe damage of the compressor, a contingent screw inverse rotation should lasts for less than 3 sec.

START:

- ✓ Fill up the plant with the necessary amount of refrigerant;
- ✓ Re-start the compressor and open slowly the suction shut-off valve;
- ✓ Make sure that the oil level is visible through the sight glass. Presence of foam is normal as long as the working conditions are not stable. The discharge temperature must be about 20K higher than the condensing temperature;
- ✓ Check the correct intervention for the pressure switches;
- ✓ Check the working parameters (data logging is recommended):
 - Evaporating pressure;
 - Condensing temperature;
 - Suction gas temperature;
 - Discharge temperature;

- Pressure drop through the oil filter;
 - Contingent unbalanced electrical absorbed currents on all the 6 wires connected to the electricity grid.
- ✓ Change the oil filter if dirty (see chapter 3: "Lubrication").

14.10 Protection devices intervention and trouble shooting

Failure	Protection devices	Why it is necessary	Delivery
Incorrect phase sequence	Phase monitor	The compressor should not work with inverse rotation	INT 69 SNY (optional)
High discharge pressure	Manual pressure switch	To avoid an excessive pressure increase in the compressor	necessary, not included
High temperature of motor windings	thermistors embedded in the motor windings (cut out 100/120° C)	To protect the motor from high temperatures	standard
Too high motor current	Thermal Relay	To protect motor from electrical overload	necessary, not included
Low suction pressure	pressure switch	insufficient refrigerant charge (high pressure ratio, high disch.temp.)	necessary, not included
Low differential pressure HP/LP	HP/LP differential pressure switch (cut out 4 bar min)	To grant a sufficient oil flow	necessary, not included
High oil discharge temperature	Additional cooling (liquid injection / oil cooling)	To ensure a long bearing life	mandatory if required by the working conditions
Lack of lubrication	discharge gas temperature sensor (cut out 120° C)	To protect the compressor from lack of lubrication	temperature sensor: optional with INT 69 B2 and standard with INT 69 SNY
Too high pressure drop in the oil filter	differential pressure switch (cut out 1.5 or 3.5 bar, see chapter 3 and 11)	To ensure cleanness of oil filter	necessary, not included
Too frequent compressor starts	limit of starts (max 6 per hour)	To protect the electrical motor	necessary, not included

15 Maintenance

15.1 Lubricants

The lubricants have high thermal and chemical stability: if installation is performed correctly, the oil normally does not need to be changed. Periodically test the acidity of the oil to prevent damage to the motor or the compressor and, if necessary, perform the following operations:

- ✓ clean the circuit placing an acid filter in the suction line;
- ✓ change the oil and the oil filter;
- ✓ purge the system from the highest point on the discharge side.

The oil can be drained through the service valve and the plug on the bottom of the suction cover (see chapter 3: "*Lubrication*"). The oil can be recharged through the service valve, creating a vacuum inside the compressor.

15.2 Bearings

The bearings in the compressor are designed to ensure 40,000 hours of operation with correct lubrication (oil filter clean and oil pressure within the limits, see paragraph SA-02: '*Lubrication*') and continuous load within the limits specified in chapter 11: "*Application range*". Any alteration of the above-mentioned conditions and excessive changeability of the load may bring a drastic reduction in the effective working life. The bearings must be replaced by qualified personnel in a specially equipped workshop.

15.3 Rotors rotation direction

If the reverse rotation, which occurs when the compressor stops to balance the pressure, lasts more than 3 seconds, the check valve located underneath the discharge shut-off valve may be damaged, and consequently must be replaced. In any case, the reverse rotation must not last more than 5 seconds to avoid damage to the compressor and the unwanted activation of the INT 69 SNY protection module.

15.4 Maintenance plan


On the table below, necessary check outs and maintenance operations are listed:

Time (h)	50-100	1000	10000	20000	30000	40000
Oil filter	I/R		I/R	I/R	I/R	R
Oil	I	I	I	I	I	R
Suction filter		I	I/R	I/R	I/R	I/R
Solenoid valves		I	I	I	I	I
Bearings					I	R
Check valve		I	I	I	I	I
INT module		I	I	I	I	I
Feeding voltage	I	I	I	I	I	I
Motor contactors		I	I	I	I	I

Table 27: maintenance plan: R = replace I = Inspect

16 Capacity control conversion

As already mentioned in chapter 4: "Capacity control", the conversion between step and stepless configurations is performed differently for the new-concept models RW3-H105/115/125 and the remaining models in the RW3 series. In the new three models, in fact, just one plate needs to be changed, while in the others one, the external capillary tube needs to be changed, suitable calibrated orifices have to be installed and the position of one of the three solenoid valves used for capacity control has to be changed. The procedures for the two types of RW3 series compressors are described separately.

	<p>Warning!</p> <ul style="list-style-type: none"> ✓ All the required operations to change the capacity control, must be done without pressure inside the compressor; ✓ After the configuration change, the refrigerant is charged inside the compressor by setting the compressor on vacuum; ✓ All operations must be carried out by expert personnel.
---	---


16.1 RW3-H040÷080, H140÷240, L030÷070, L115÷220

16.1.1 Conversion from STEP (L4) to INFINITE (LZ) capacity control

The special conversion kit (code 303184) is used to perform the conversion from the STEP to the INFINITE configuration.


The kit includes the following components:

- 1) N.4 GASKETS for the solenoid valves and cover flange, code 592731.

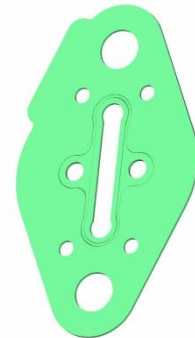

- 2) N.1 CAPILLARY TUBE, complete with lock nuts and rings, code 540684.

NOTE: the capillary tube installed in the "LZ" version is smaller than the tube used in the "L4" version.

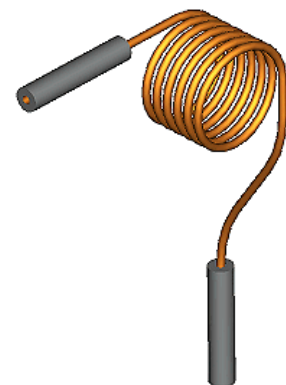


3) N.2 CALIBRATED ORIFICES, code 540711




With reference to the following pictures, the conversion from "L4" to "LZ" is achieved by changing the position of solenoid valve 16 with the cover flange located in position 19. In the LZ configuration, then, this solenoid valve is identified by number 19 and no longer by 16. In addition, you have to replace the capillary tube already installed on the compressor with the new one included in the conversion kit and you have to install the given calibrated orifices.

The operating instructions are shown in the following pages.

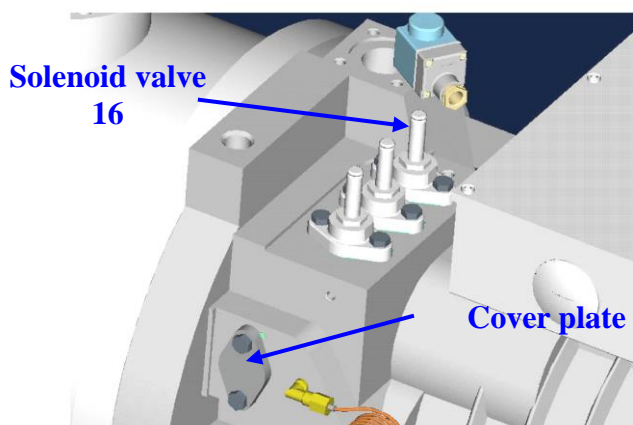


L4 configuration (step)

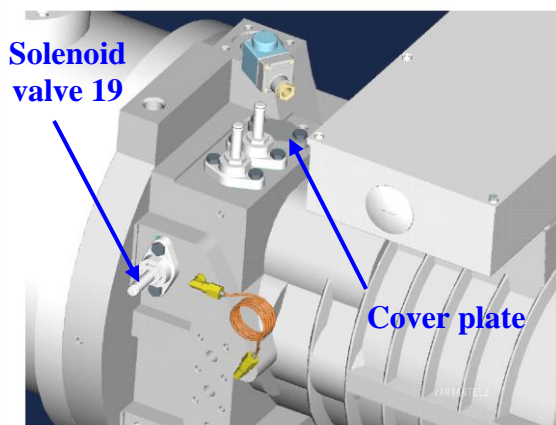


LZ configuration (stepless)

Operating instructions:


- 1- Remove solenoid valve 16 and the cover flange;
- 2- In place of solenoid valve 16, fit the cover flange inserting the gasket -code 592731- included in the conversion KIT;

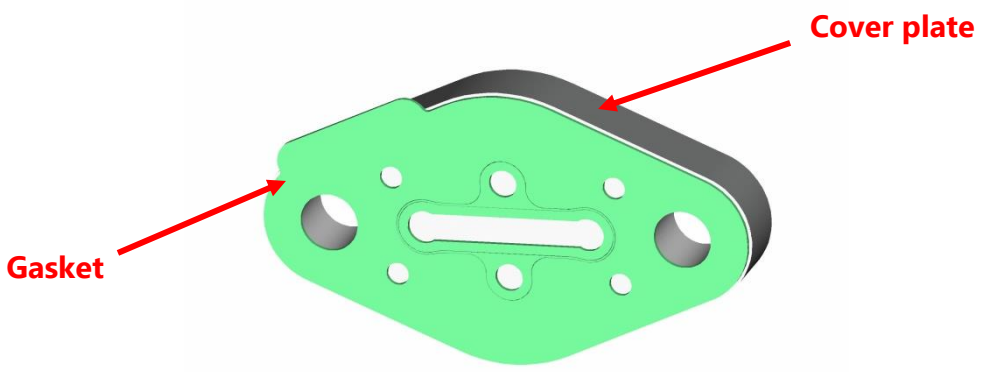


3- Fit the solenoid valve in the new position 19, with the inserted gasket -code 592731- included in the conversion KIT;

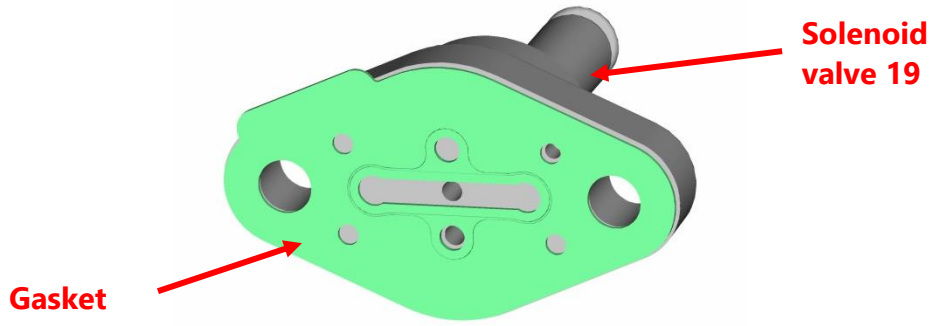


4- Remove solenoid valves 14 and 15 and tighten the two calibrated orifices to the casing;

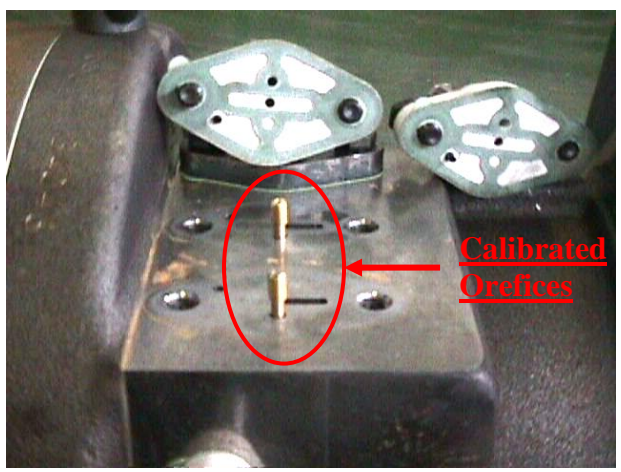

5- Replace solenoid valves 14 and 15 in the same position, inserting the gaskets -code 592731;

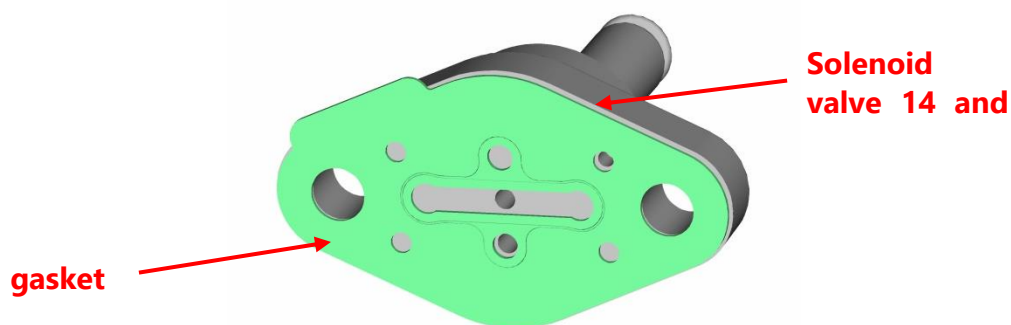

6- Replace the capillary tube with the new one -code 540684- included in the kit;

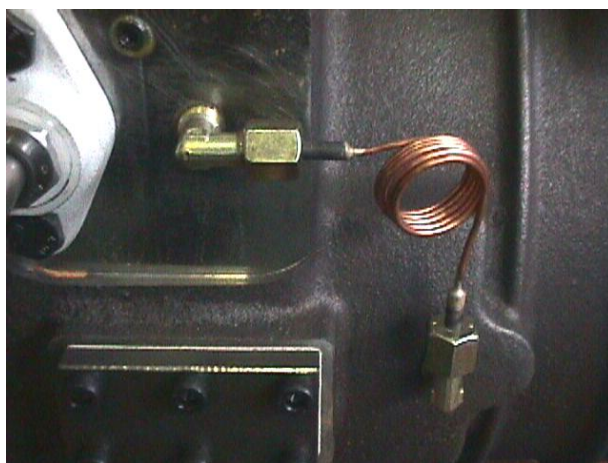


16.1.2 Conversion from INFINITE (LZ) to STEP (L4) capacity control

The special conversion kit (code 303202) is used to perform the conversion from the INFINITE to the STEP configuration.

The kit consists of the following components:

1) N.3 GASKETS for solenoid valves, code 592731

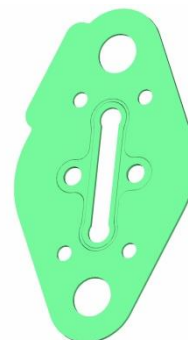

2) N.1 GASKET for solenoid valves, code 592732


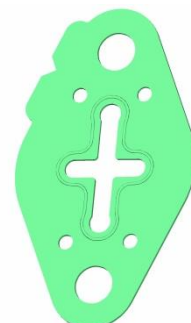


Fig. 37/38/39


- 3) N.1 CAPILLARY tube, complete with nuts, code 540701
NOTE: the capillary tube installed in the "L4" version is larger than the one used in the "LZ" version.



With reference to the pictures of the following page, the conversion from "LZ" to "L4" is performed by changing the position of solenoid valve 19 with the cover flange, now located on top of the compressor, next to the other two solenoid valves. In the L4 configuration, therefore, this solenoid valve will be identified again by the number 16 and the cover flange will return to its original position (19) of the L4 configuration. In addition, replace the capillary tube already installed in the compressor with the new one included in the conversion kit and remove the calibrated orifices. The operating instructions are shown in the following page.

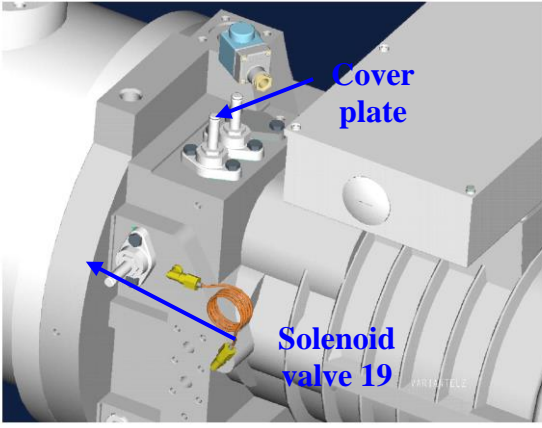


LZ configuration (stepless)

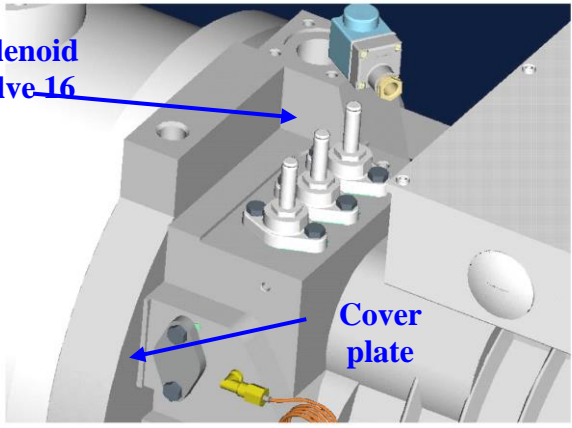


L4 configuration (step)

Operating instructions:

1. Remove solenoid valve 19 and the cover flange;
2. In place of the cover flange, fit the solenoid valve after inserting the gasket -code 592731- included in the conversion kit;

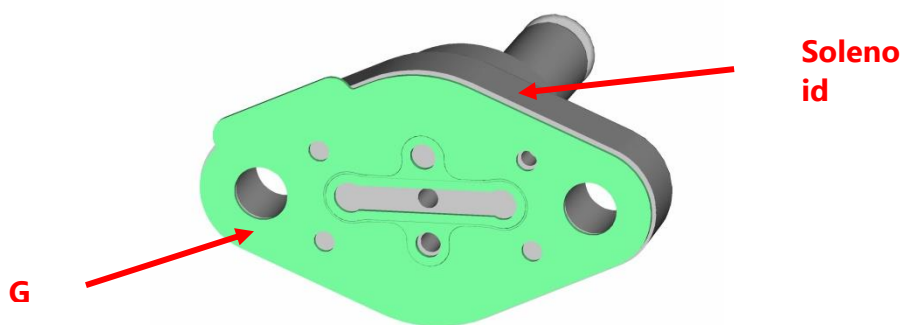


3. In the position 19 fit the cover flange, after inserting the gasket -code 592732- included in the conversion kit;

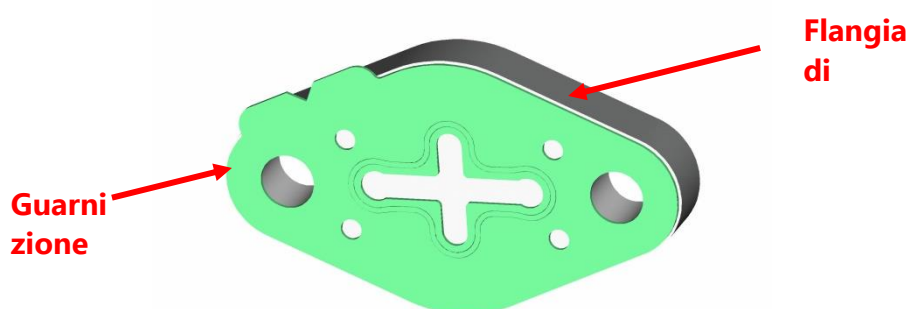


4. Remove the orifices positioned underneath the solenoid valves 14 and 15;



5. Replace the solenoid valves 14 and 15 in their original position, after inserting the gaskets -code 592731;

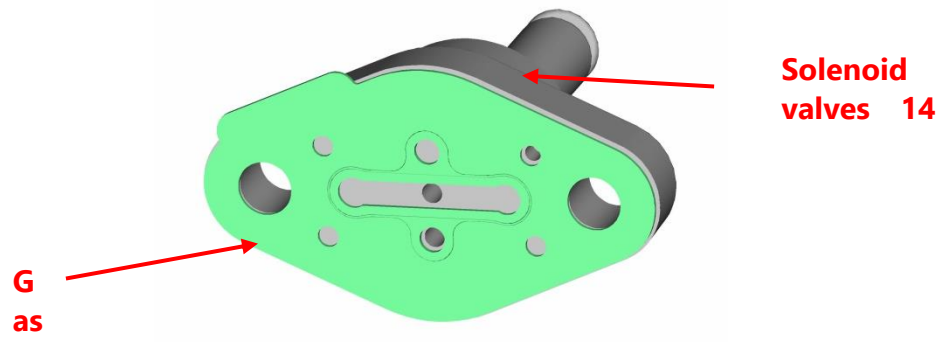

6. Change the capillary tube with the new one -code 540701- included in the conversion kit;

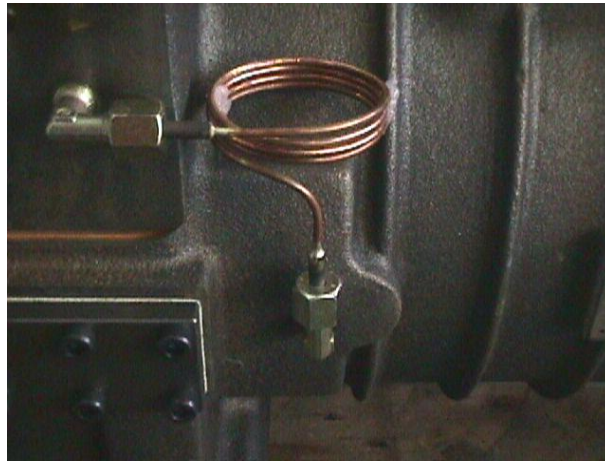

16.2 RW3-H105/115/125, L080/095/105

In the above specified models, the step and stepless configurations can be changed simply by using different special-shape plates, which modify the configuration of the internal oil circuit (see chapter 4: '*Capacity control*', paragraphs 4.2 and 4.3).

Below is a description of the conversion kits and their components.

KIT FOR CONVERTING FROM THE STEP TO THE STEPLESS CONFIGURATION: Code 303559.

Components:

- Code: 519423 "LZ" capacity control plate;
- Code: 585918 capacity control conversion diagram;
- Code: 592731 Solenoid valve gasket;
- Code: 592762 Solenoid valve gasket / capacity control plate;
- Code: 614566 Elastic pin d=3x8 DIN 7346 UNI 68;

KIT FOR CONVERTING FROM THE STEPLESS TO THE STEP CONFIGURATION: Code 303558.

Components:


- Code: 519422 "L4" capacity control plate;
- Code: 585918 capacity control conversion diagram;
- Code: 592731 Solenoid valve gasket;
- Code: 592762 Solenoid valve gasket / capacity control plate;
- Code: 614566 Elastic pin d=3x8 DIN 7346 UNI 68;

The following page reports the necessary instructions and the assembly diagram of the various components required to replace the two plates and perform the conversion.




Attention:

As shown in the following page, the two plates have a different external profile. This means that the type of the applied capacity control can be easily identified all the times.

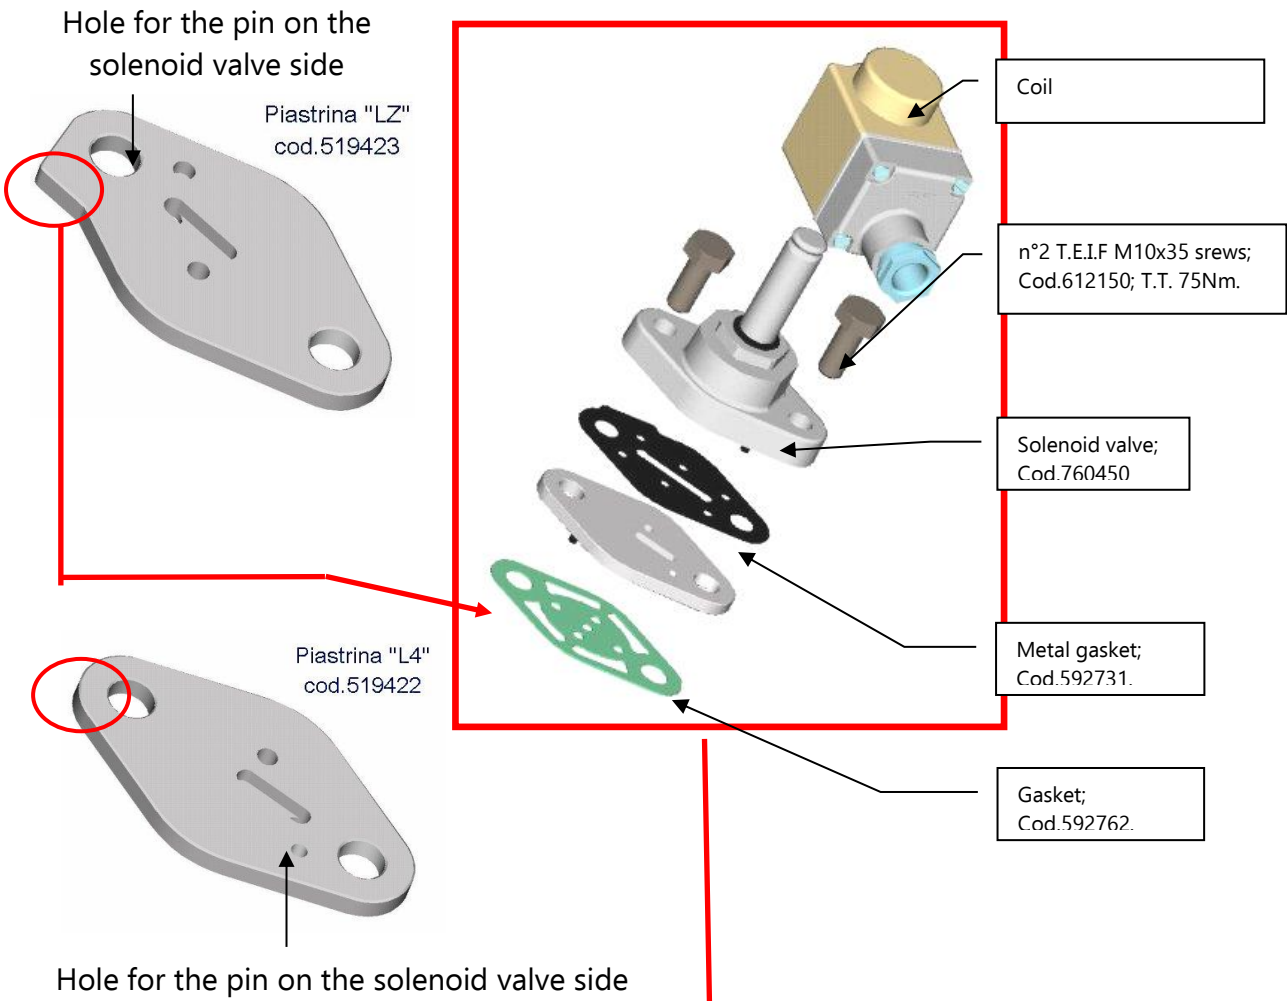

Position of the plate: underneath the solenoid valve (16);

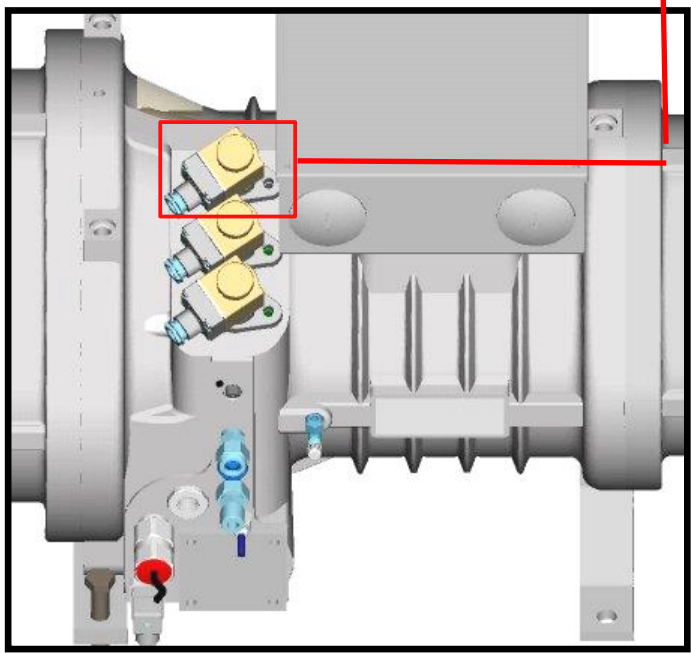

To convert the compressor lay-out from the stepped "L4" to the stepless "LZ" capacity control configuration, replace the plate code 519422 with the plate code 519423. Vice-versa you will perform the opposite switch.

Notes:
Please, install the electro-valve correctly by matching the base plate pin / case hole and electro-valve pin/base plate hole

17 Extent of delivery

The standard delivery includes:

- ✓ Suction shut off valve;
- ✓ Discharge shut off valve;
- ✓ Integrated check valve;
- ✓ Integrated safety relief valve;
- ✓ Steps or stepless capacity control;
- ✓ Electronic module INT 69 SNY (for RW3-H300/H350/H390)
- ✓ 6 thermistors integrated into the motor windings and electronic module INT 69 B2 for motor temperature monitoring;
- ✓ module INT69VS for the oil flow switch monitoring (+ electrolytic condenser);
- ✓ oil return line devices (oil flow switch, fine oil filter, solenoid valve with coil, sight glass);
- ✓ Electrical box with protection class IP54;
- ✓ 400 V \pm 10% - 3 - 50 Hz / 460 V \pm 10% - 3 - 60 Hz motor;
- ✓ Electrical devices 230V/1/50-60 Hz;
- ✓ Nitrogen protective charge;
- ✓ Rubber vibration dampers kit.

Available on demand:

- Electrical motors with special voltage;
- Electrical accessories with voltages different than the standard;
- Liquid injection connection;
- ECO connection with shut-off valve;
- Bridges for direct starting (D.O.L);
- Conversion kit for infinity/step capacity control;
- Discharge gas temperature PTC monitoring sensor.

**SRM Italy Srl**

via E. Majorana,10/12 - 36045 Lonigo (VI) - Italy

tel/fax.: +39 0444 726726

info@srmtec.it

www.srmtec.it